
RB10

ROCWARE®

20MP UHD ALL-IN-ONE USB Video Bar

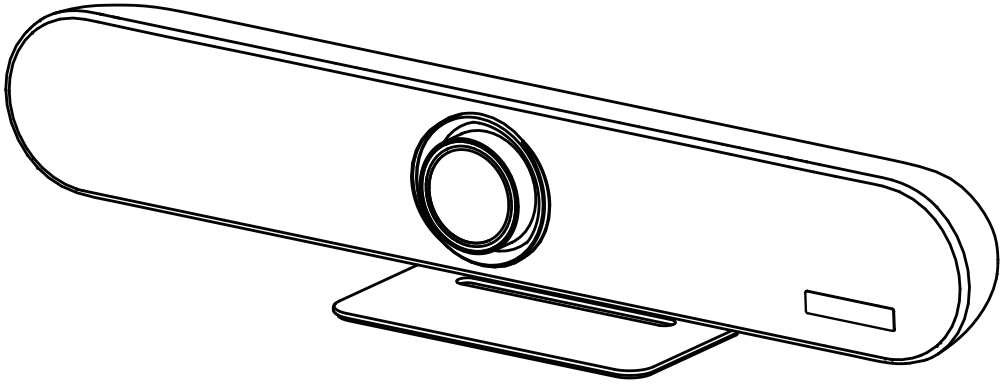

Quick Start Guide

English | Italiano | Español | Français | العربية


Pack List

IT: Elenco Imballaggio


ES: Lista de Embalaje


FR: Liste de Box


AR: قائمة التعبئة

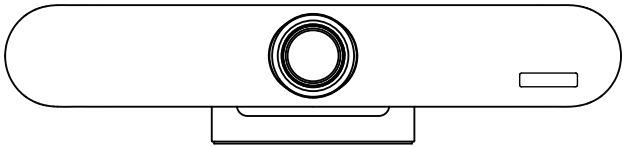



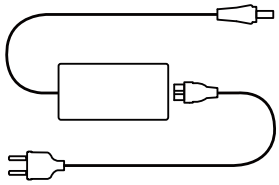

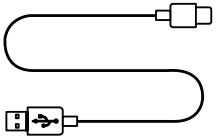

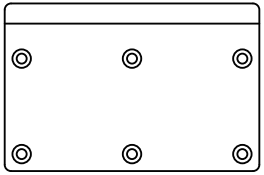




Front View

IT: Vista Frontale

ES: Vista Frontal

FR: Vue Avant

AR: عرض أمامي

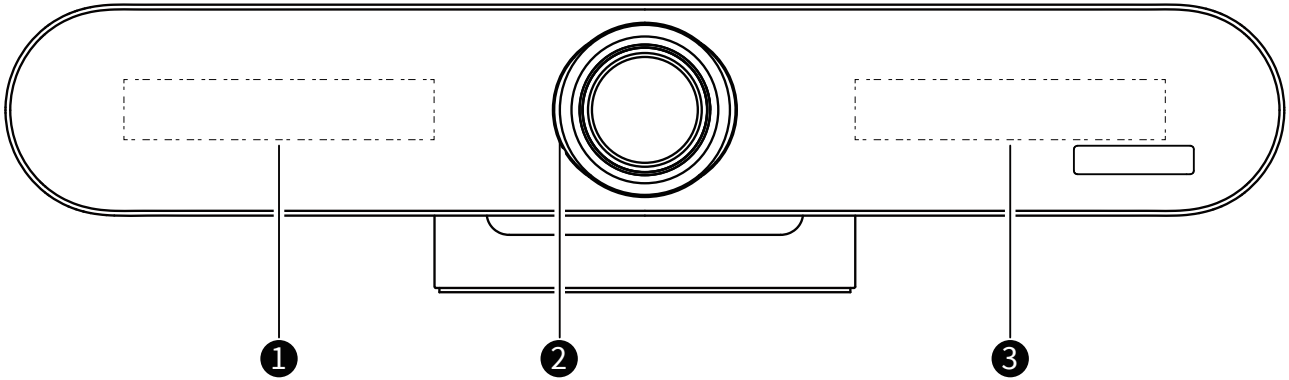

1. Loudspeaker

IT: 1. Altoparlante

ES: 1. Altavoz

FR: 1. Haut-parleur

AR: 1. تكبر صوت

2. Status Indicator

2. Indicatore di stato

2. Indicador de estado

2. Indicateur de statut

2. مؤشر الحالة

3. Microphone Array

3. Array di microfoni


3. Array de micrófonos

3. Matrice de microphones

3. مصفوفة ميكروفونات

Back View

IT: Vista Posteriore ES: Vista Posterior FR: Vue Arrière AR: عرض خلفي

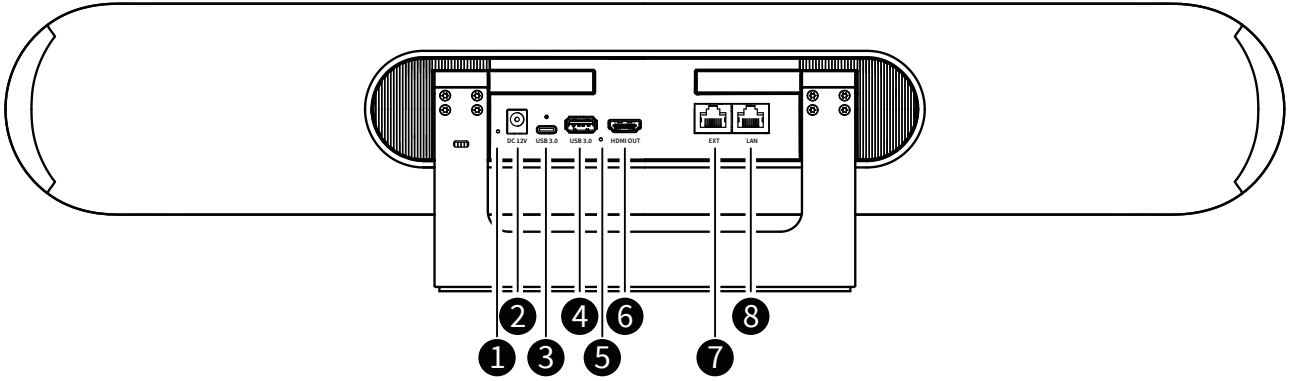

1. Burning Port 2. DC 12V Interface 3. USB 3.0 Type-C Interface 4. USB 3.0 Type-A Interface
5. Reset Port 6. HDMI OUT Interface 7. EXT Interface 8. LAN Interface

IT: 1. Porta di Programmazione 2. Interfaccia DC 12V 3. Interfaccia USB 3.0 Tipo-C 4. Interfaccia USB 3.0 Tipo-A
5. Porta di Ripristino 6. Interfaccia HDMI OUT 7. Interfaccia EXT 8. Interfaccia LAN

ES: 1. Puerto de Programación 2. Interfaz DC 12V 3. Interfaz USB 3.0 Tipo-C 4. Interfaz USB 3.0 Tipo-A
5. Puerto de Reinicio 6. Interfaz HDMI OUT 7. Interfaz EXT 8. Interfaz LAN


FR: 1. Port de Programmation 2. Interface DC 12V 3. Interface USB 3.0 Type-C 4. Interface USB 3.0 Type-A
5. Port de Réinitialisation 6. Interface HDMI OUT 7. Interface EXT 8. Interface LAN

AR: 1. منفذ برمجة 2. واجهة DC 12V 3. واجهة USB 3.0 Type-C 4. واجهة USB 3.0 Type-A
5. منفذ إعادة تعيين 6. واجهة HDMI OUT 7. واجهة EXT 8. واجهة LAN

Dimension

IT: Dimensioni ES: Dimensiones FR: Dimensions AR: عاألبعاد

Unit: mm
IT: Unità: mm
ES: Unidad: mm
FR: Unité : mm
AR: مم :ةدحو

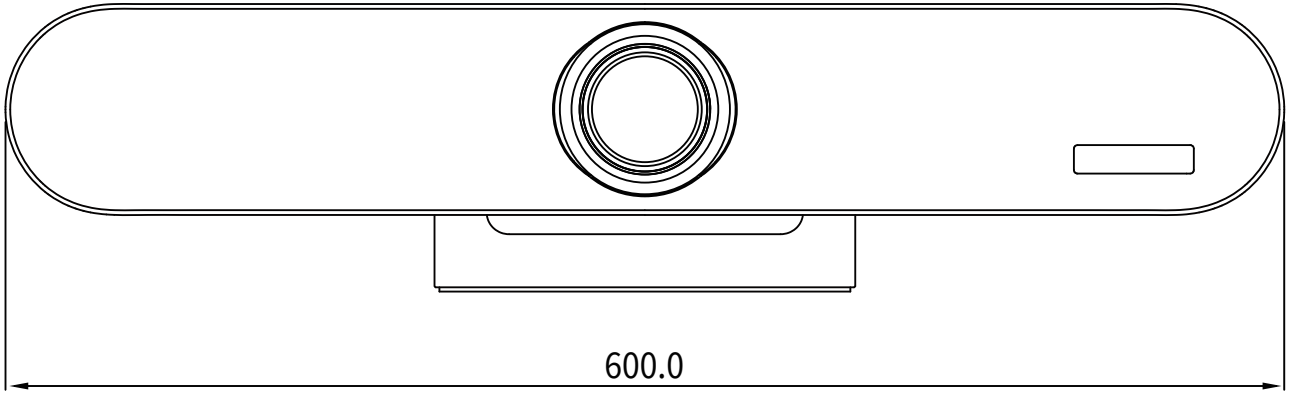

Dimension


IT: Dimensioni

ES: Dimensiones

FR: Dimensions


AR: داعألاب عا

Unit: mm
IT: Unità: mm
ES: Unidad: mm
FR: Unité : mm
AR: مم :ةدحو

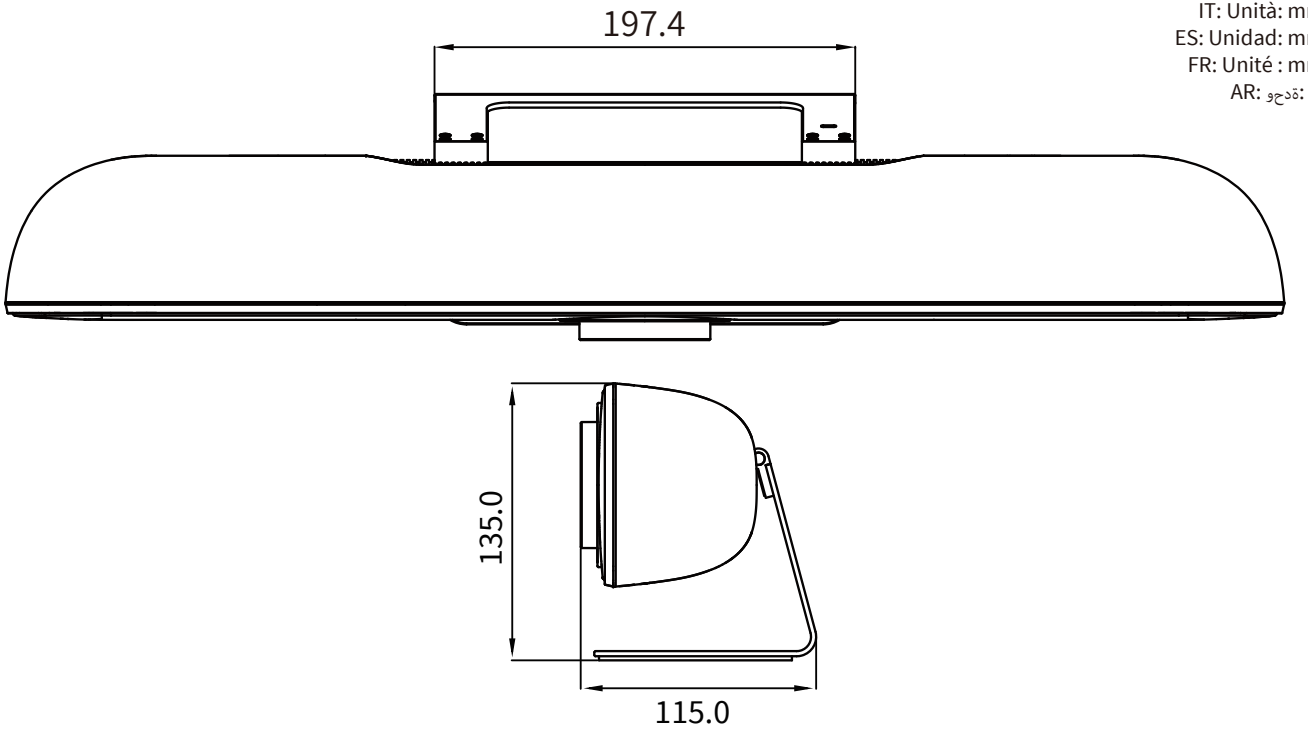

Monitor Mount

IT: Supporto per Monitor ES: Montaje para Monitor FR: Support de Moniteur AR: حامل الشاشة

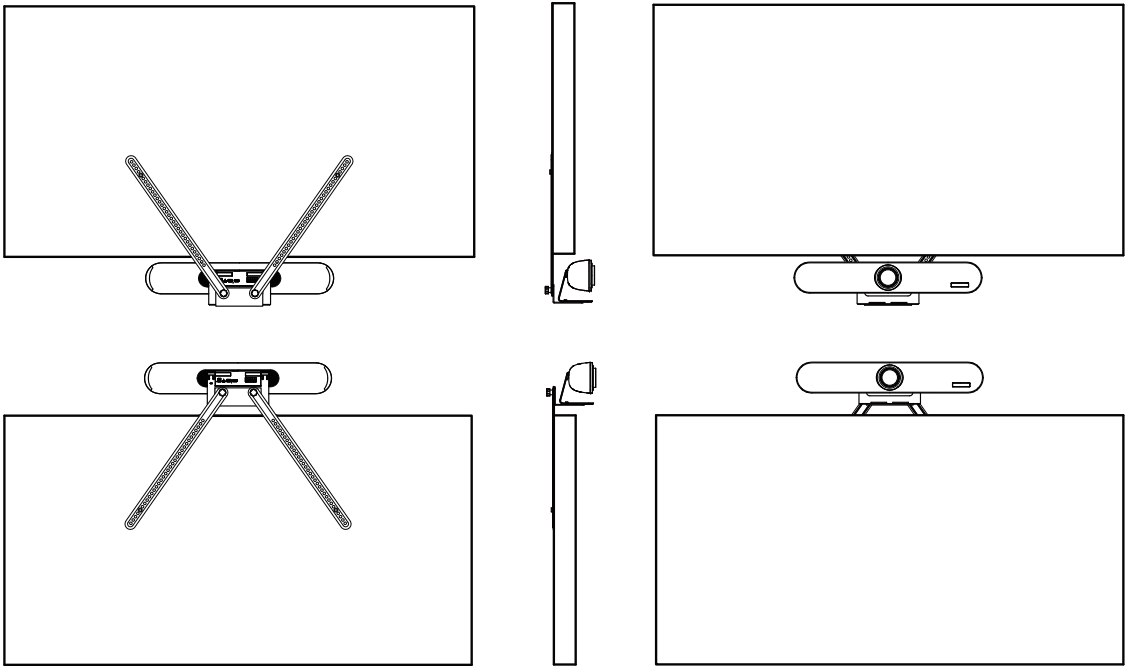

* Monitor bracket not included

IT: Supporto per monitor non incluso ES: Soporte para monitor no incluido FR: Support de moniteur non inclus AR: الحامل للشاشة غير مدرج


Wall Mount

IT: Montaggio Parete

ES: Instalación de Pared


FR: Le Chargement de Paroi

AR: تركيب على الحائط

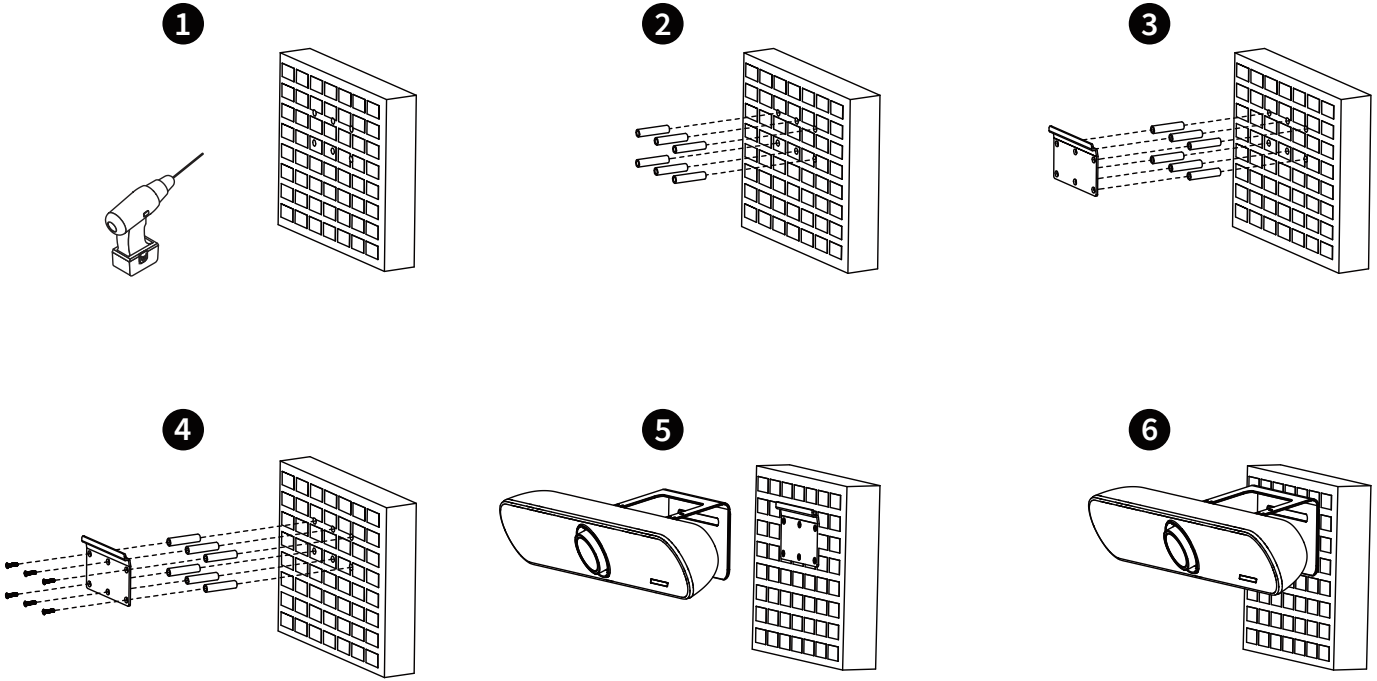

Cabling


IT: Cablaggio ES: Cableado FR: Câblage AR: تمديد الكوابل

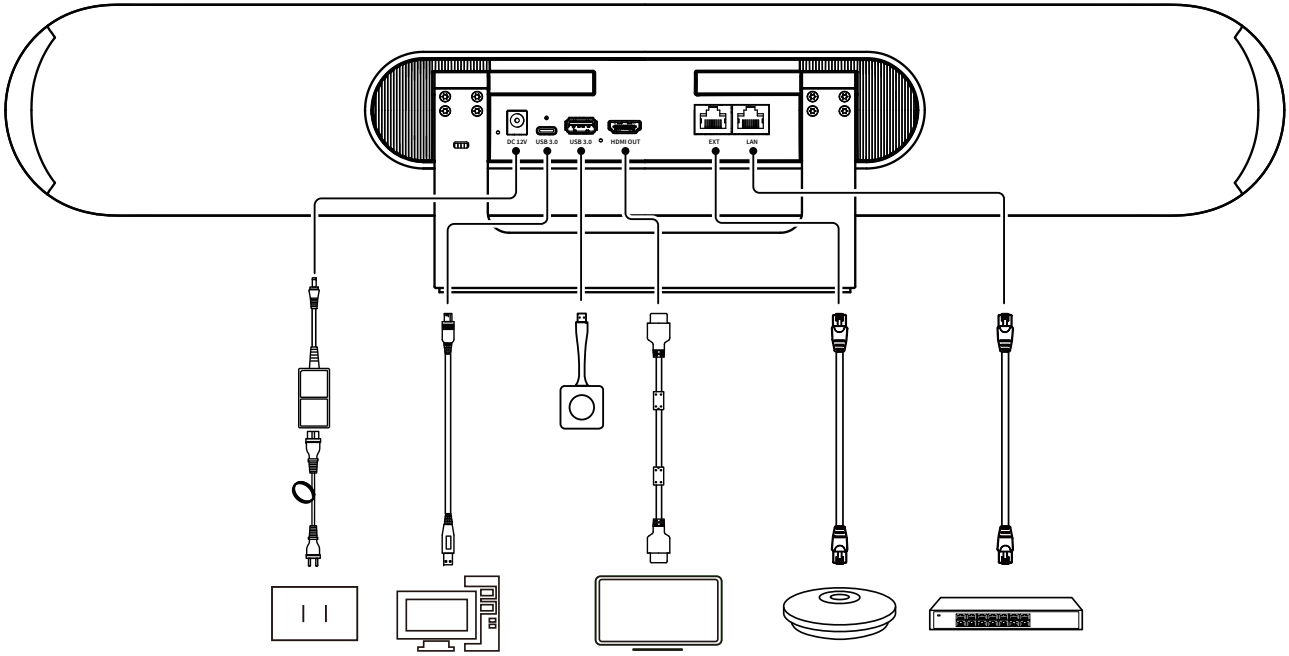

Note The recommended horizontal cascade distance is 3 meters, and the maximum number of cascades is 3. (Reserved, supported after future software upgrades).

Remote Control

IT: Telecomando ES: Control remoto FR: Télécommande AR: جهاز التحكم عن بعد

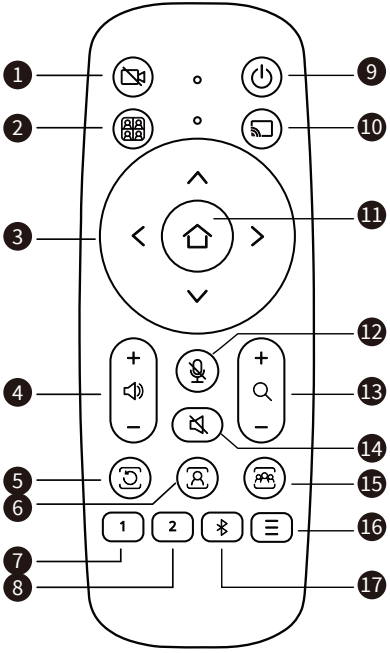

No.	Name	Description
1	Camera On/Off Key	Turn On/Off the Camera
2	Smart Gallery Key	Press to turn on the Smart Gallery function
3	Direction Keys	● Menu Mode: Press to select and set the Menu ● Non Menu Mode: Press to move the Camera to Up/Down/ Left/Right direction
4	Volume +/- Keys	Press to increase or decrease the volume
5	Exit Key	● Menu Mode: Press to return to the previous menu ● Non Menu Mode: Press to exit the AI mode
6	Speaker Track Key	Press to turn on the Speaker Track function
7	Preset 1 Key	Long press to set preset 1; Short press to call preset 1
8	Preset 2 Key	Long press to set preset 2; Short press to call preset 2
9	Standby Key	Short press to enter/exit the standby mode
10	Wireless Projection Key	Reserved, supported after future software upgrades
11	OK Key	● Menu Mode: Confirm selection ● Non Menu Mode: Press to turn the camera back to the HOME position
12	Microphone Mute Key	Turn on/off the Microphone
13	Zoom Keys	Zoom in [+]; Zoom out [-]
14	Speaker Mute Key	Turn on/off the Speaker
15	Auto Frame Key	Press to turn on the Auto Frame function
16	Menu Key	Press to enter or exit the OSD menu
17	Bluetooth Key	Reserved, supported after future software upgrades

Warranty & Copyright

IT: Garanzia e Copyright ES: Garantía y Derechos de Autor FR: Garantie et Droit d’Auteur AR: الضمان وحقوق النشر

EN: If failure caused by non-human causes occurs within three years from the product’s purchase date, you may enjoy the warranty service of the product.
Copyright © ROCWARE 2024. All rights reserved.

IT: Se si verifica un guasto causato da cause non umane entro tre anni dalla data di acquisto del prodotto, è possibile usufruire del servizio di garanzia del prodotto.
Copyright © ROCWARE 2024. Tutti i diritti riservati.

ES: Si una falla causada por causas no humanas ocurre dentro de tres años desde la fecha de compra del producto, puede disfrutar del servicio de garantía del producto.
Derechos de autor © ROCWARE 2024. Todos los derechos reservados.

FR: Si une défaillance due à des causes non humaines survient dans les trois ans suivant la date d'achat du produit, vous pouvez bénéficier du service de garantie du produit.
Copyright © ROCWARE 2024. Tous droits réservés.

AR: إذا حدث عطل بسبب أسباب غير بشرية خلال ثلاث سنوات من تاريخ شراء المنتج، يمكنك الاستفادة من خدمة الضمان للمنتج.
حقوق الطبع والنشر © ROCWARE 2024. جميع الحقوق محفوظة.

ROCWARE®

Rocware Corporation

3-1, No.2 Honghui Industrial Park, Xin'an Street,
Bao'an District, Shenzhen, China
www.rocware.com

User Manual

Part No.
079.79.11010184_V2.0