
RC841UX

ROCWARE®

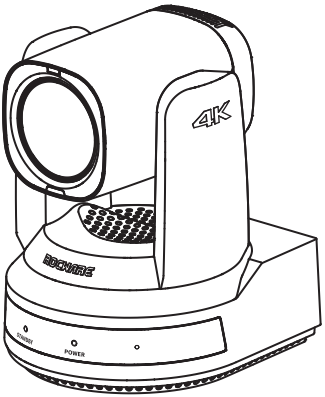

https://qr1.be/5XEB

SCAN ME with Google


For User Manual of the Camera

4K Video Conferencing PTZ Camera

Please visit: www.rocware.com/pages/rc841ux to learn more (including user manual, software download etc.)

Setup Guide

Step 1 Connect the camera to the network using the network cable, switch or router.

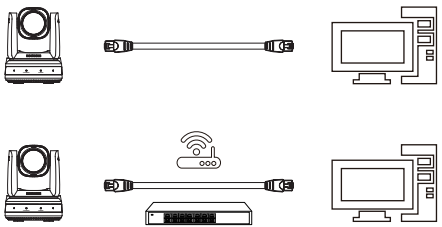


Step 2 Check the default IP address, username and password on the camera's label.

Step 3 Visit the VLC website (http://www.videolan.org/vlc/) to download and install the VLC media player.

Step 4 Click “Media > Open Network Stream”.

Step 5 Enter the URL to stream via VLC.

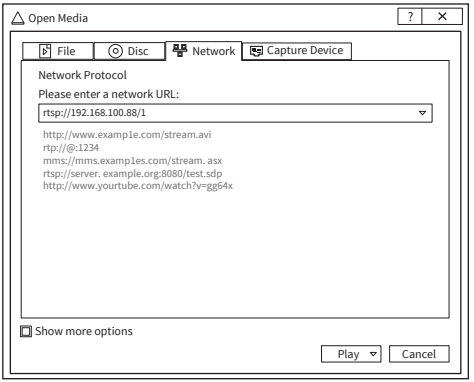

Step 6 Please visit the web settings page for more settings .

Note

- rtsp://ip: port number/1 (First Stream);
- rtsp://ip: port number/2 (Second Stream);
- When the rtsp is the default value of 554, the port number can be omitted.

Part No.
079.79.11010060