HANGING BRACKET

Installation manual





SF-32WF-HB
SF-43WF-HB
SF-49WF-HB
SF-55WF-HB
SF-65WF-HB
SF-75WF-HB
SF-86WF-HB

Before installation and use, please read this manual carefully to ensure proper use. is recommended to keep this manual for future use. The pictures in this manual are for reference only.

Installation Steps







Step 1： Drill mounting holes.

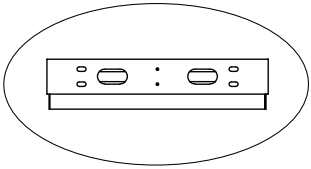

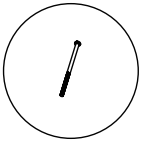

M8 screws


- Drill the M8 expansion screw holes according to the corresponding expansion screw hole.

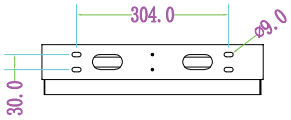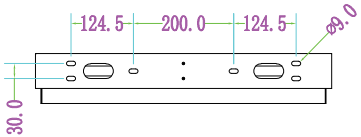	Size of the center distance between expansion screw holes for SF-32WF-HB
	Size of the center distance between expansion screw holes for SF-43WF-HB
	Size of the center distance between expansion screw holes for SF-49WF-HB
	Size of the center distance between expansion screw holes for SF-55WF-HB
	Size of the center distance between expansion screw holes for SF-65WF-HB
	Size of the center distance between expansion screw holes for SF-75WF-HB
	Size of the center distance between expansion screw holes for SF-86WF-HB

Installation Steps

Step 2: Install the square frame and power cable.


- Insert the power cable into the bore and slide it to the end.

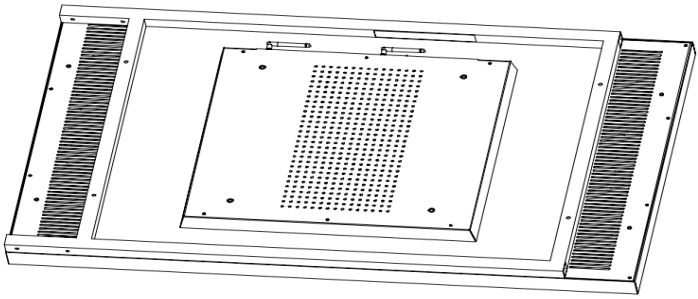

- Install and fix the square frame to the monitor with M6 screws.


Step 3: Install base beams.

- Insert the power cable into the beam base through the square tube.

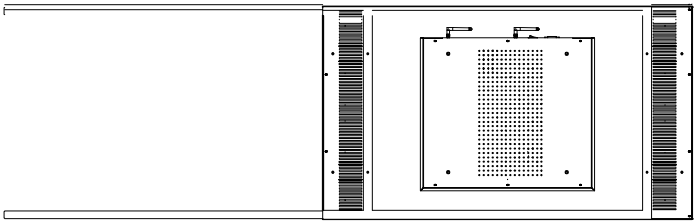


- Fix the square tube with M6 screws (x5) and nuts.

Step 4: Connect the power cable and install the top cover box.

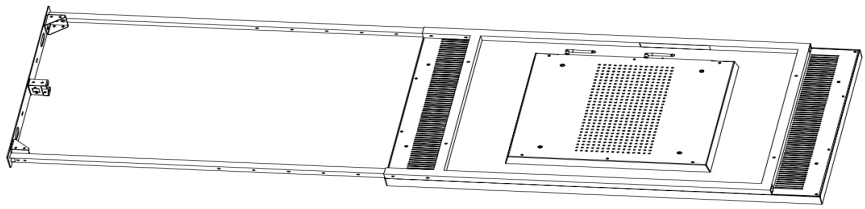


Installation Steps

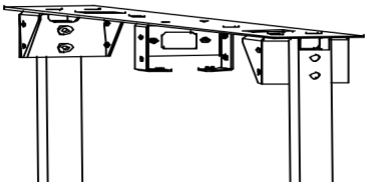

- Route the power cable through the bore and connected to the quick connector.

- Fix the top cover to the square with M6 screws.


Step 5: Install the monitor.

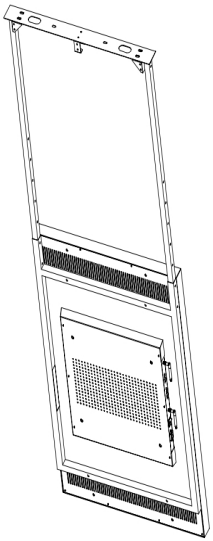

- Secure the monitor with M8 expansion screws and nuts Into the hole in the ceiling.

Installation Steps


Step 6: Install hanger cover box.

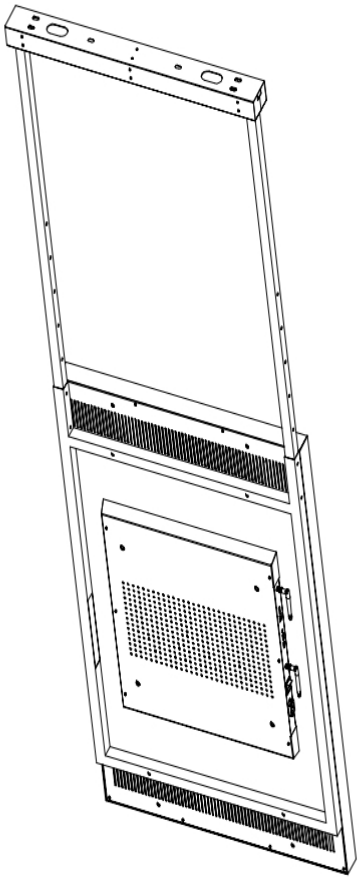


- Secure the cover box with M3 screws.

Dimensions

SF-32WF-HB

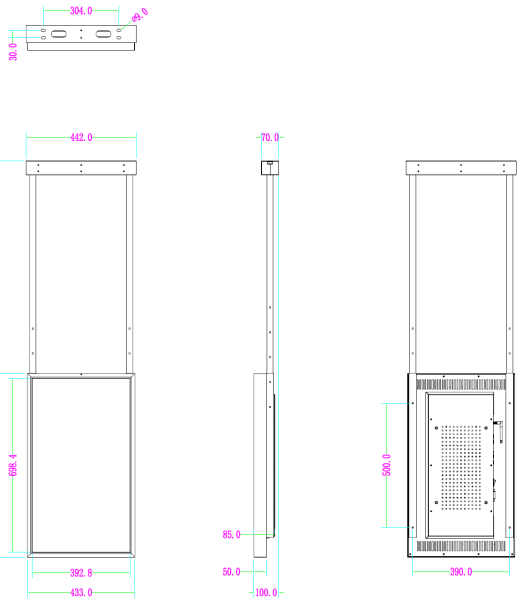


SF-43WF-HB

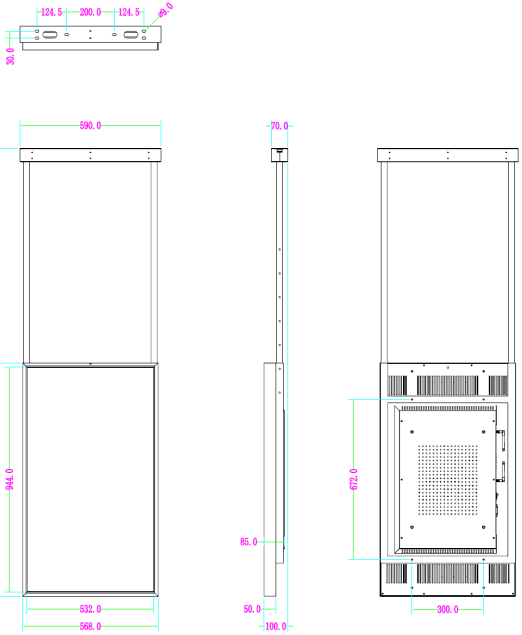


Dimensions

SF-49WF-HB

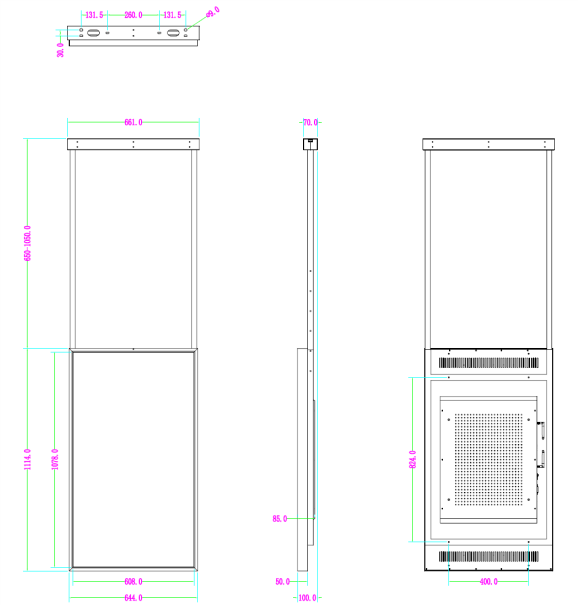



SF-55WF-HB

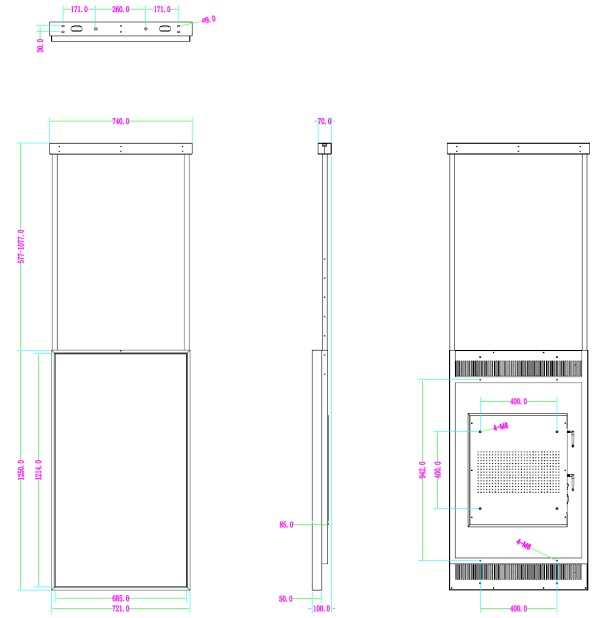


Dimensions


SF-65WF-HB



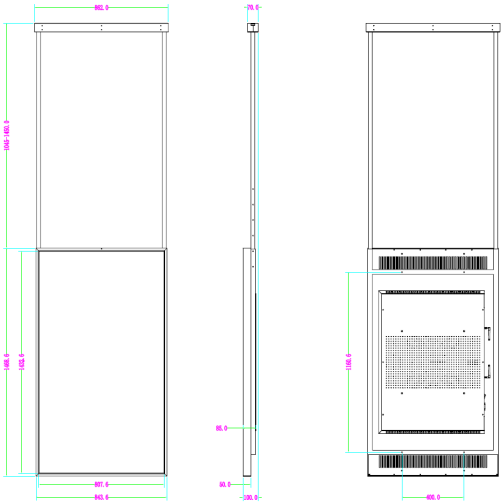

SF-75WF-HB



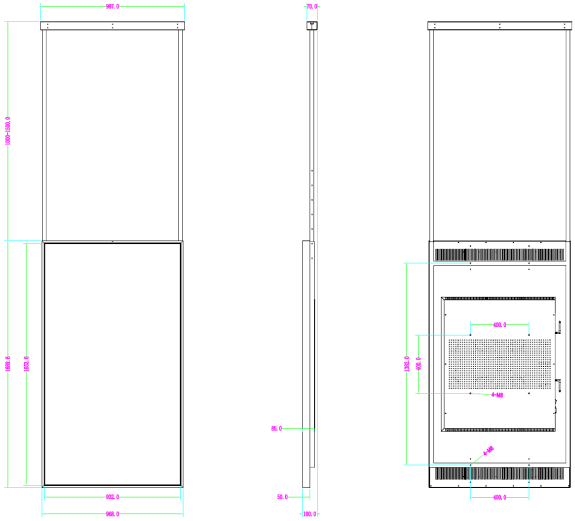

Dimensions

SF-86WF-HB

