
Checking the Battery Level



1. Trickle–Charging Mode
2. Recharging
3. Remaining Battery Percentage


Charging Your Devices

Charge your phones and tablets via USB ports.

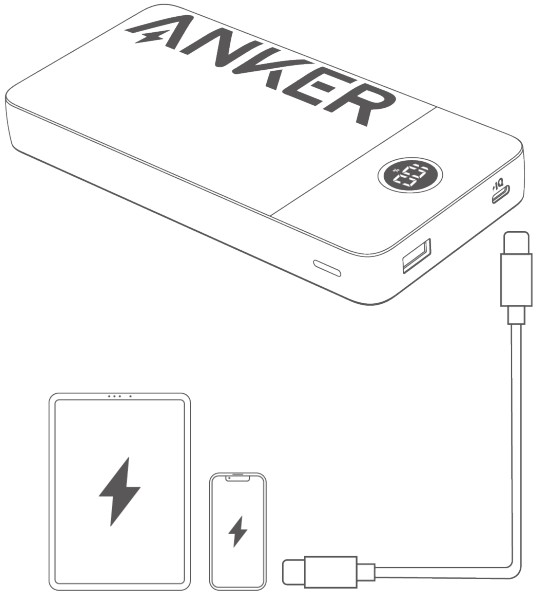


Recharging Your Power Bank

Recharge the power bank via the USB–C port.

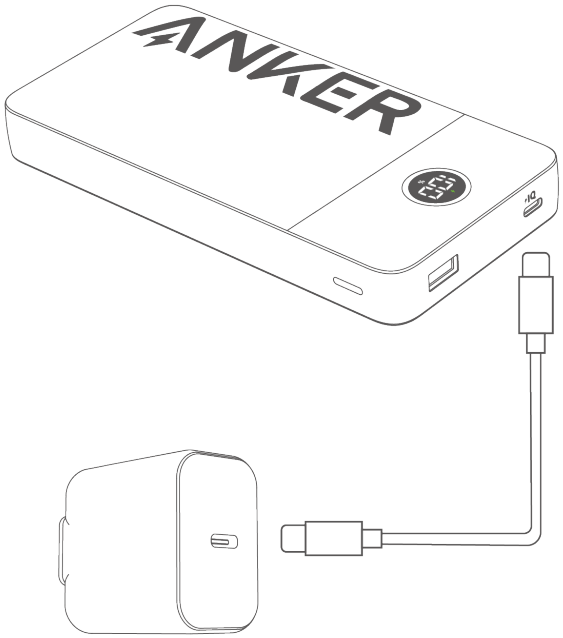


Trickle–Charging Mode


1. Activate trickle–charging mode.

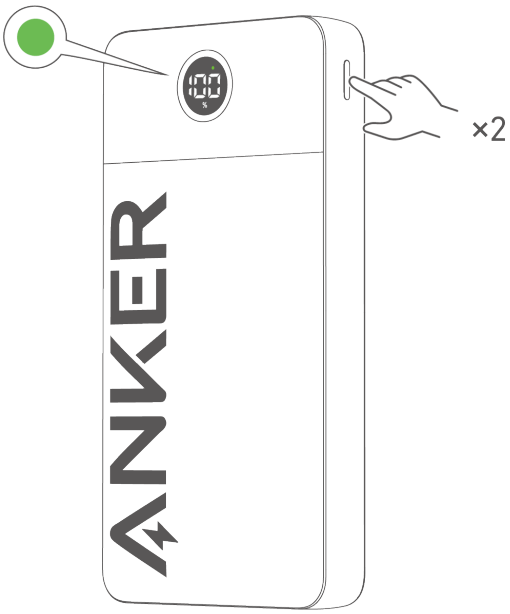

2. Charge your earbuds or other low–power devices using trickle–charging mode.

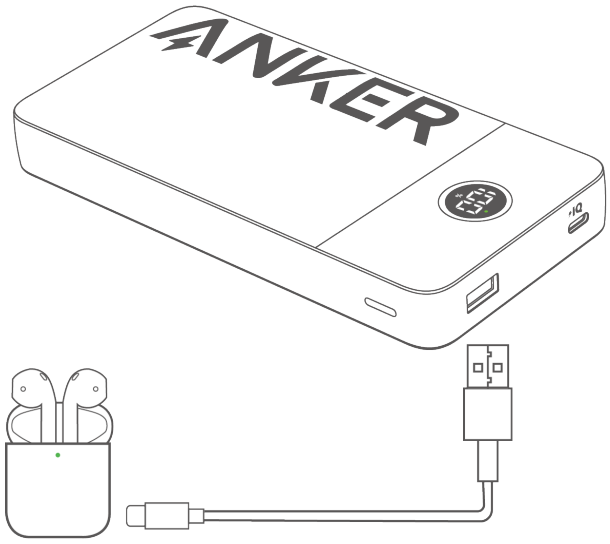

3. Exit trickle-charging mode.

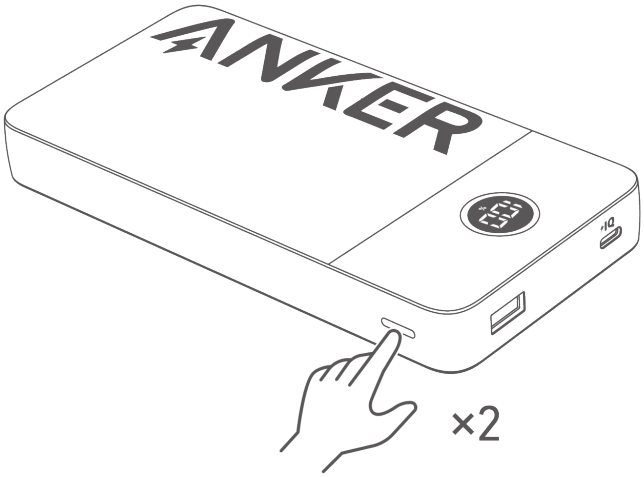

Specifications

Cell Capacity	20,000mAh
USB-C Input	5V ⎓ 3A
USB-C Output	5V ⎓ 3A
USB-A Output	5V ⎓ 2.4A
Total Output	5V ⎓ 3A