
01-1 SIDEBAR

Full-channel display of bitateral sidebar

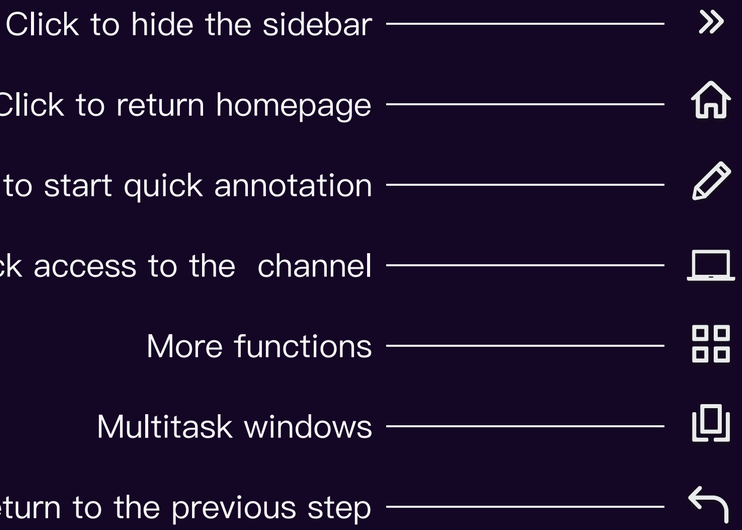



01–2 CONTROL CENTER

Full channel dual side sidebar

Show time information


Quickly launch commonly used applications or functions

Customize quick launch applications or functions

Wireless network, Bluetooth, assistance button, light sensing function switches


Drag the progress bar to adjust the device brightness

Drag the progress bar to adjust the device volume

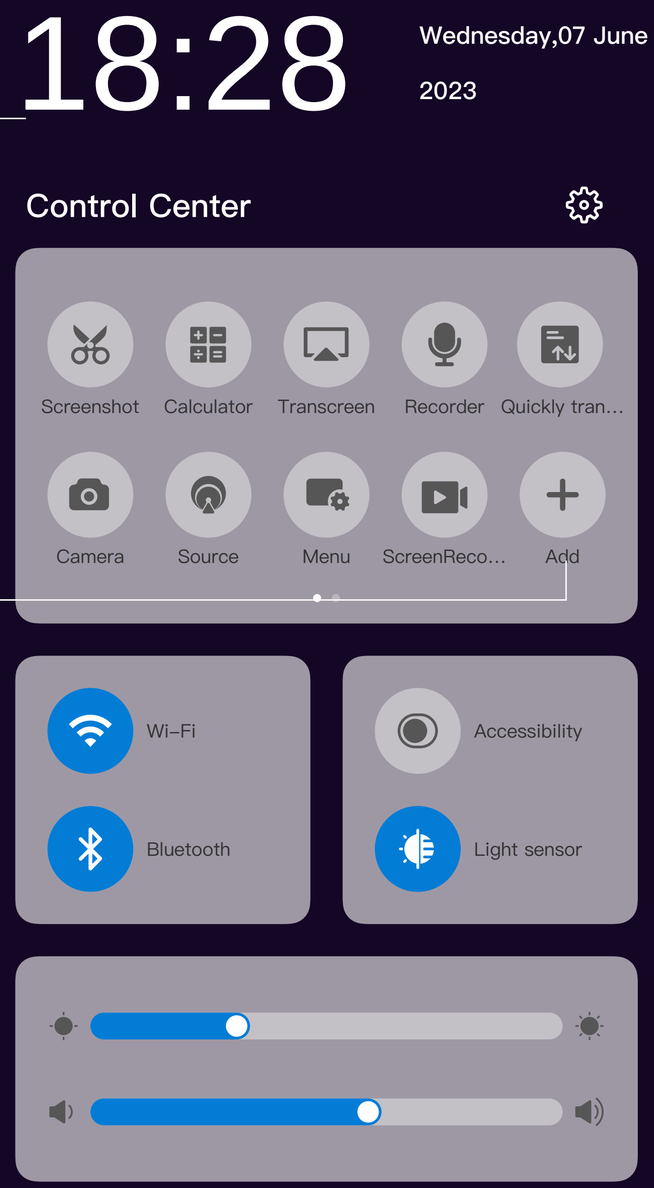

02–1 OSD MENU

Image

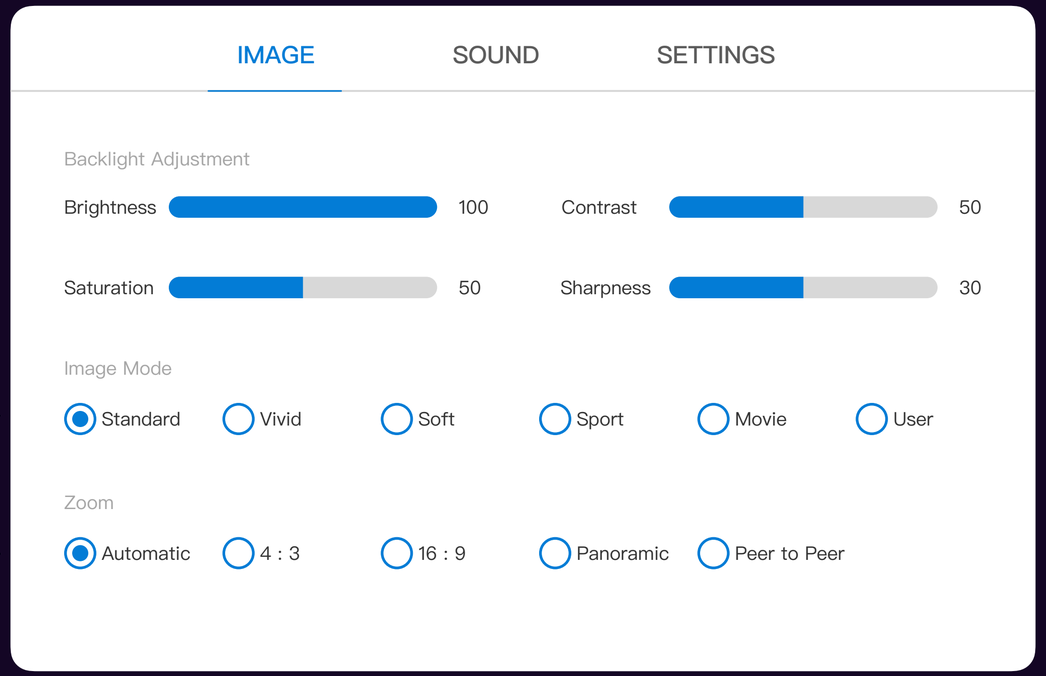

Click the button to switch the image mode


Click the button to switch preset screen ratio

02-2 OSD MENU

Sound

swipe to increase/decrease volume


Click the button to switch
Preset sound mode

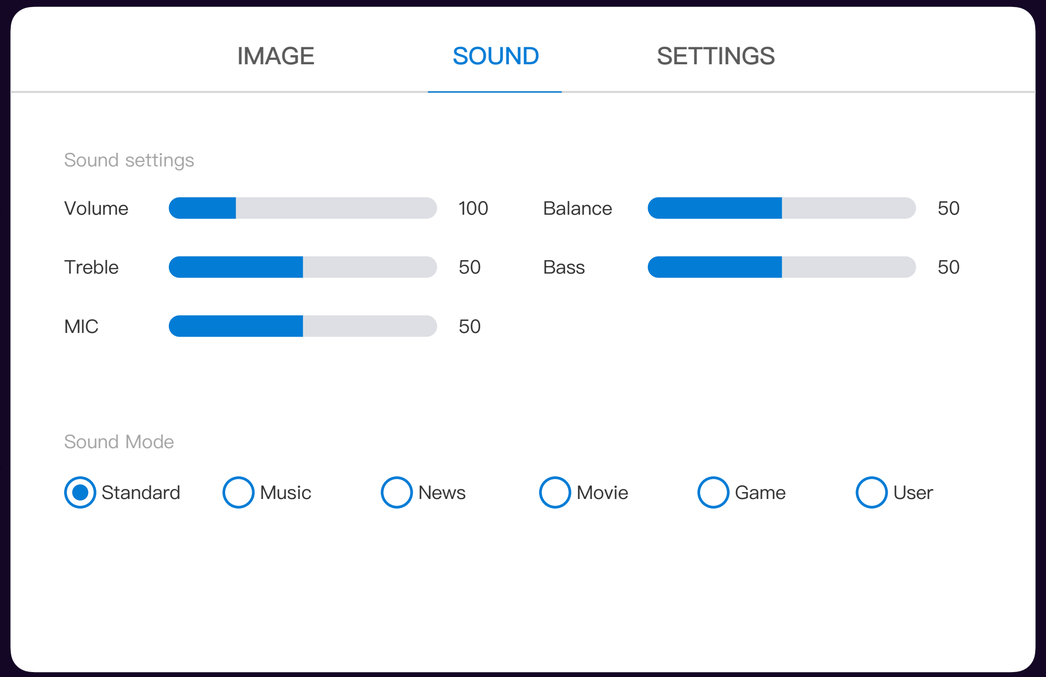

02-3 OSD MENU

Settings

HDMI EDID Version
1. HDMI 1.4
Support up to 4K 30HZ input
2. HDMI 2.0
Support Up to 4K 60HZ input

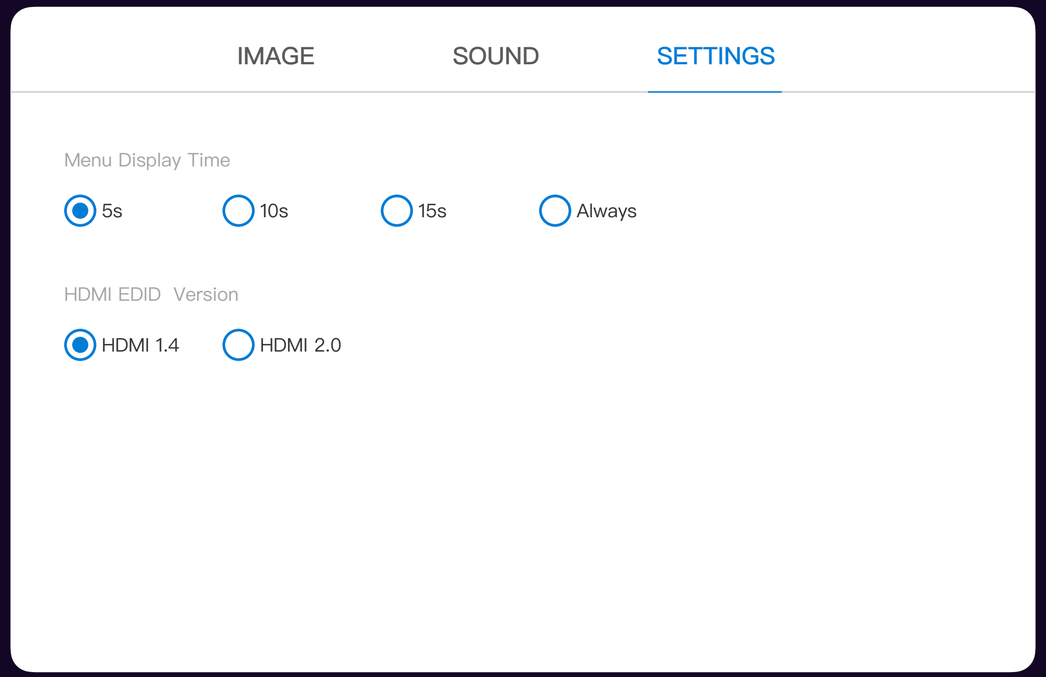

03 APP STORE

Provide common android applications

Office



Microsoft Word

Efficient office

Version 16.0.10730.20043

Install



Microsoft Excel

Efficient office

Version 16.0.10730.20043

Install



Microsoft PowerPoint


Efficient office

Version 16.0.10730.20043

Upgrade


04-1 ANNOTATION WHITEBOARD

Annotation software with simple and quick operation

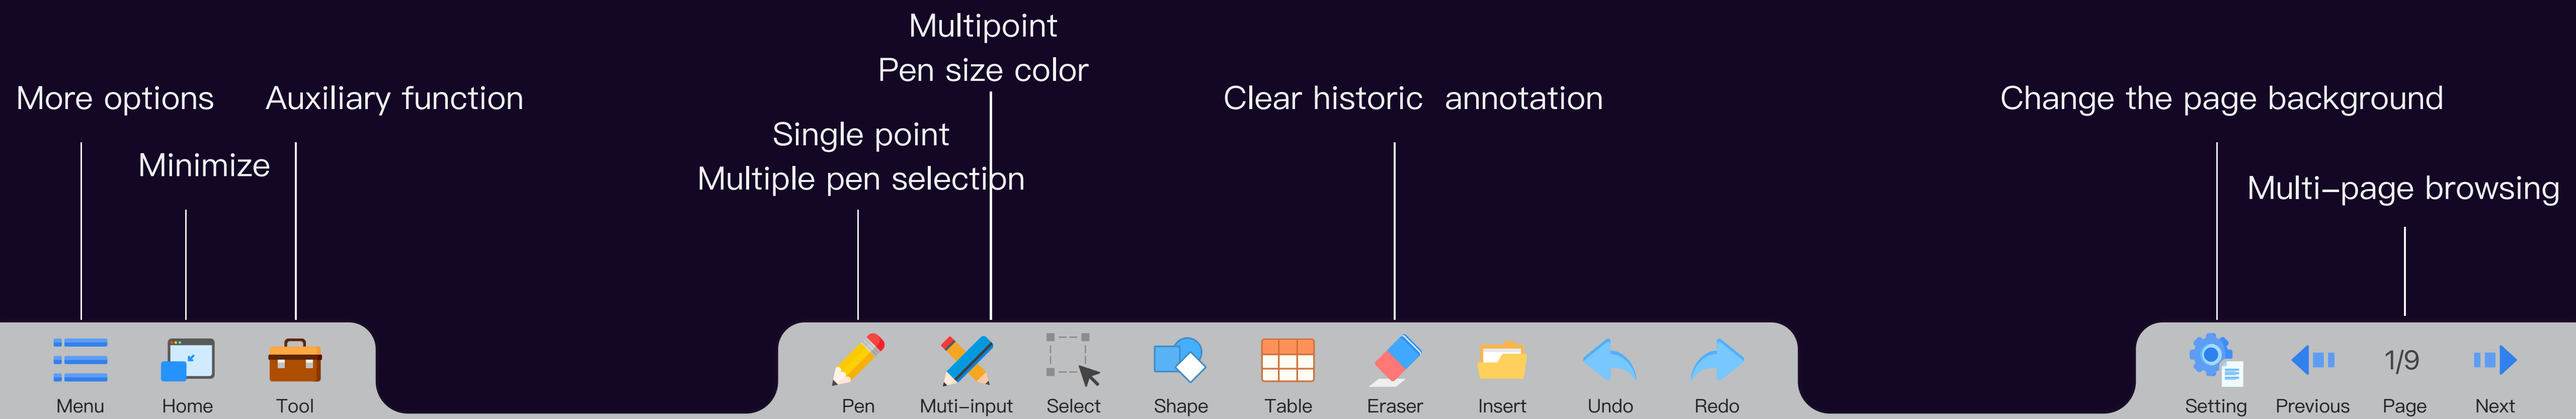


04-2 ANNOTATION WHITEBOARD

Menu & Toolbox

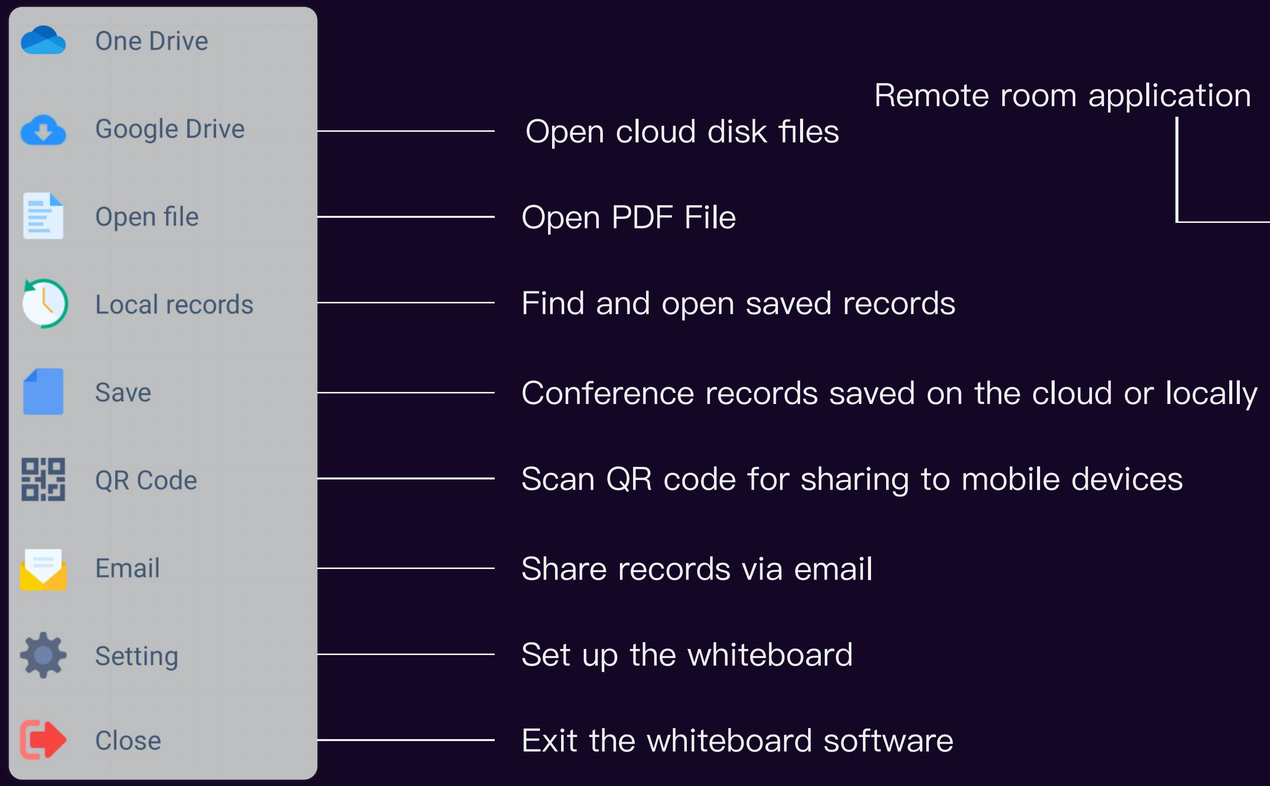

Remote room application

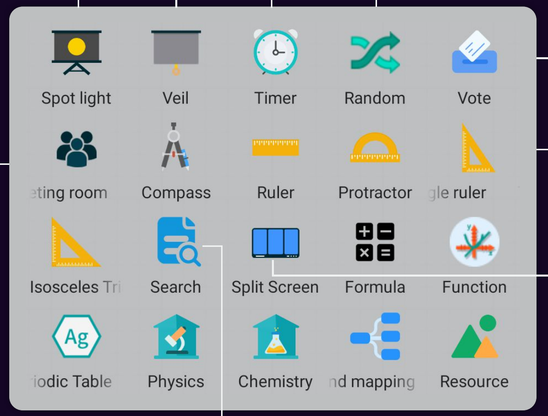

Focus at a specific position on the screen

Shade current page

Timer/Coutdown

Random Arabic Arabic numerals

Apply to voting in meetings or classrooms


Measure the length or draw a straight line

Multi-screen writing

Insert search images into the annotation whiteboard


04-3 ANNOTATION WHITEBOARD

Pen & Eraser

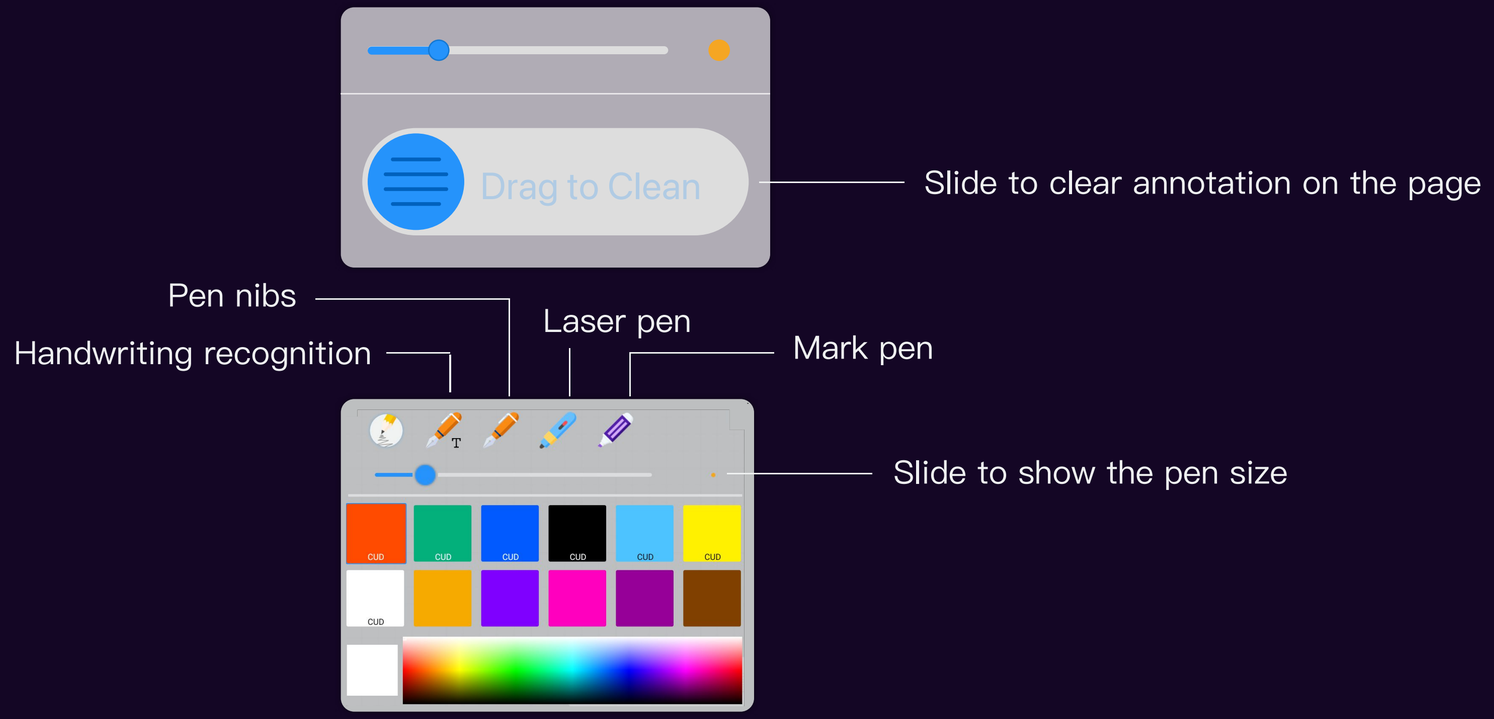


04-4 ANNOTATION WHITEBOARD

Page Settings

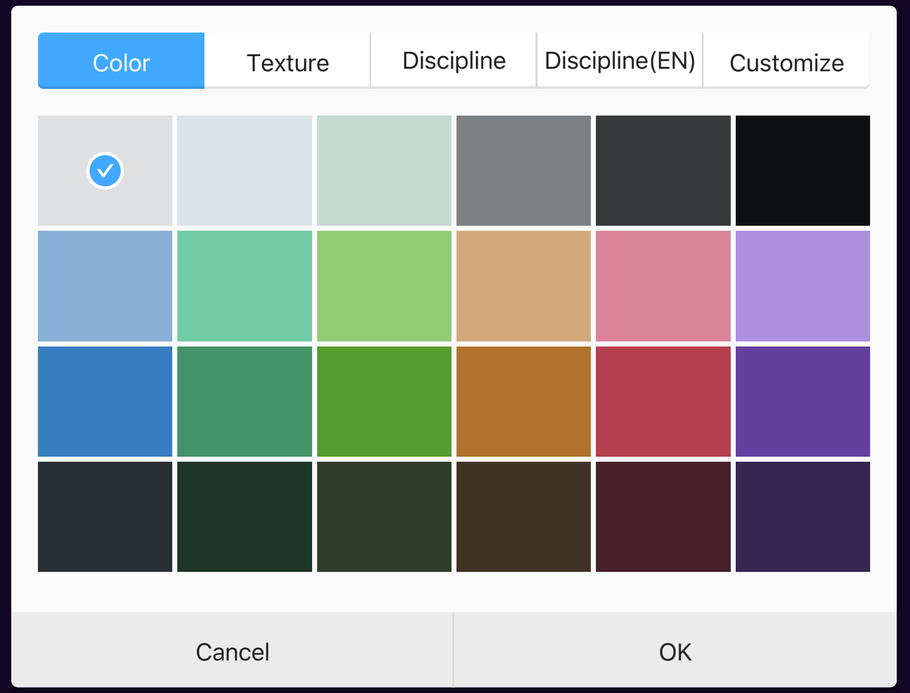

New page

Delete the current page

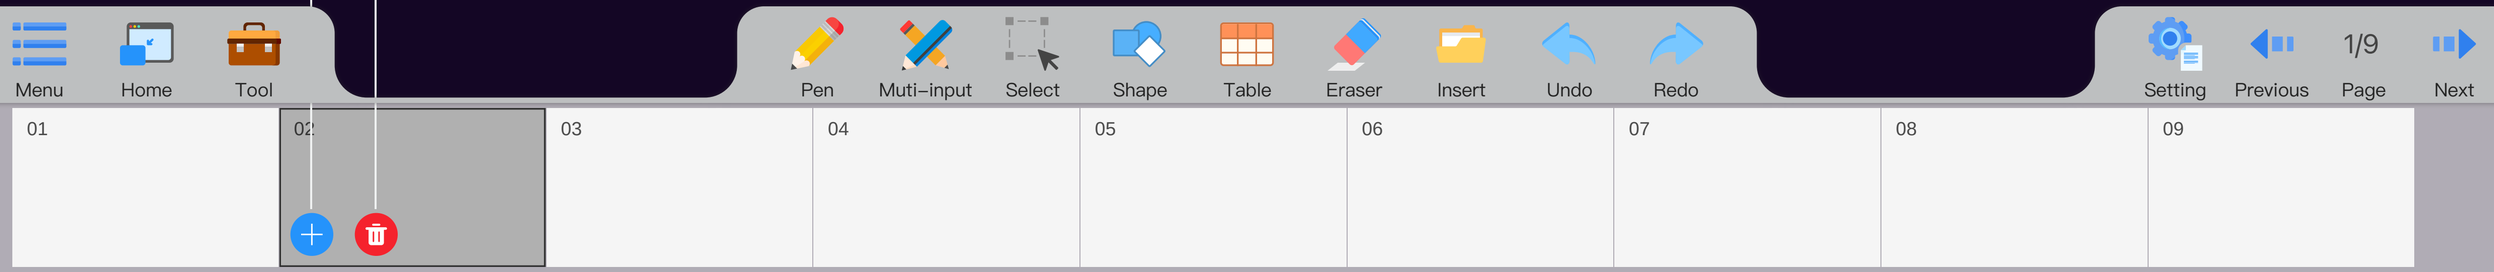


Owner
System User

Screencast Code : 916515


05–1 HOME

Business Theme

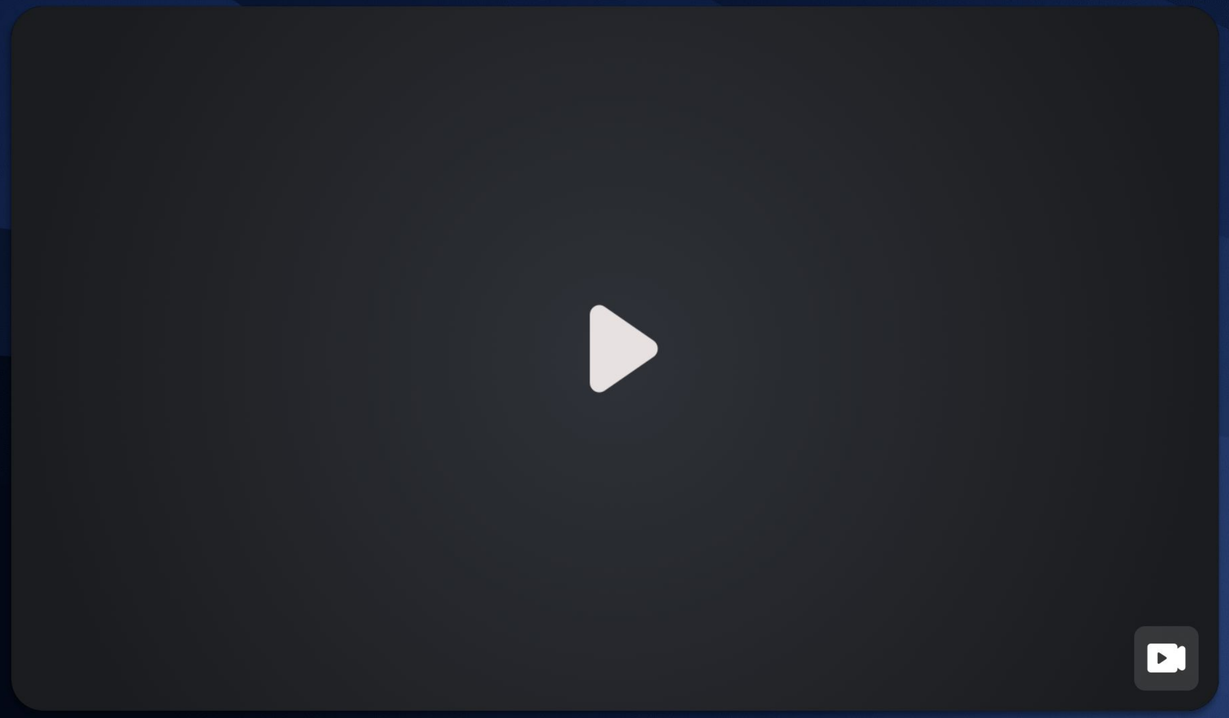




PM 04 : 39
Wednesday, 18 May

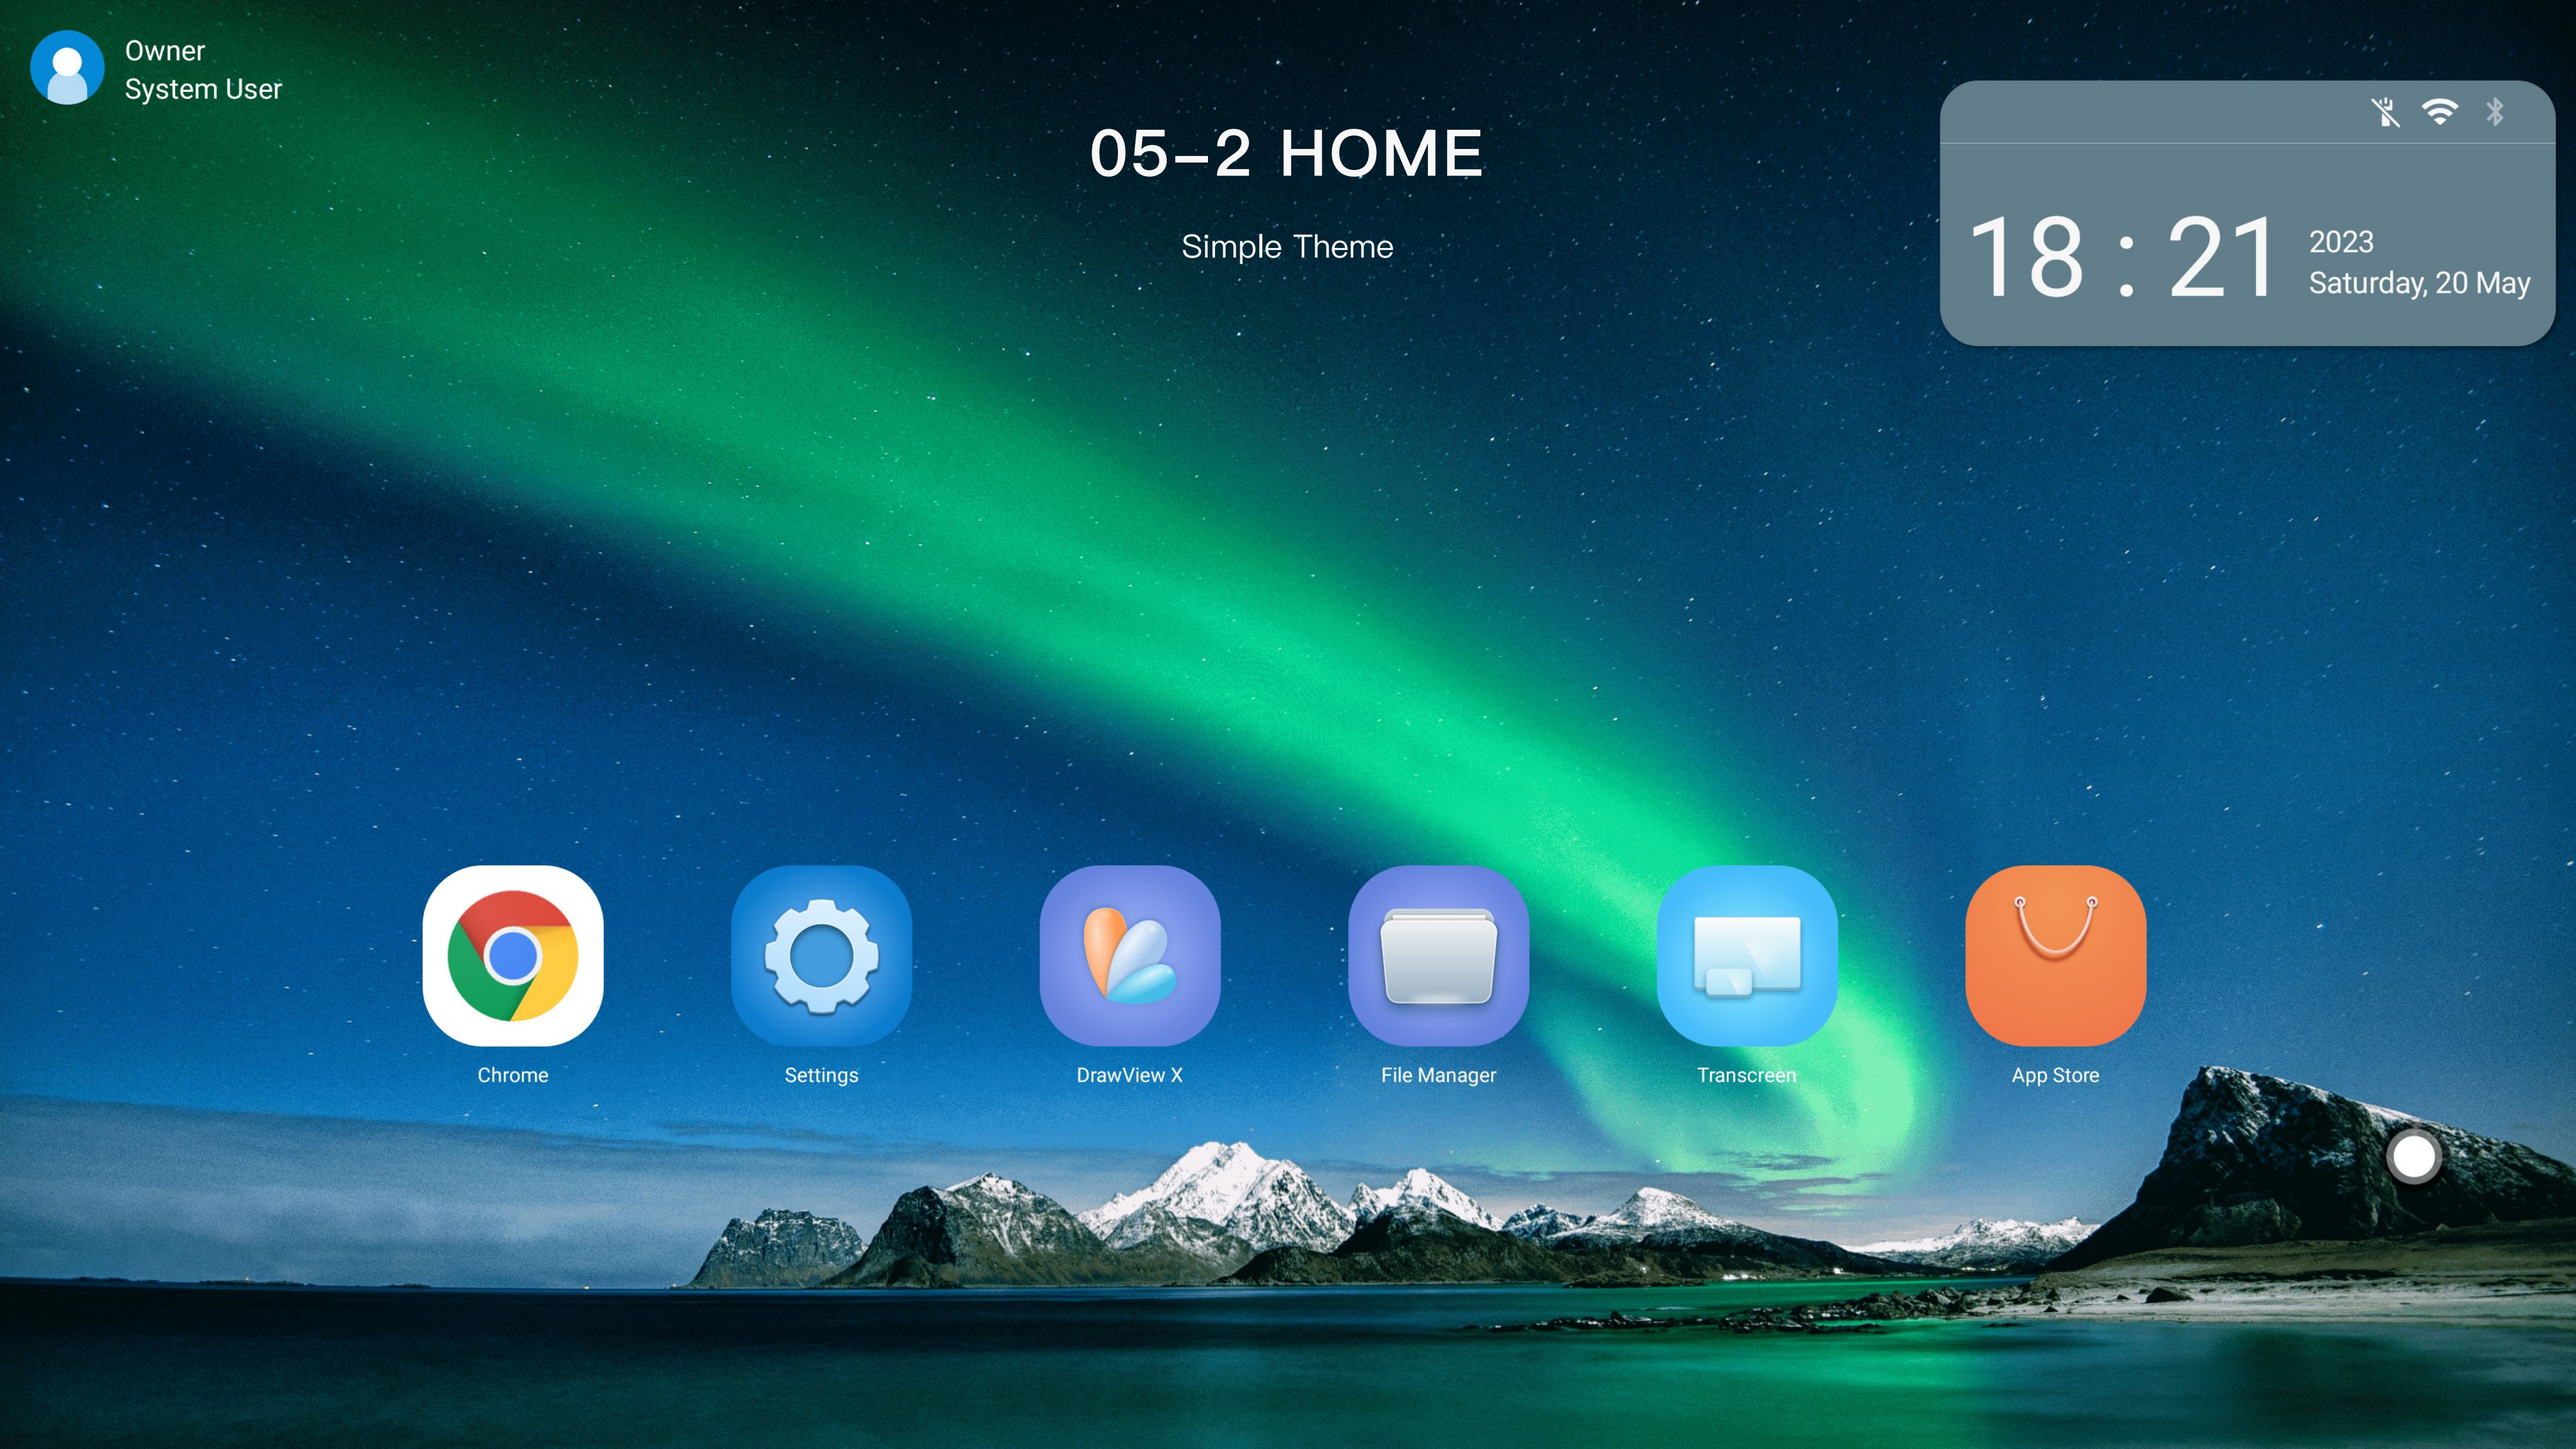
Owner
System User
05-2 HOME
Simple Theme
18 : 21
2023
Saturday, 20 May
Chrome
Settings
DrawView X
File Manager
Transcreen
App Store

06 SOURCE

Click here or select the corresponding source button to switch to the corresponding channel

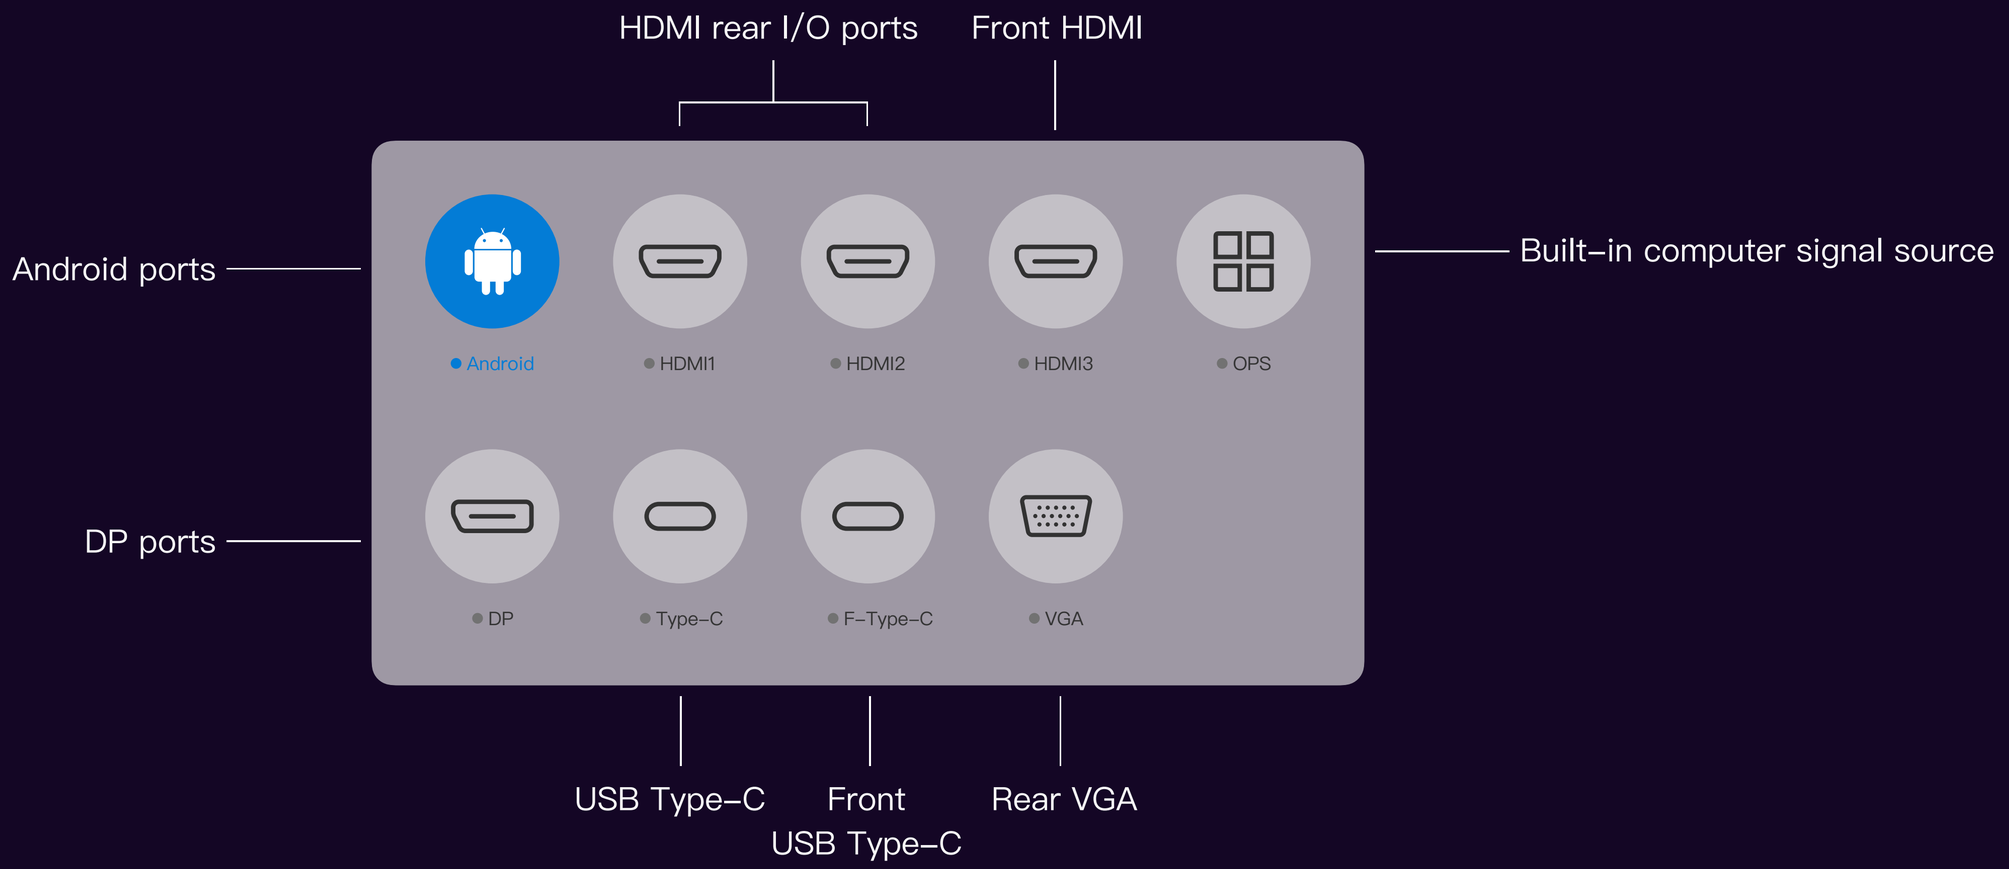


Input sources may differ, this picture is for reference only, please refer to actual product.

07–1–1 SETTINGS

Network Setting


WiFi and hotspot settings

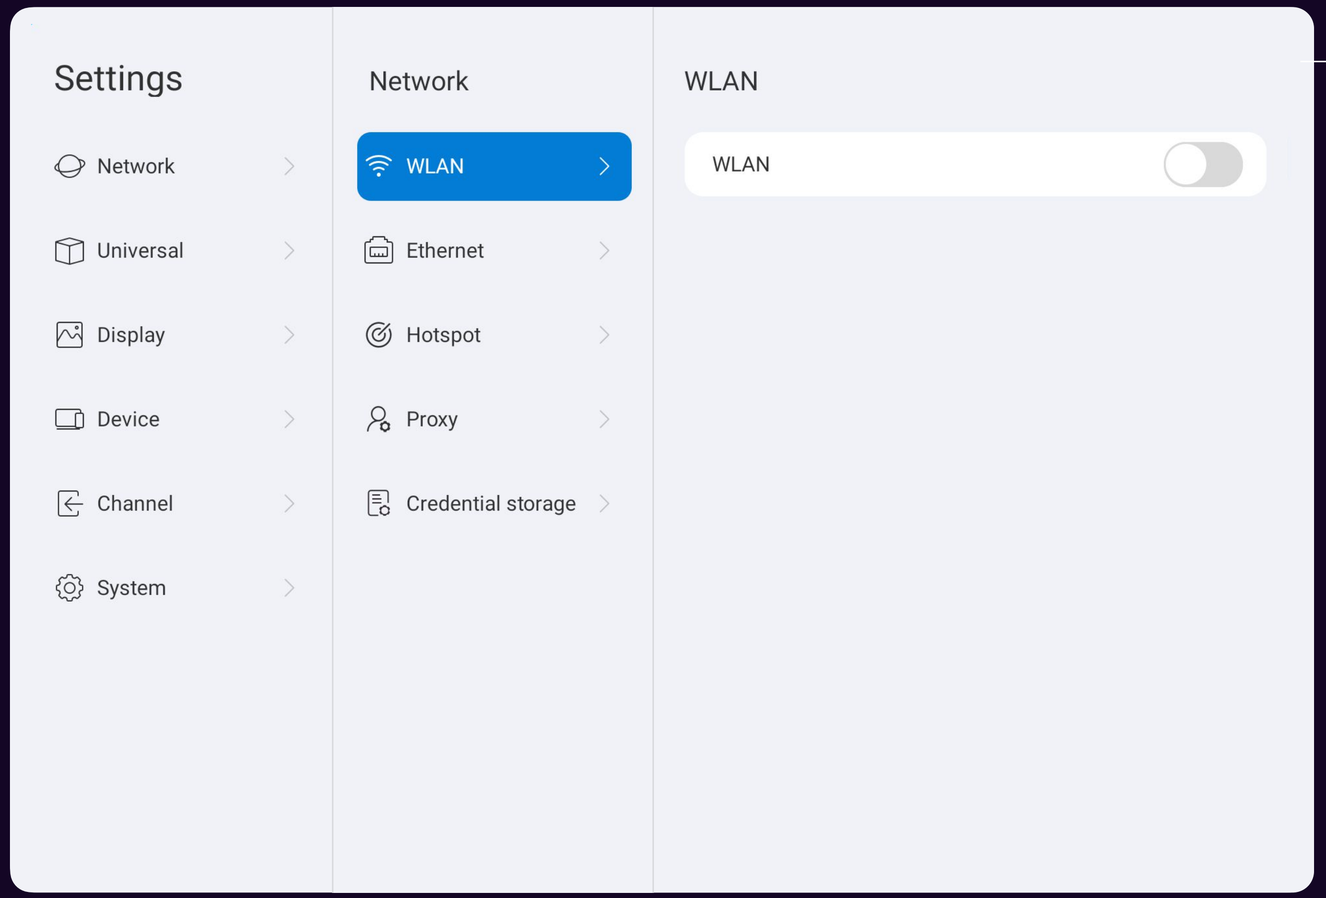

Can be connected to nearby wireless networks

07-1-2 SETTINGS


Wired Network Settings

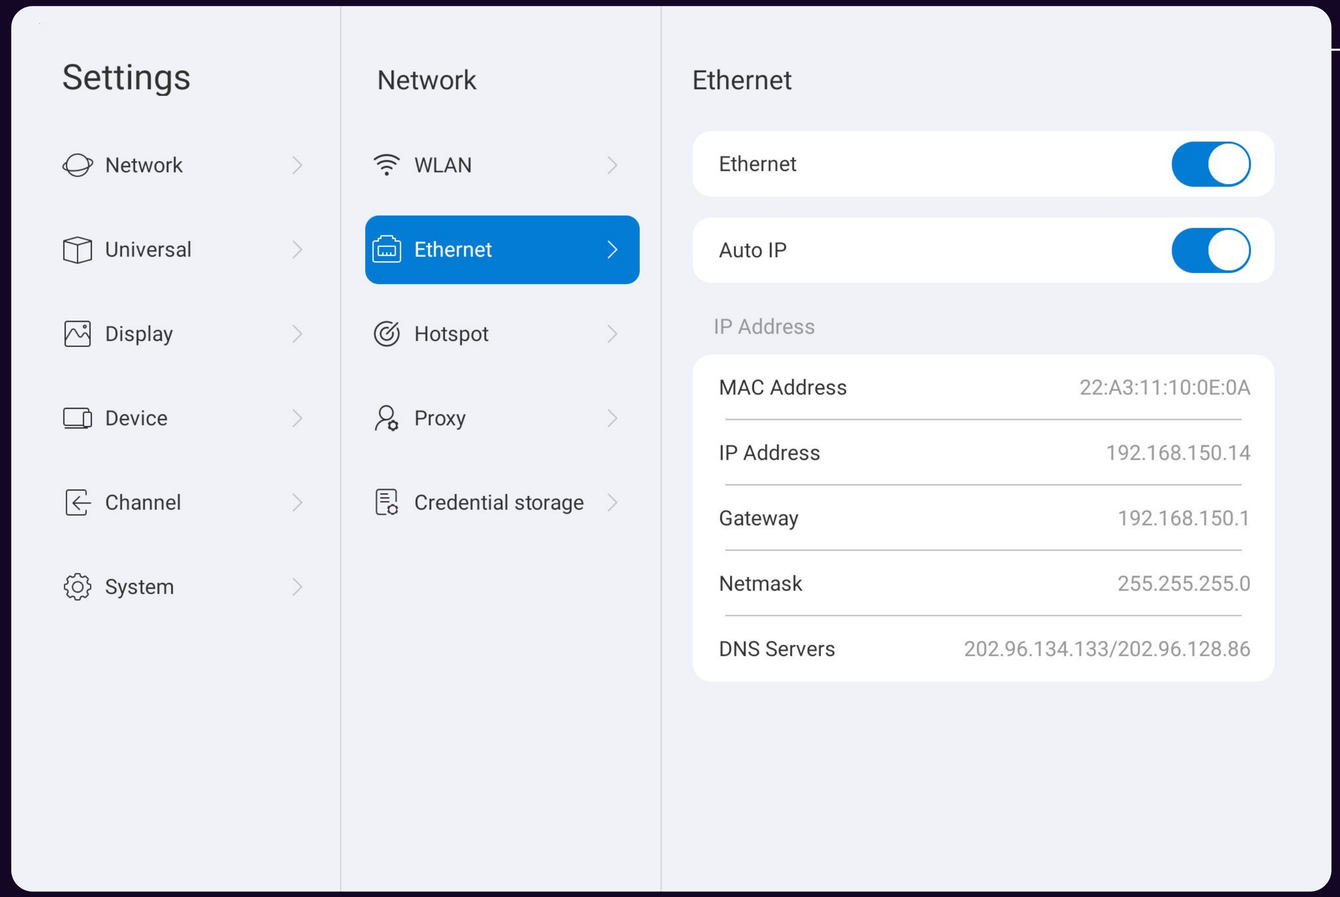

Connect to the LAN or Internet via an Ethernet cable

07–1–3 SETTINGS


Hotspot settings

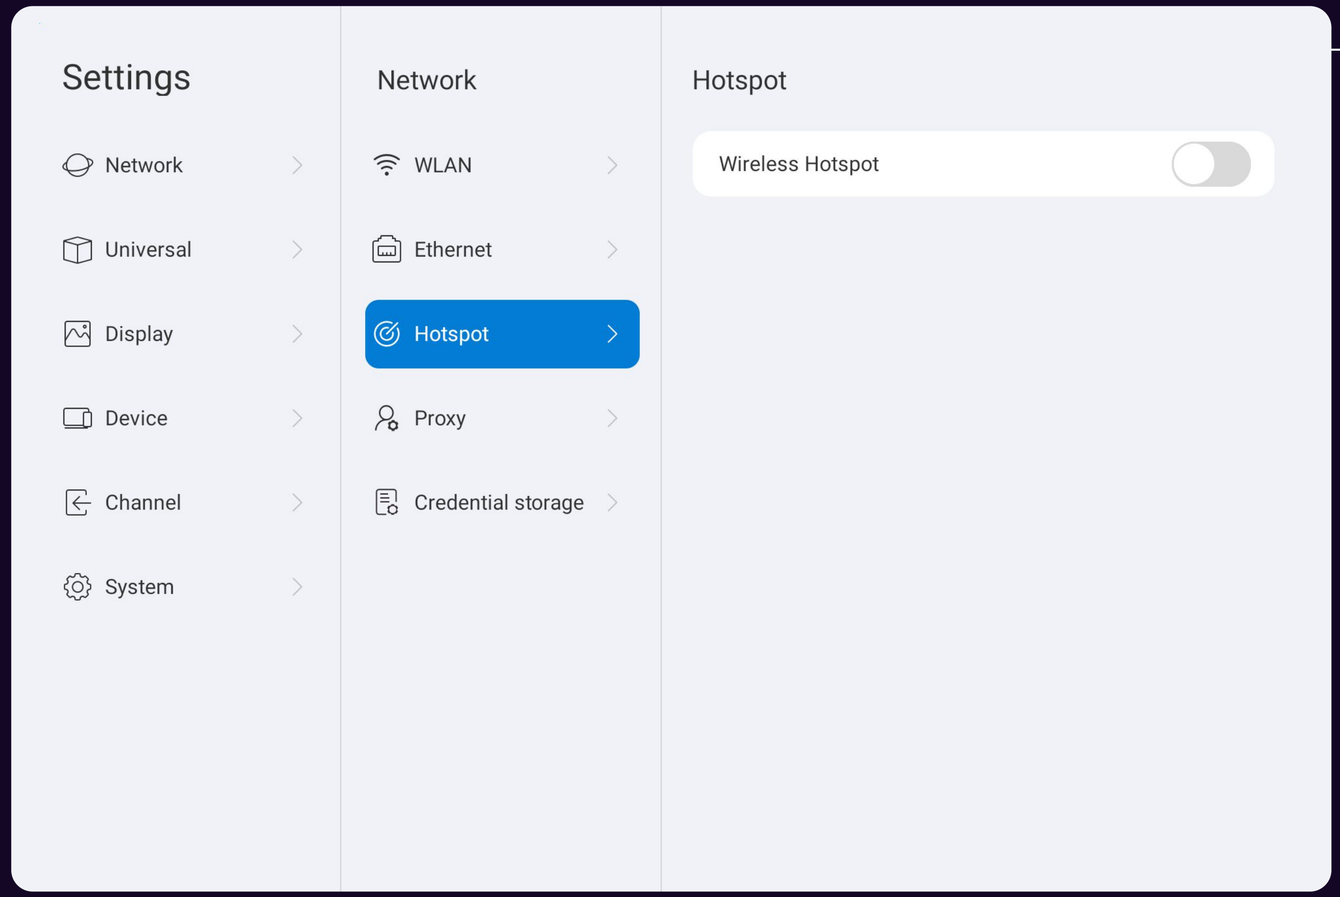

A hotspot can be set up, allowing other devices to discover and connect to the shared network of the device.

07-1-4 SETTINGS


Proxy Settings

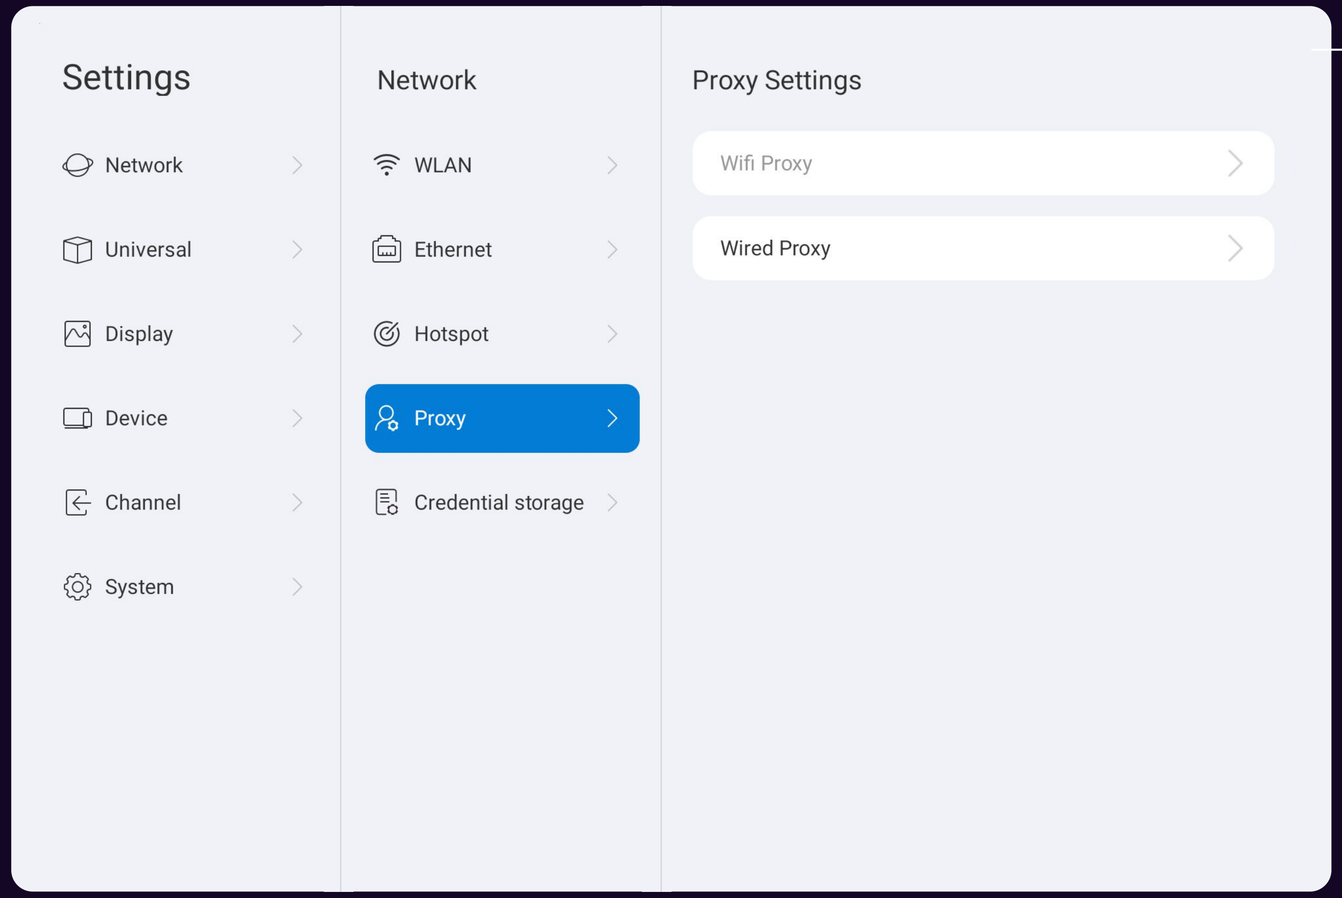

Set up a proxy server

07-1-5 SETTINGS

Credentials Storage Settings

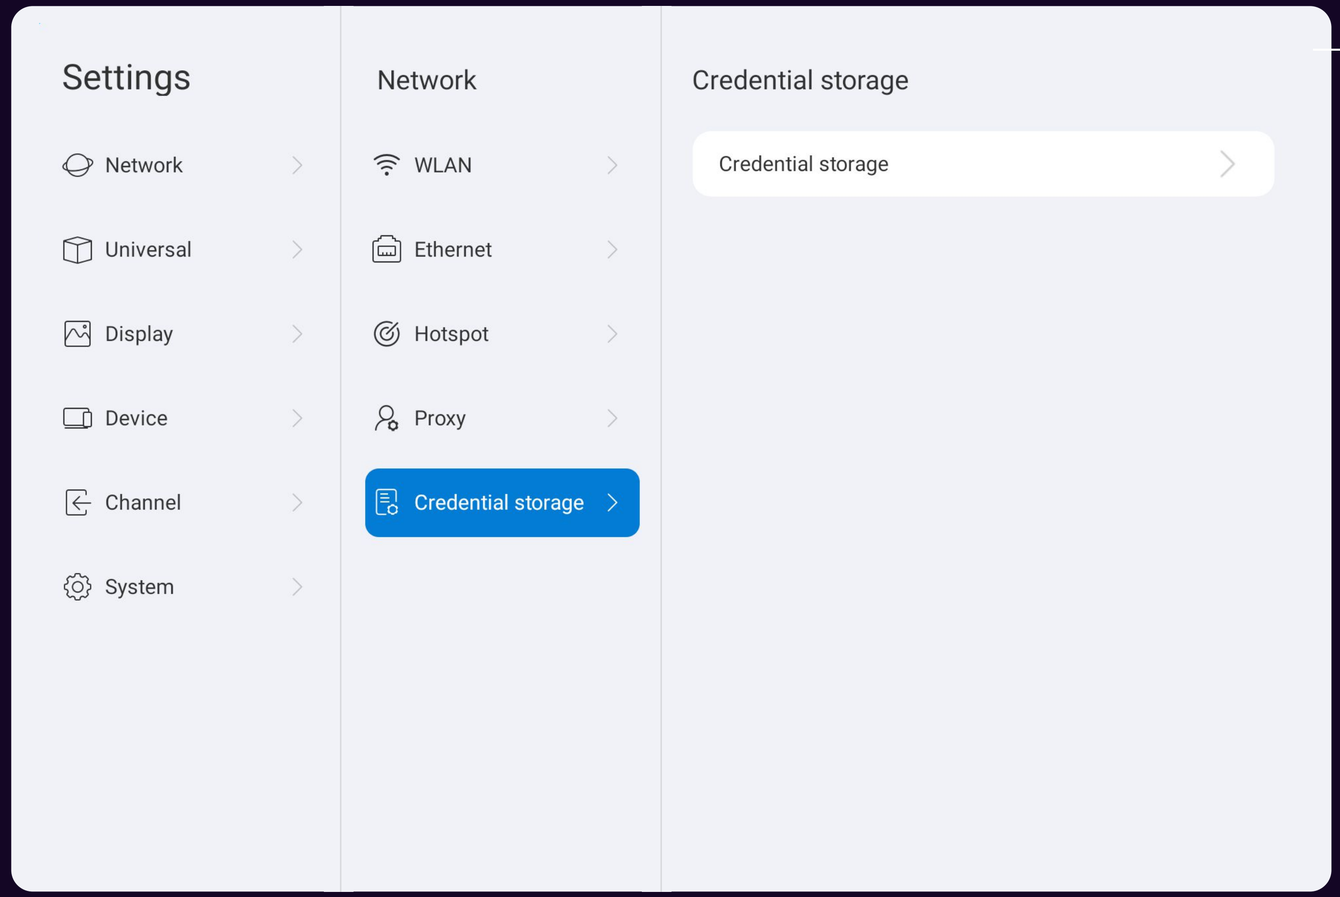


Store and manage users' sensitive information and credentials

07-2-1 SETTINGS

Universal Setting


Region and time settings

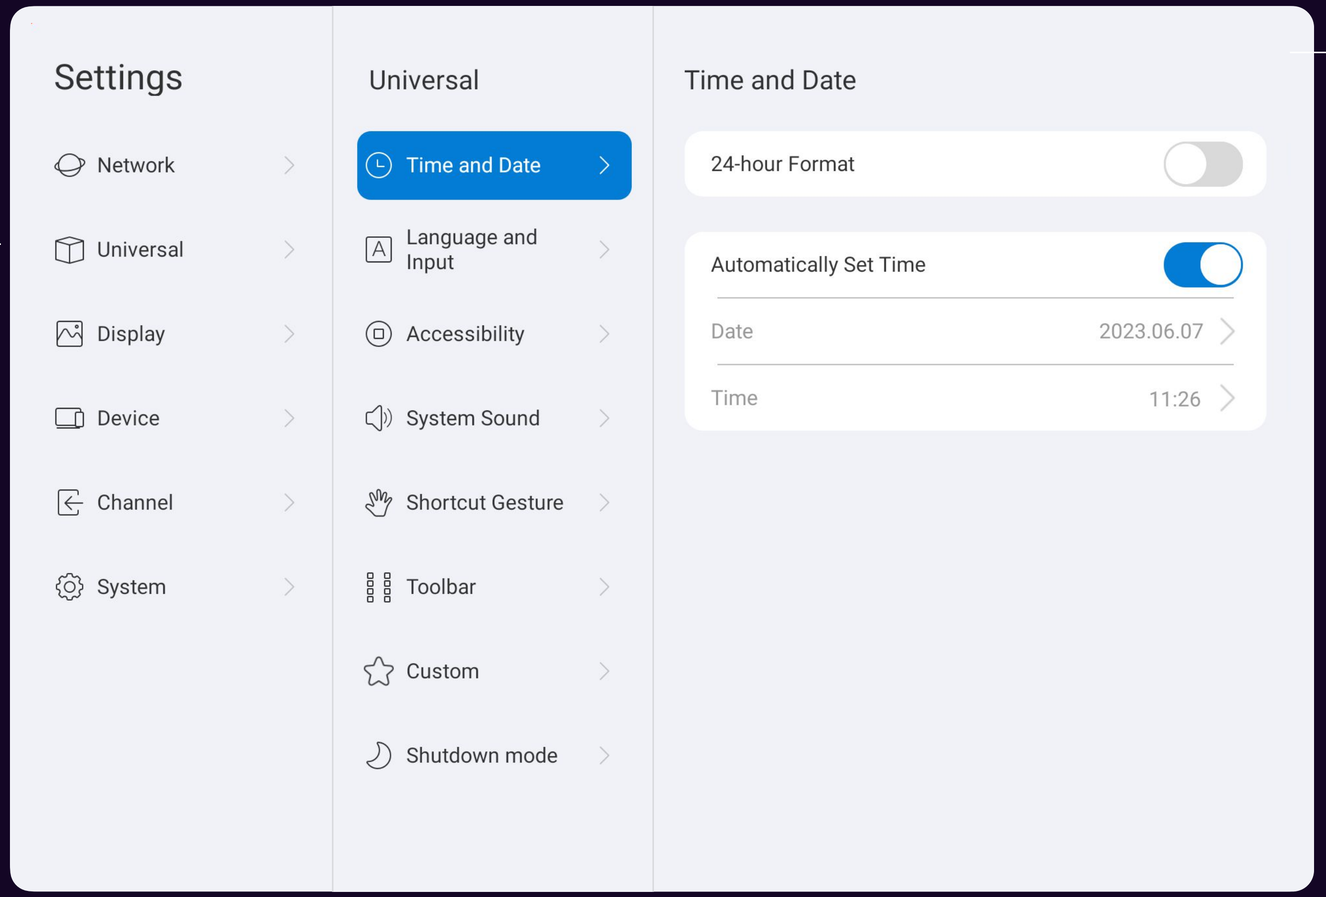

Can set 24-hour format, time and time zone

07-2-2 SETTINGS


Language and Input Settings

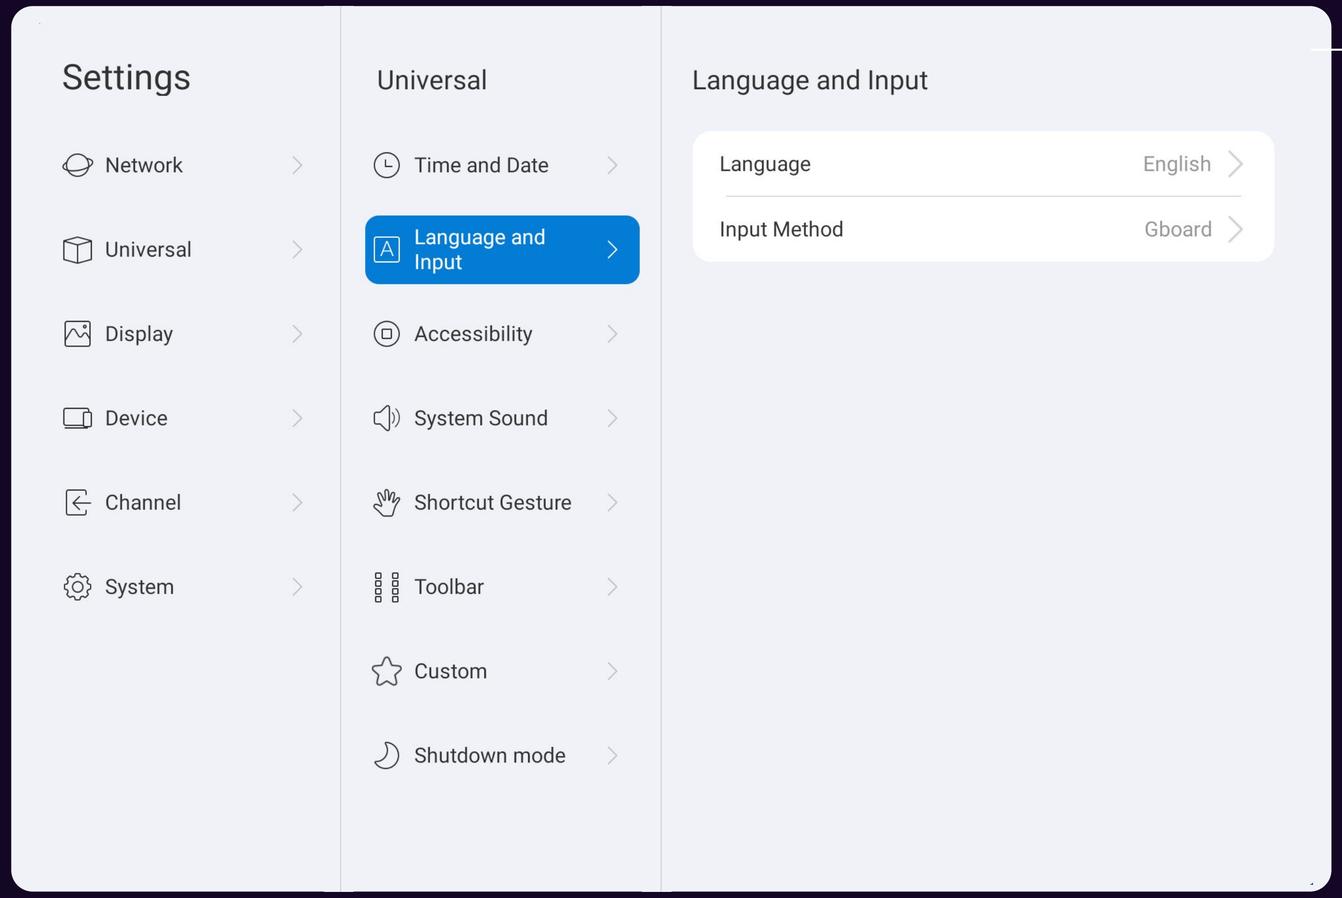

Select language and input method

07-2-3 SETTINGS


Auxiliary Touch Settings

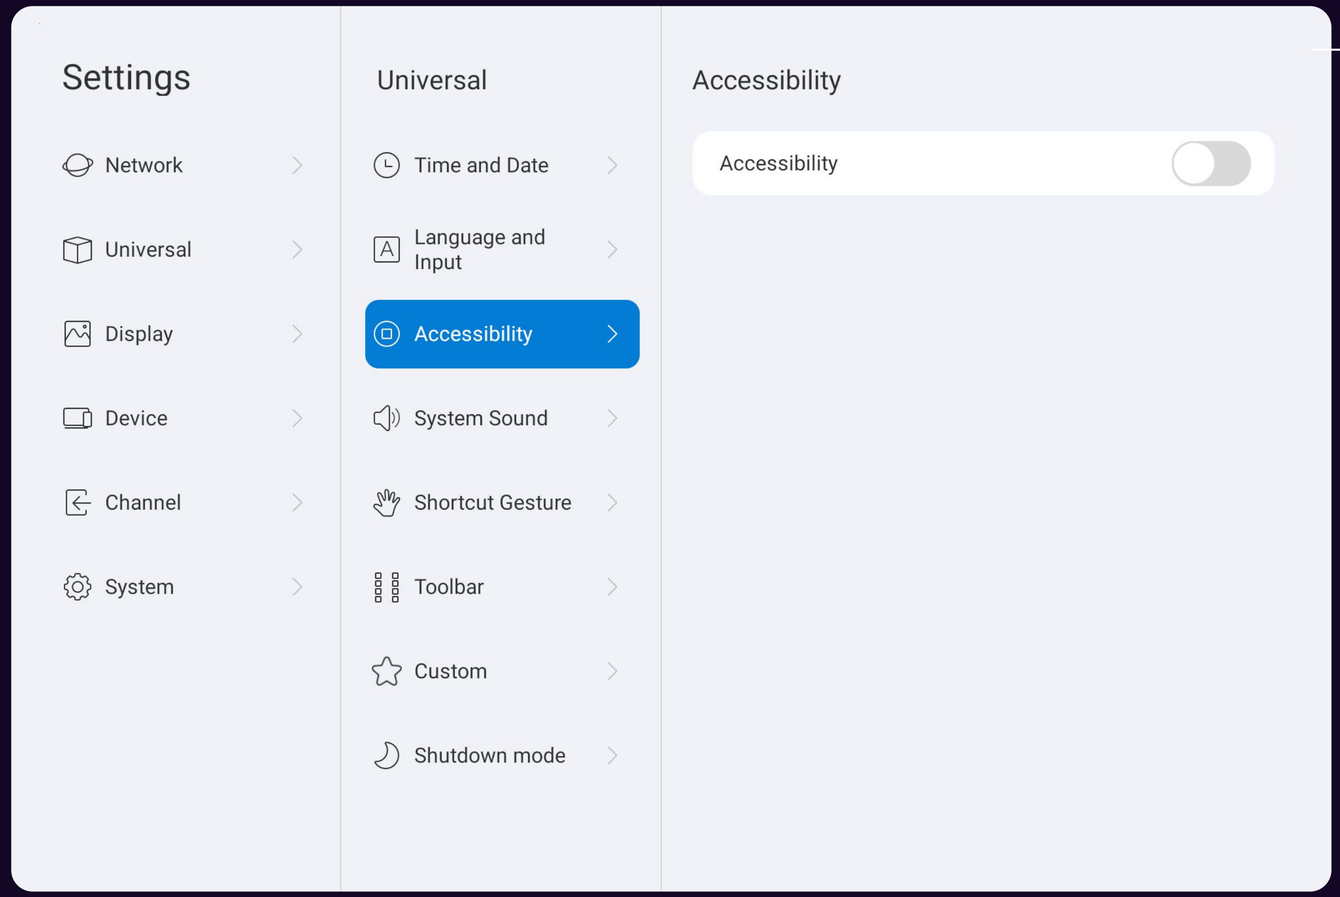

Set the floating ball switch

07-2-4 SETTINGS


System Sound Settings

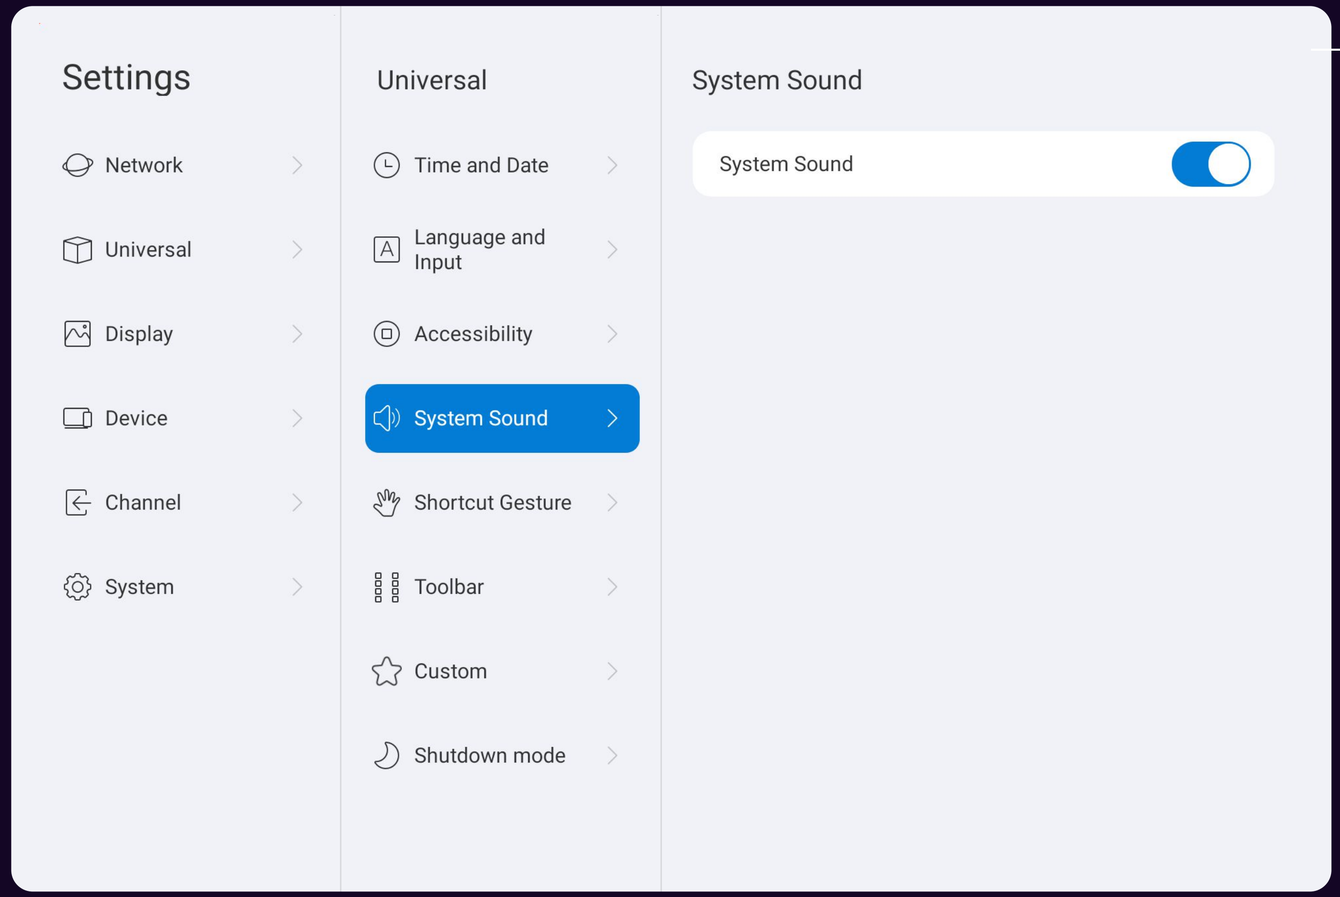

System prompt sound switch

07-2-5 SETTINGS


Gesture Settings

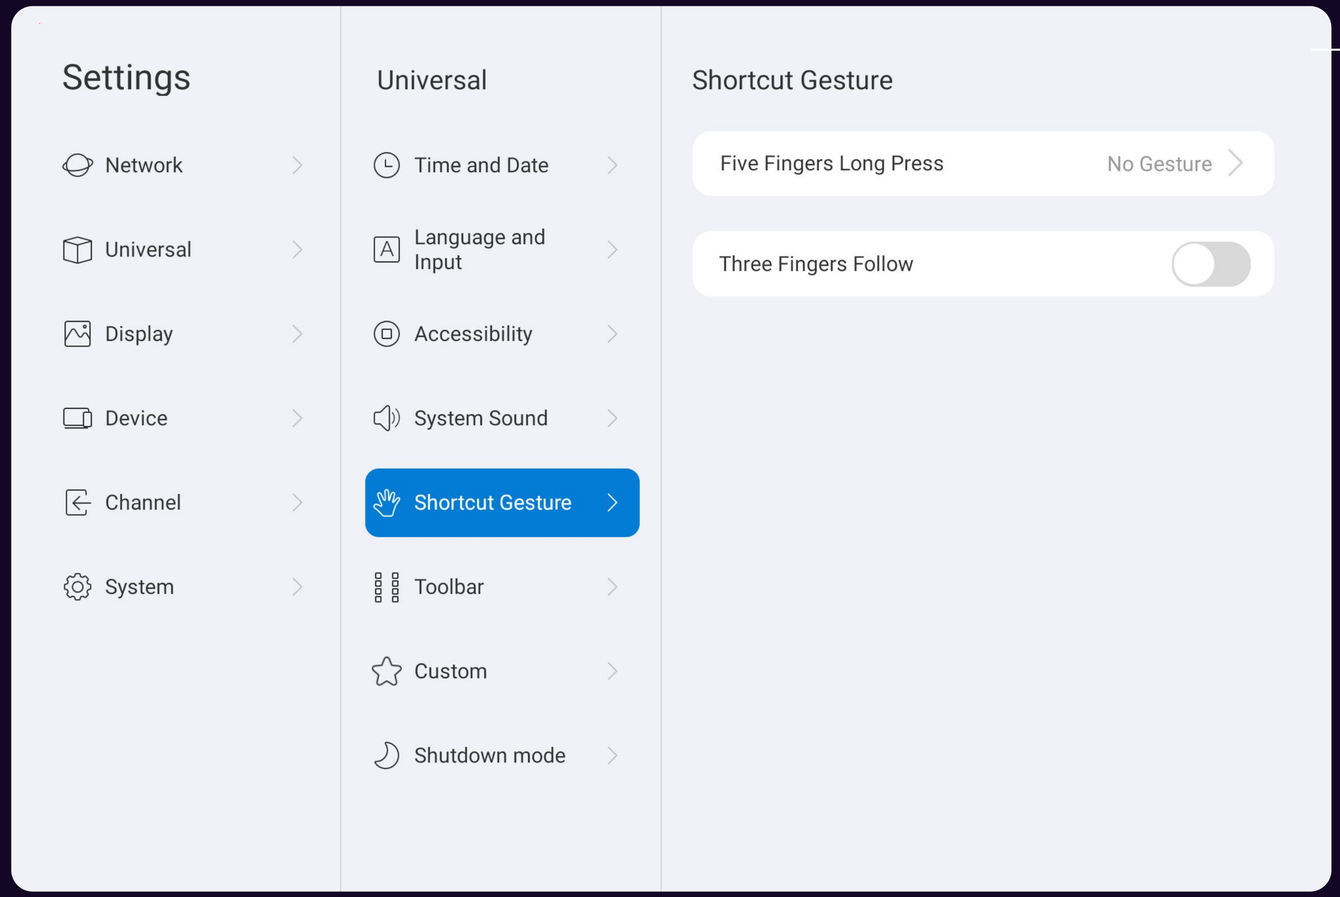

Set specific operations performed by dragging or pressing fingers on the screen

07-2-6 SETTINGS


Quick Action Bar Settings

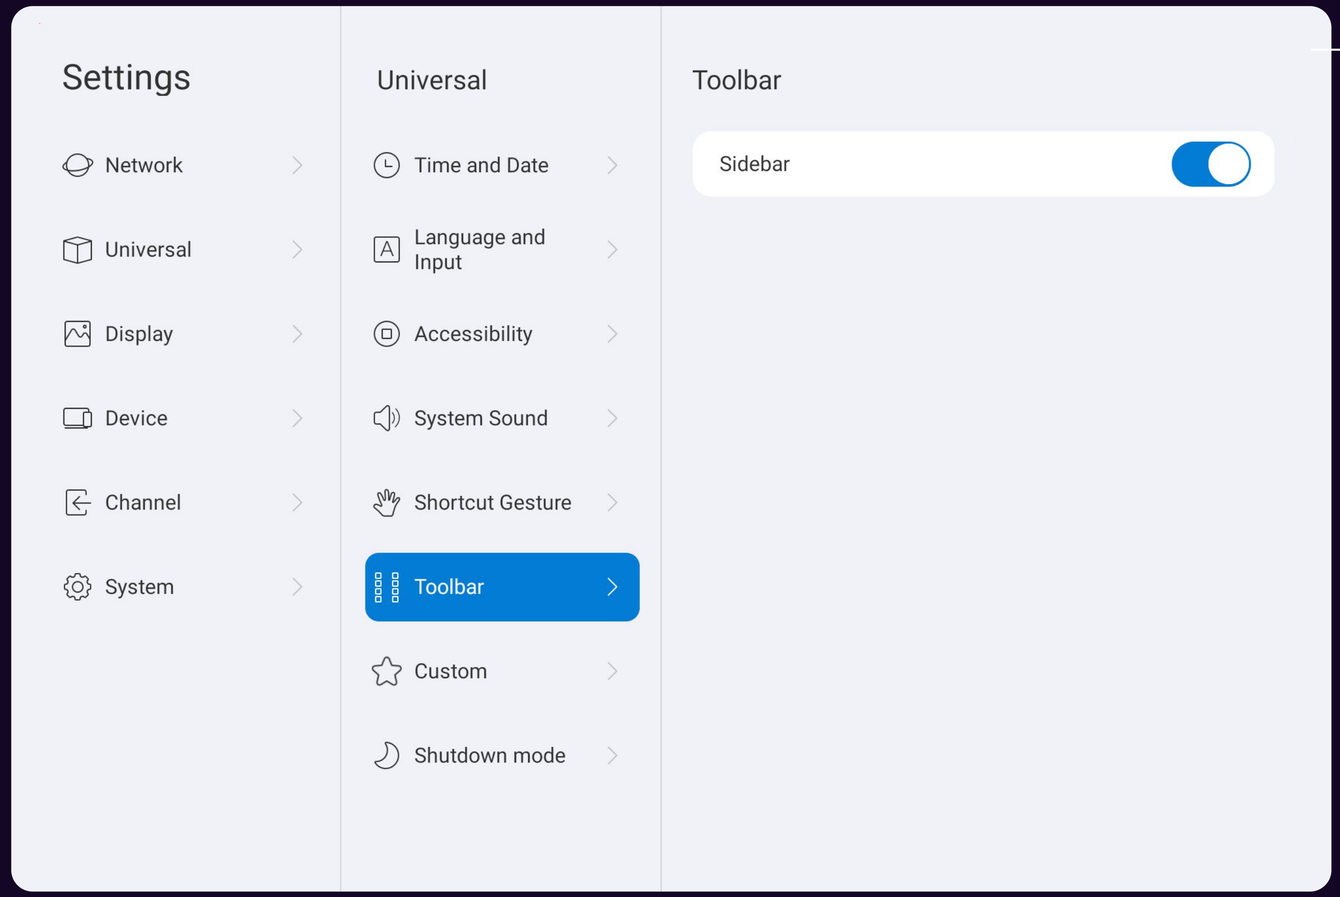

Set the switch for the side bar and bottom bar

07-2-7 SETTINGS


Custom Key Settings

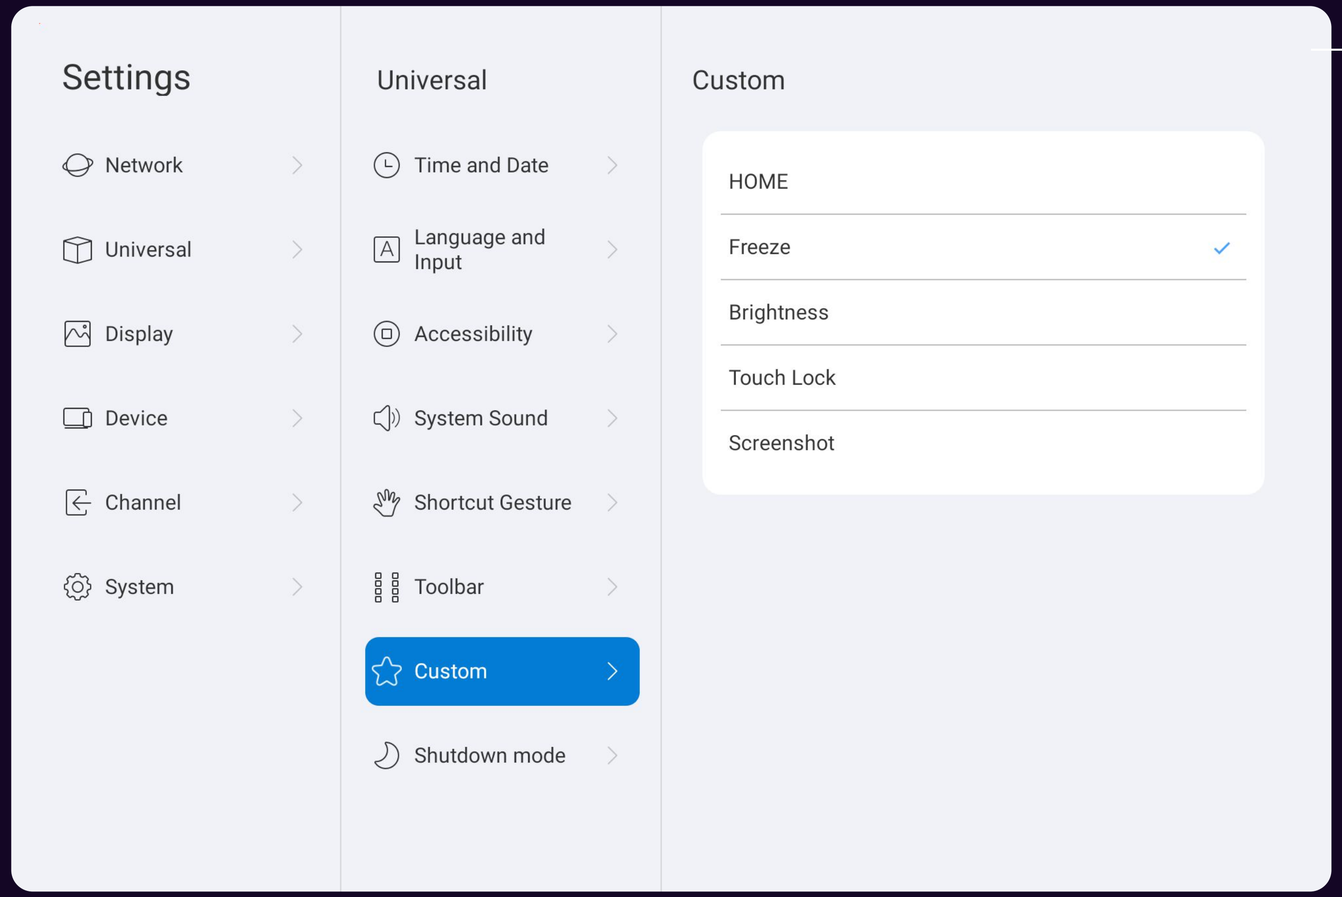

Set the HOME key to HOME/ Freeze/Brightness/Touch lock/Screenshot

07-2-8 SETTINGS


Shutdown Mode Settings

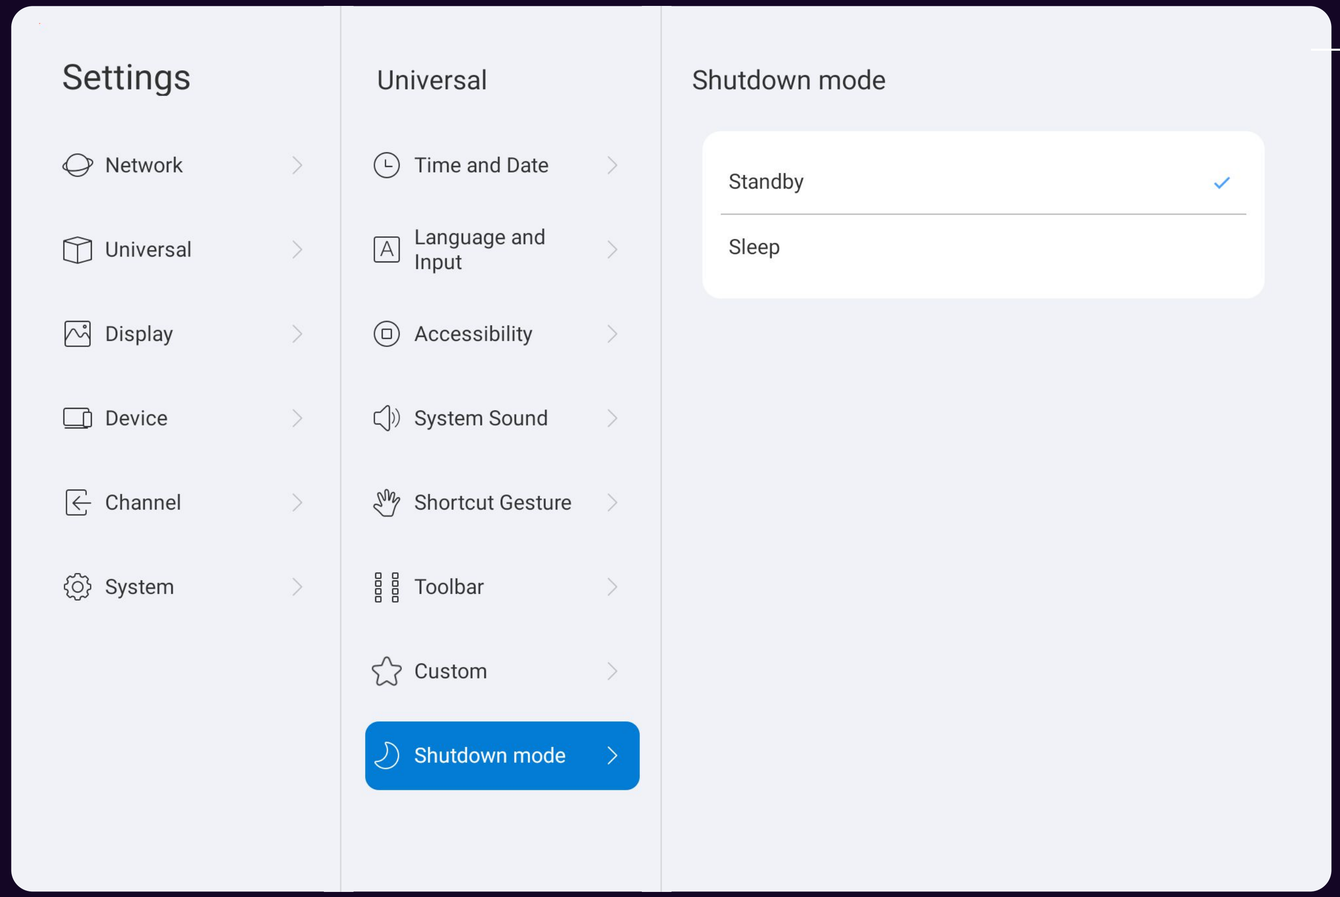

Standby and sleep modes

07-3-1 SETTINGS

Wallpaper Settings

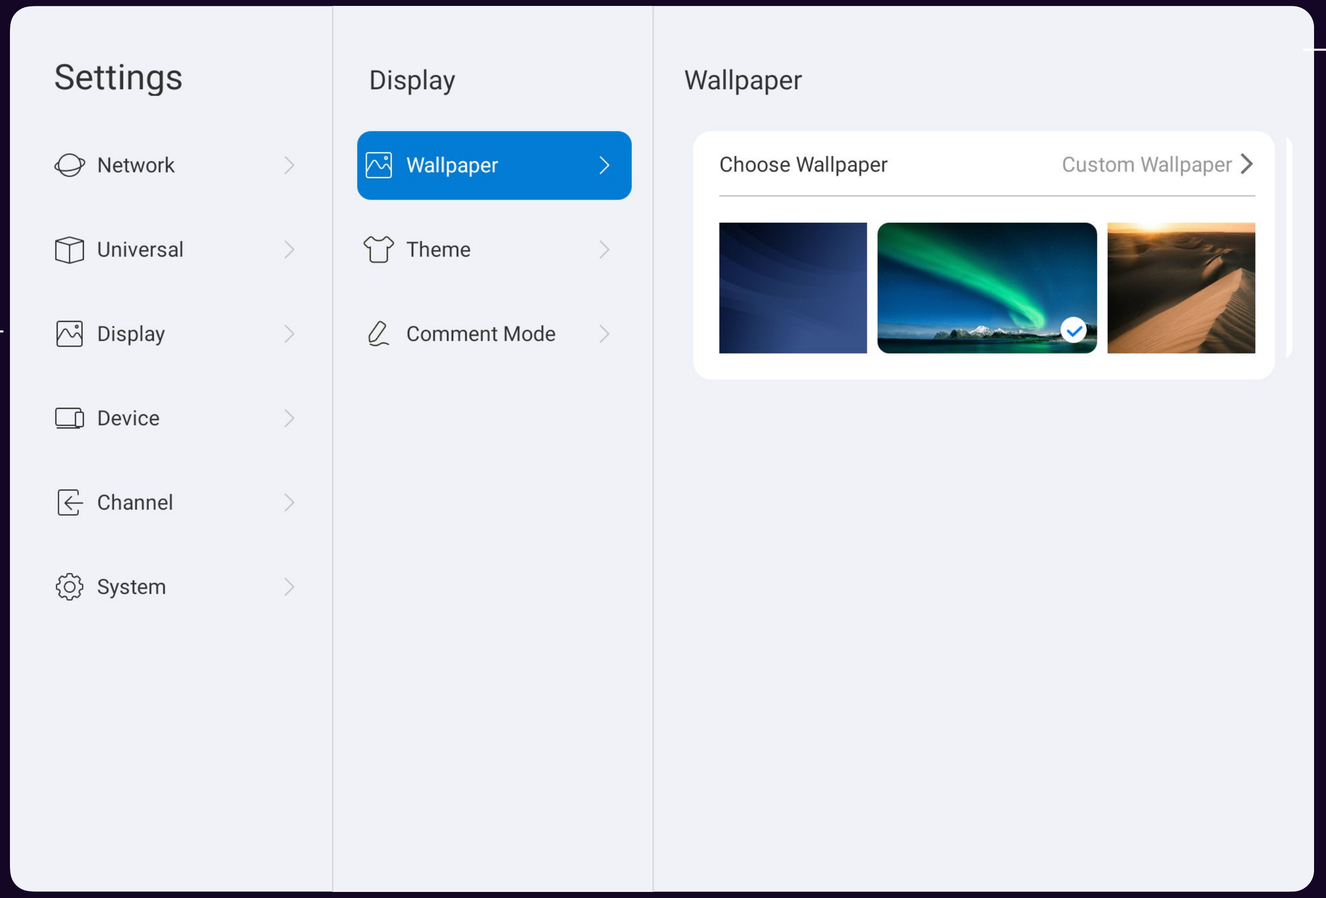


Switch personalized UI

Select to replace wallpaper/ add custom wallpaper


07-3-2 SETTINGS

Theme Settings

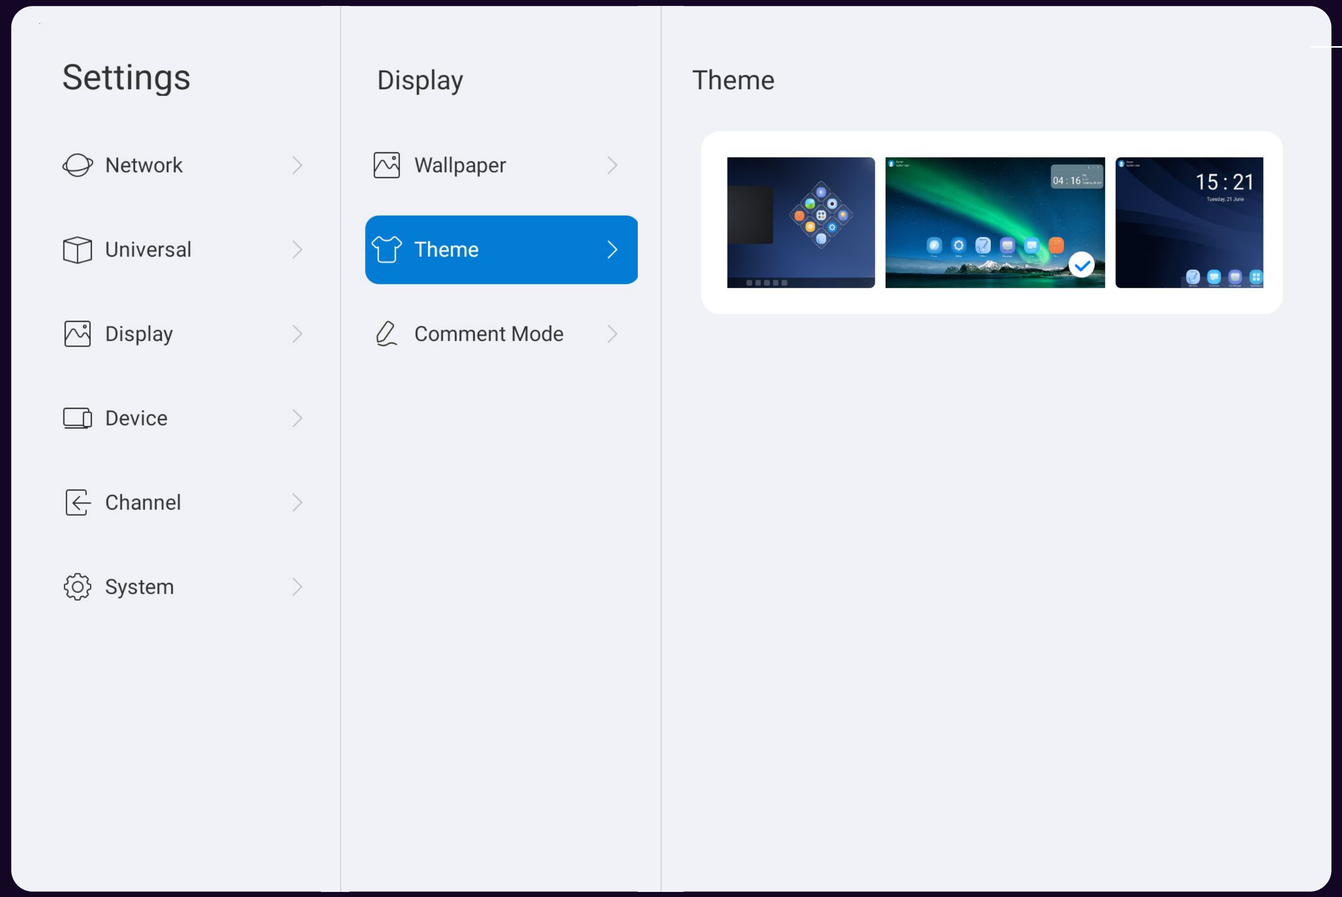

07-3-3 SETTINGS

Annotation Mode Settings

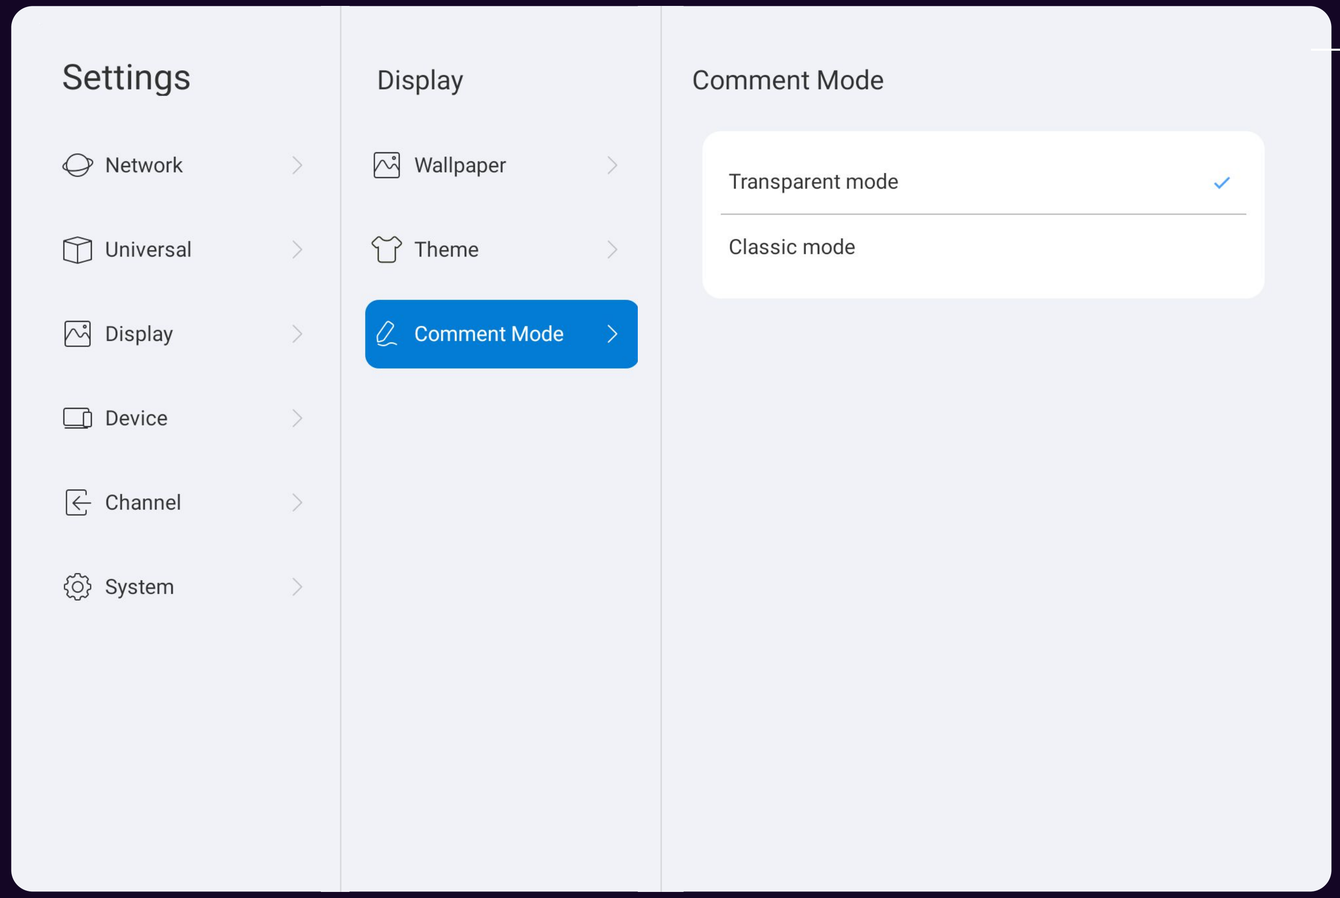


Set the startup mode of the sidebar annotation (transparent mode/classic mode)

07-4-1 SETTINGS

Bluetooth Settings


Bluetooth and camera settings

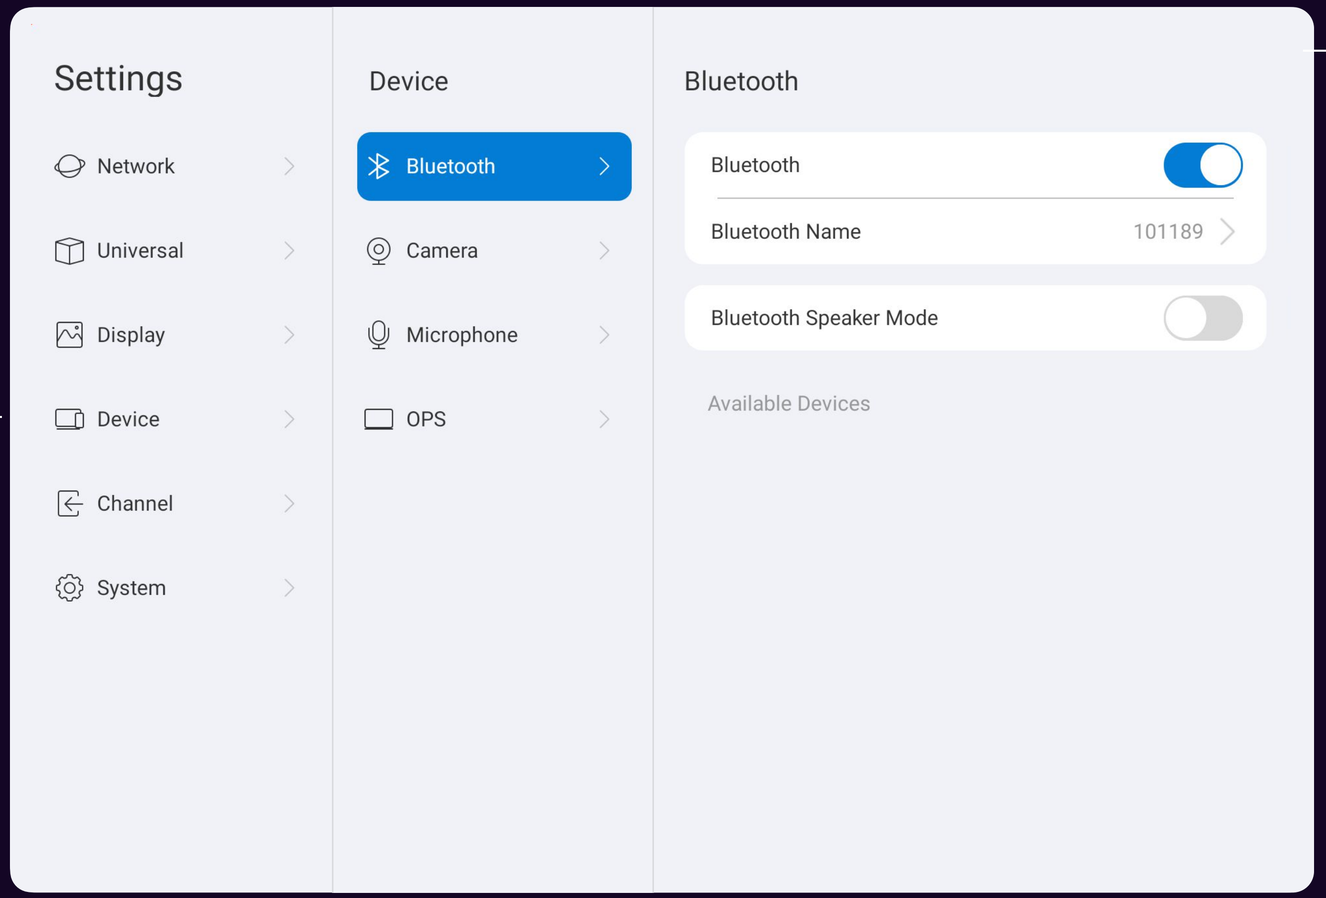

Bluetooth pairing connection and speaker mode and name settings

07-4-2 SETTINGS


Camera Settings

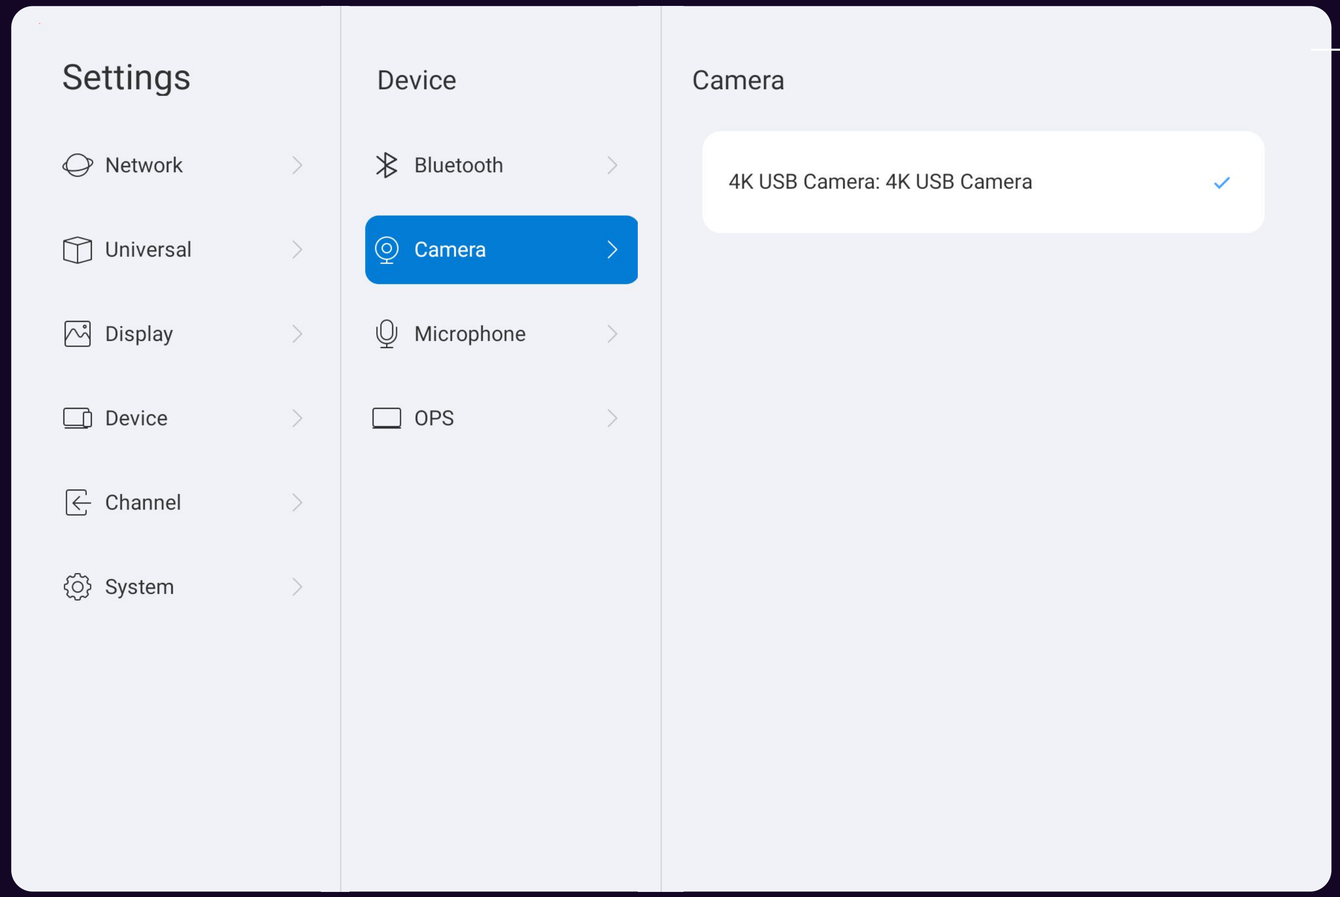

Select the camera to be used when there are multiple cameras

07-4-3 SETTINGS


Microphone Settings

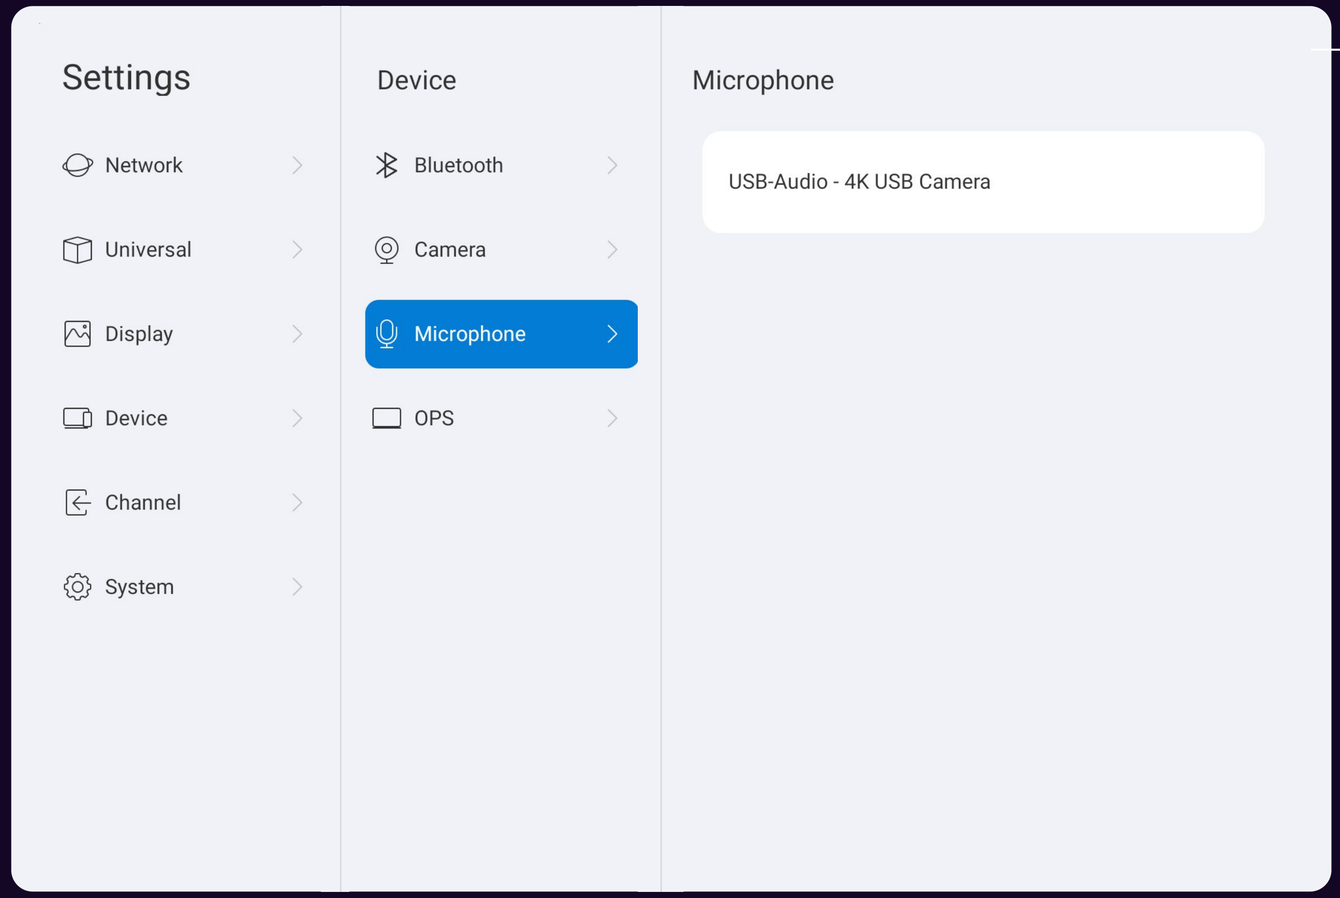

Select the microphone to be used when there are multiple microphones

07-4-4 SETTINGS


OPS Settings

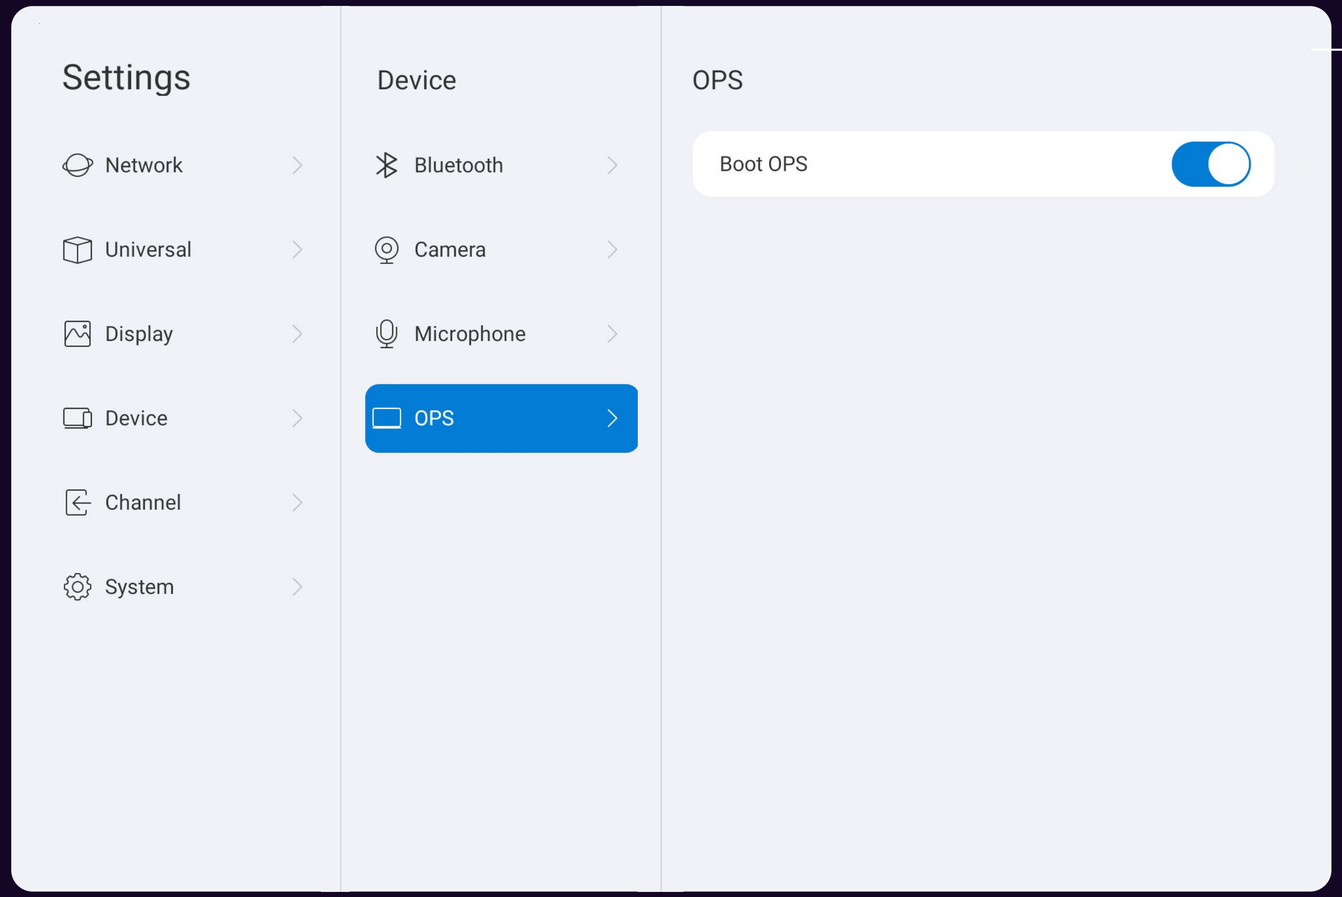

OPS startup setting follows the device

07-5-1 SETTINGS

Boot Channel Settings

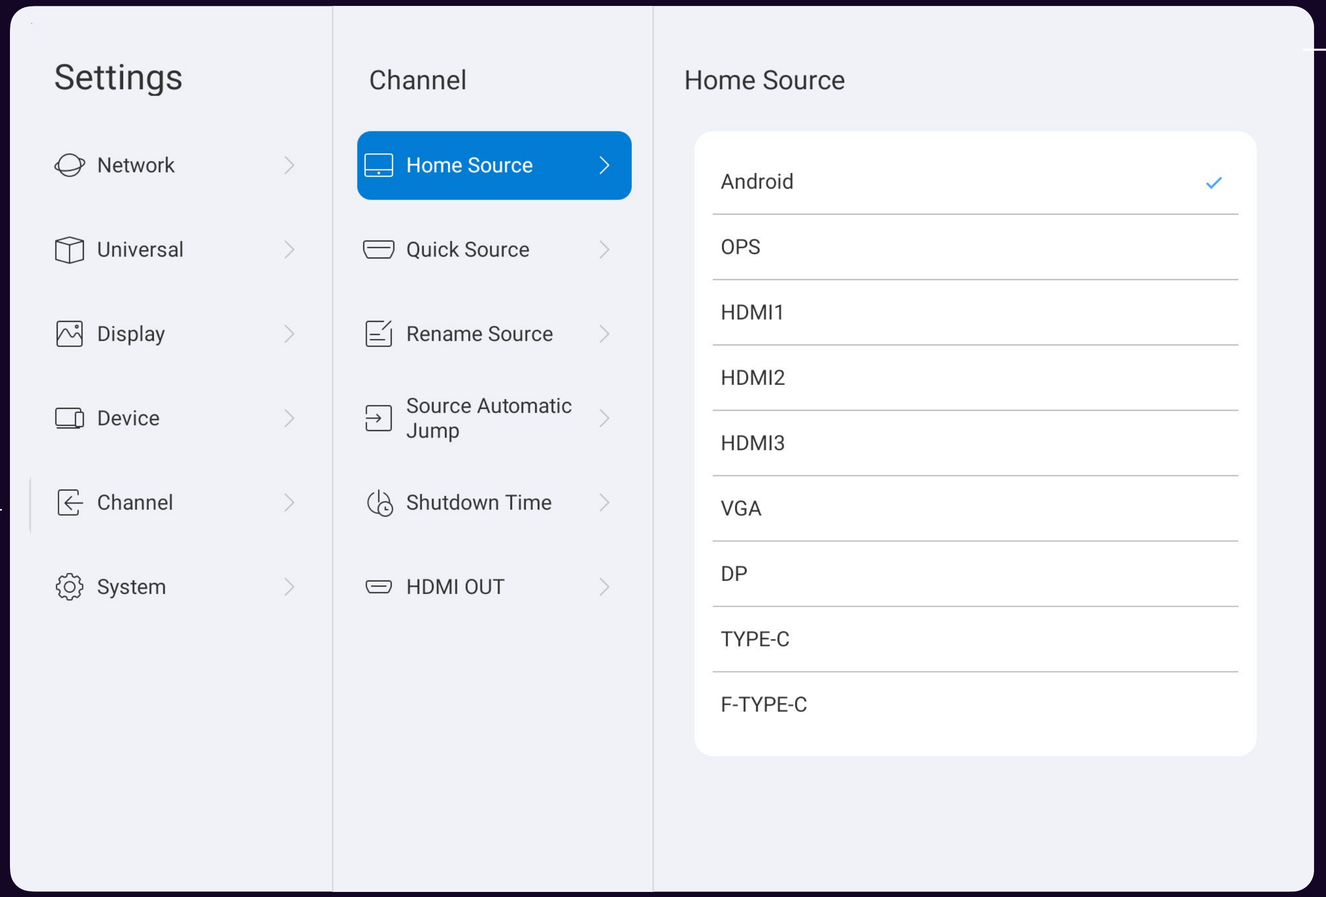


Related channel configurations

Set the channel that the device enters when powered on

07-5-2 SETTINGS


Quick Channel Settings

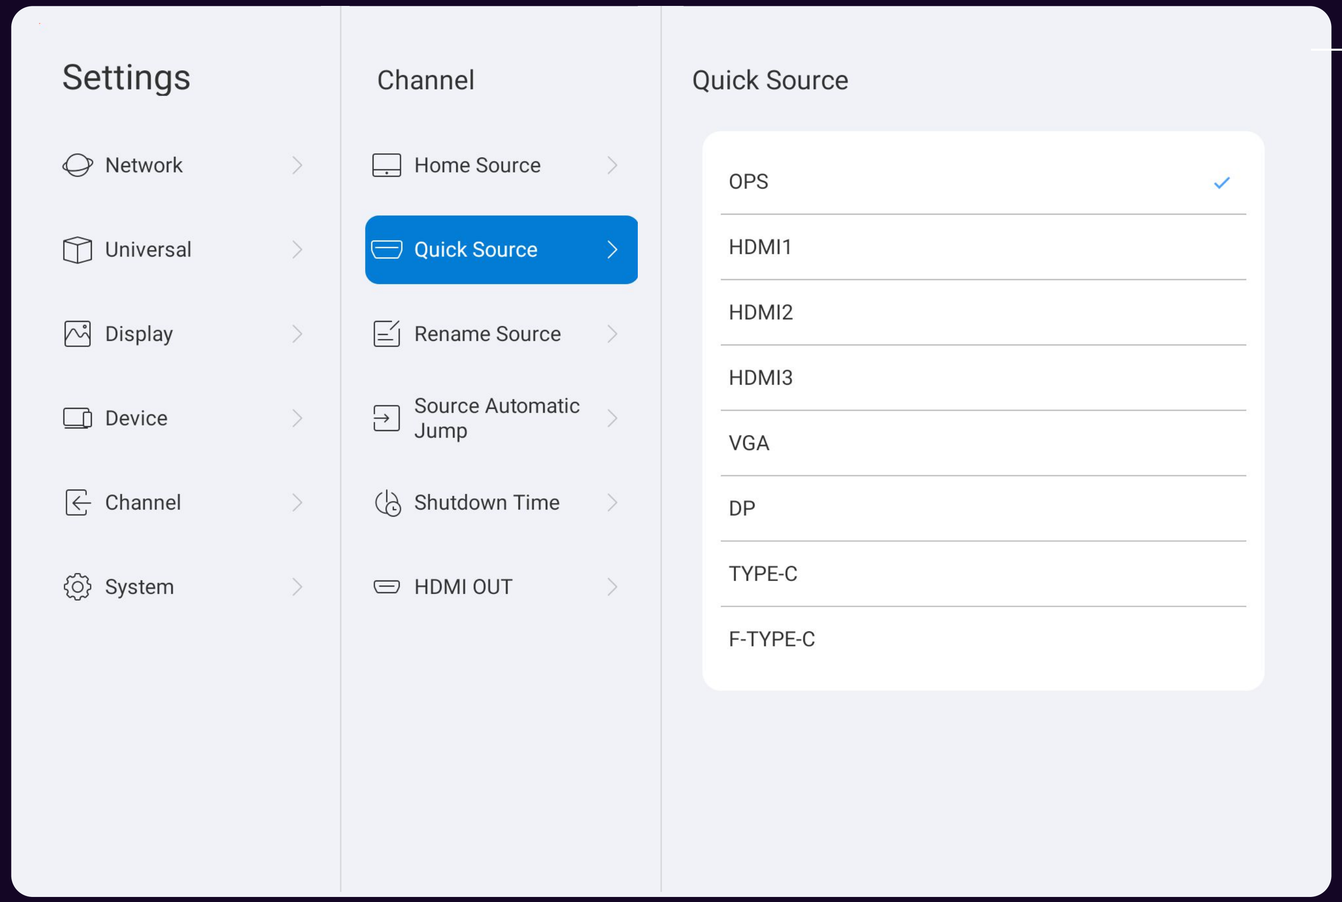

Set the channel that the sidebar channel button enters

07-5-3 SETTINGS


Custom Channel Name Settings

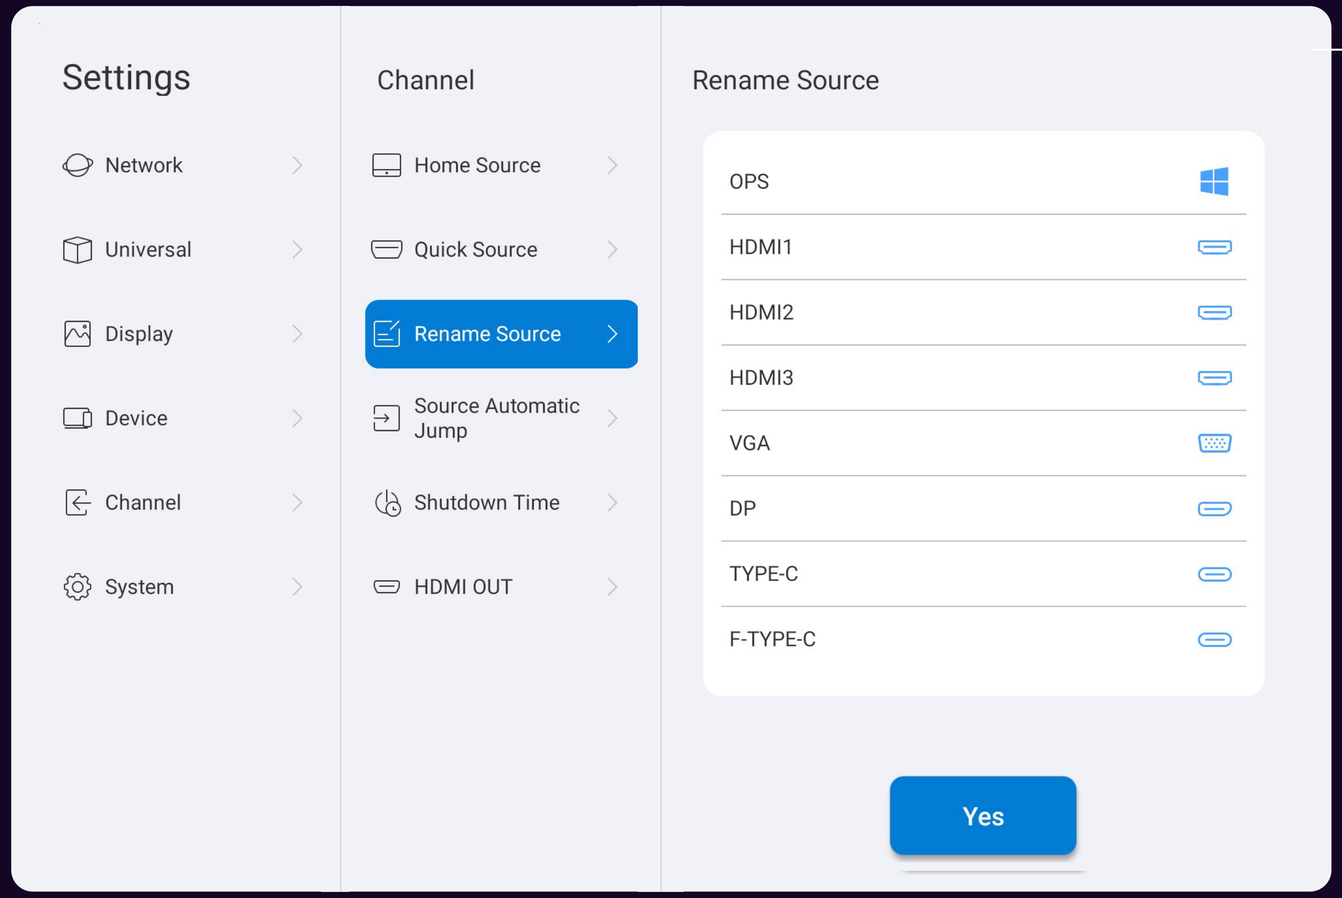

Customize the channel names

07-5-4 SETTINGS


Signal Source Auto Switch Setting

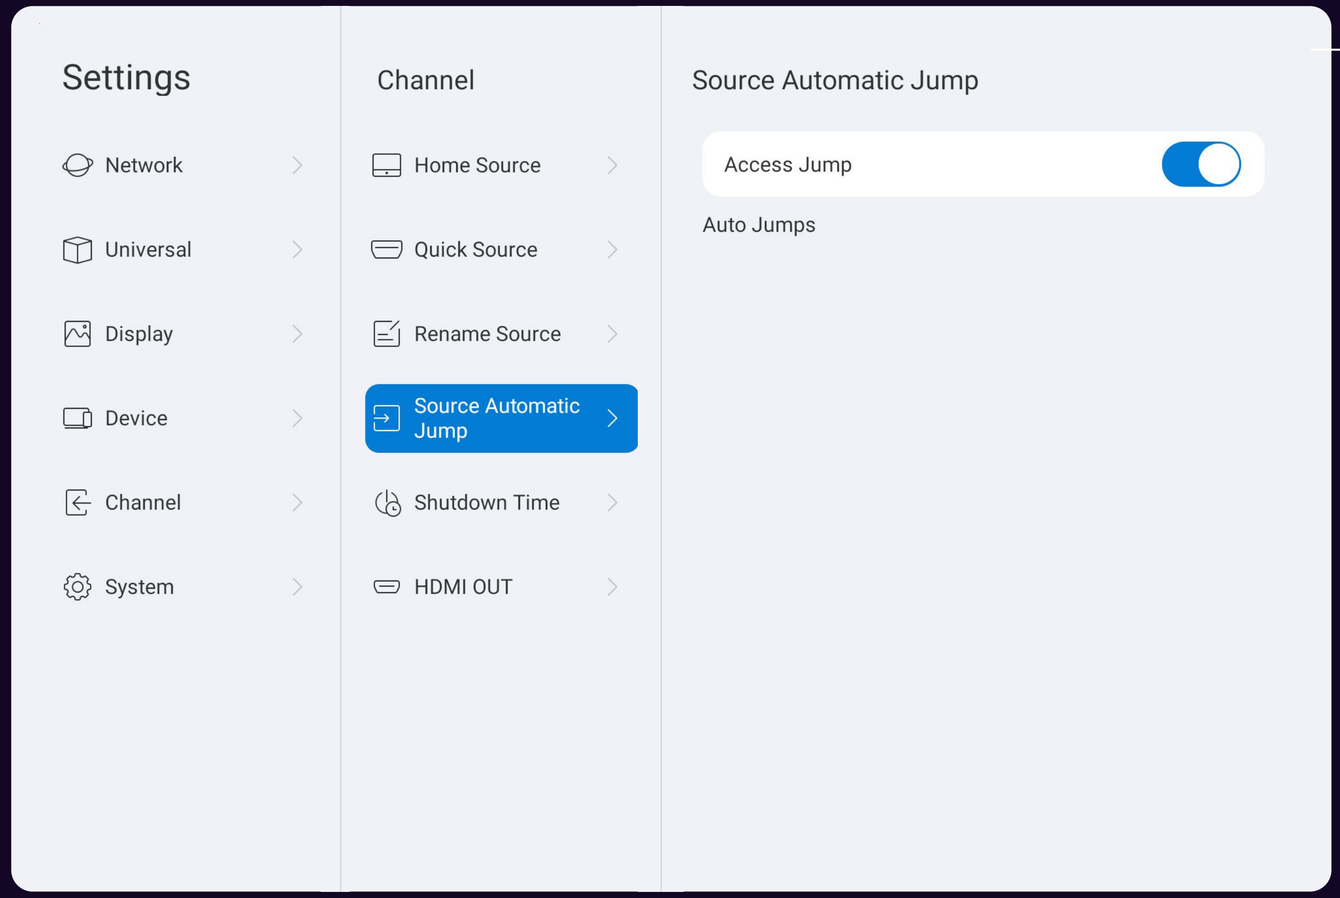

Set the switch for signal source automatic switching

07-5-5 SETTINGS


No Signal Shutdown Time Settings

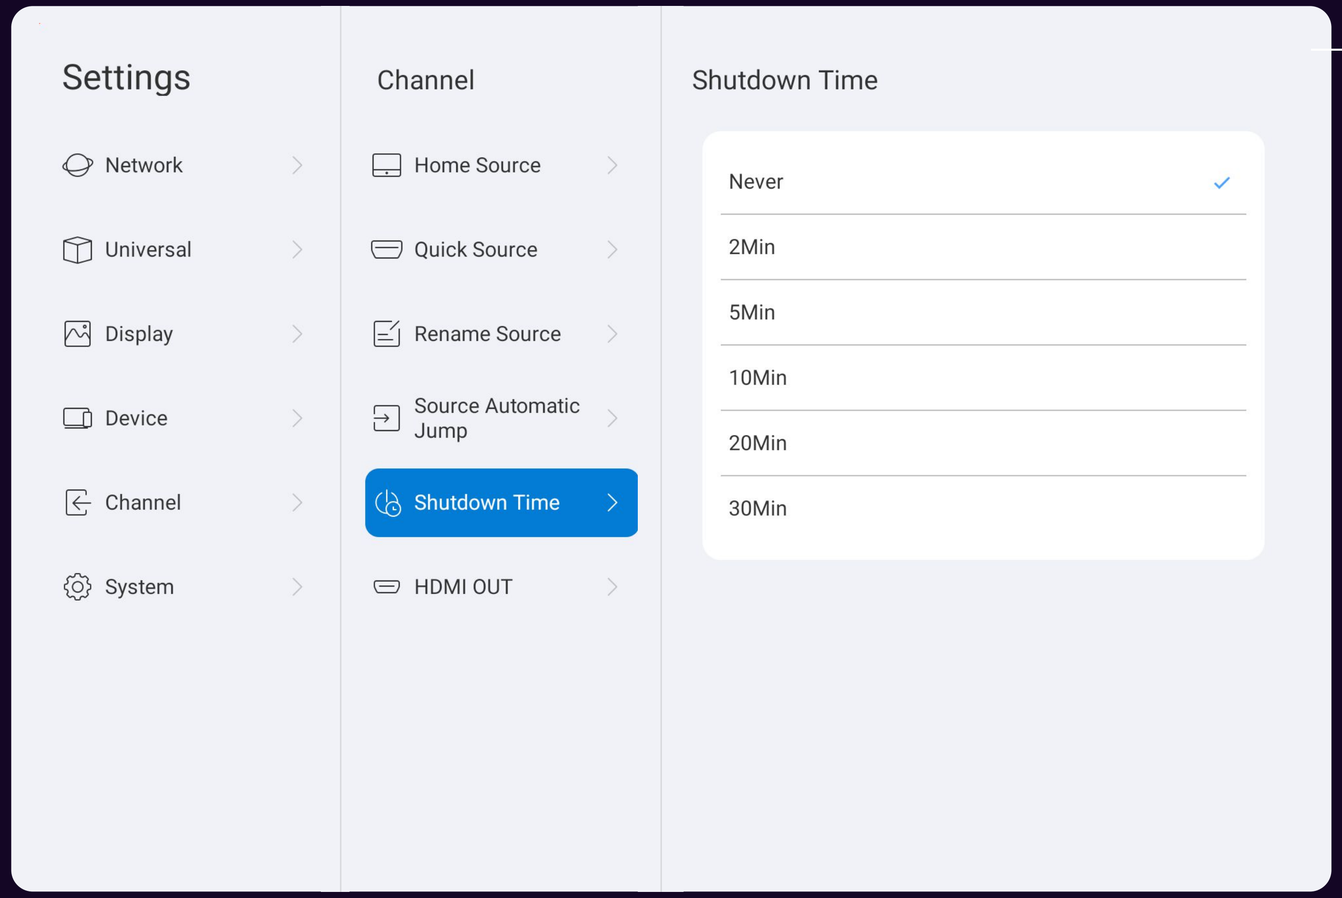

Set the automatic shutdown time of the channel when there is no signal

07-5-6 SETTINGS


HDMI Output Settings

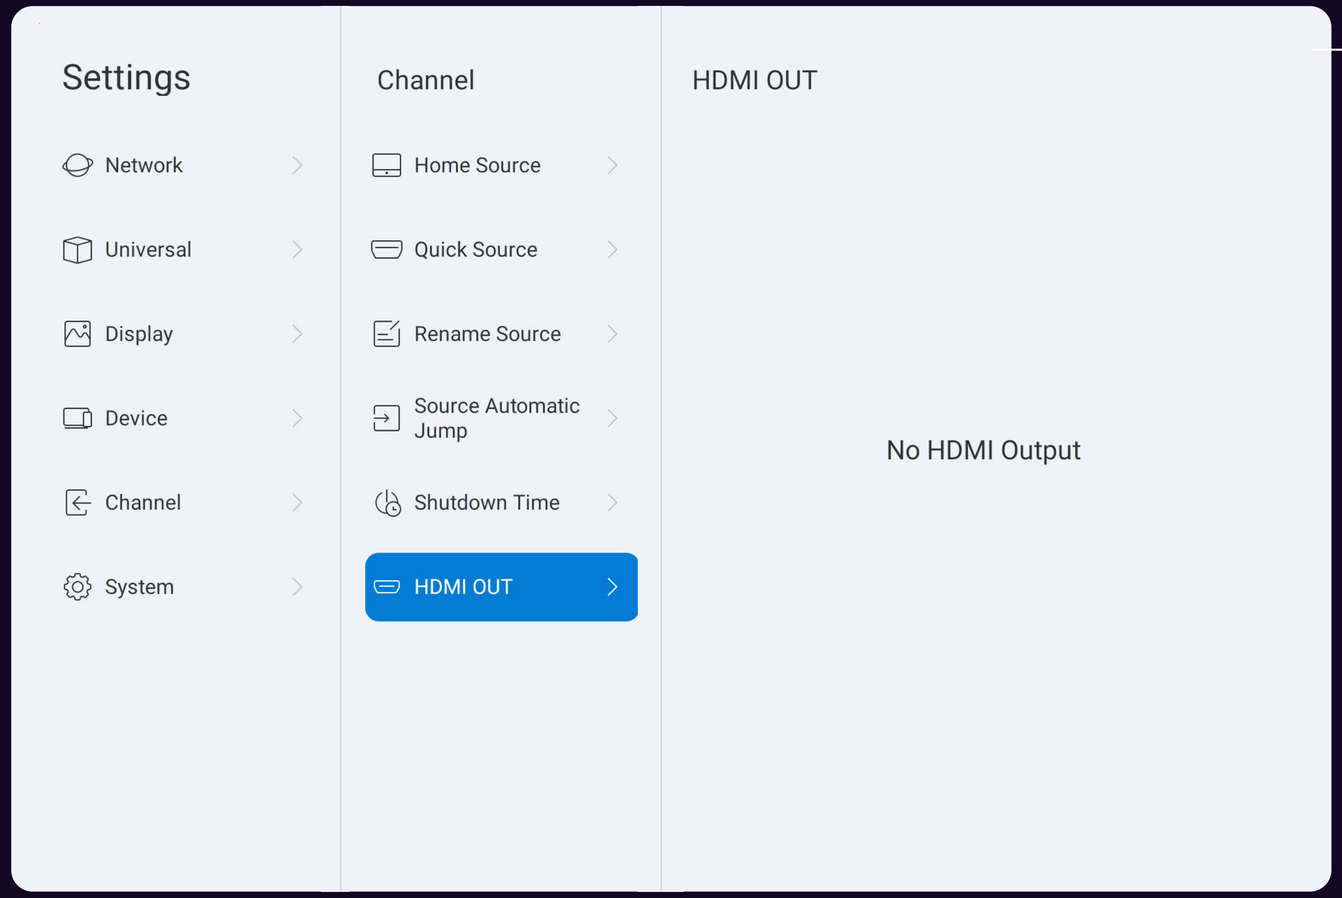

Set the HDMI OUT output resolution

07-6-1 SETTINGS

System Reset Settings

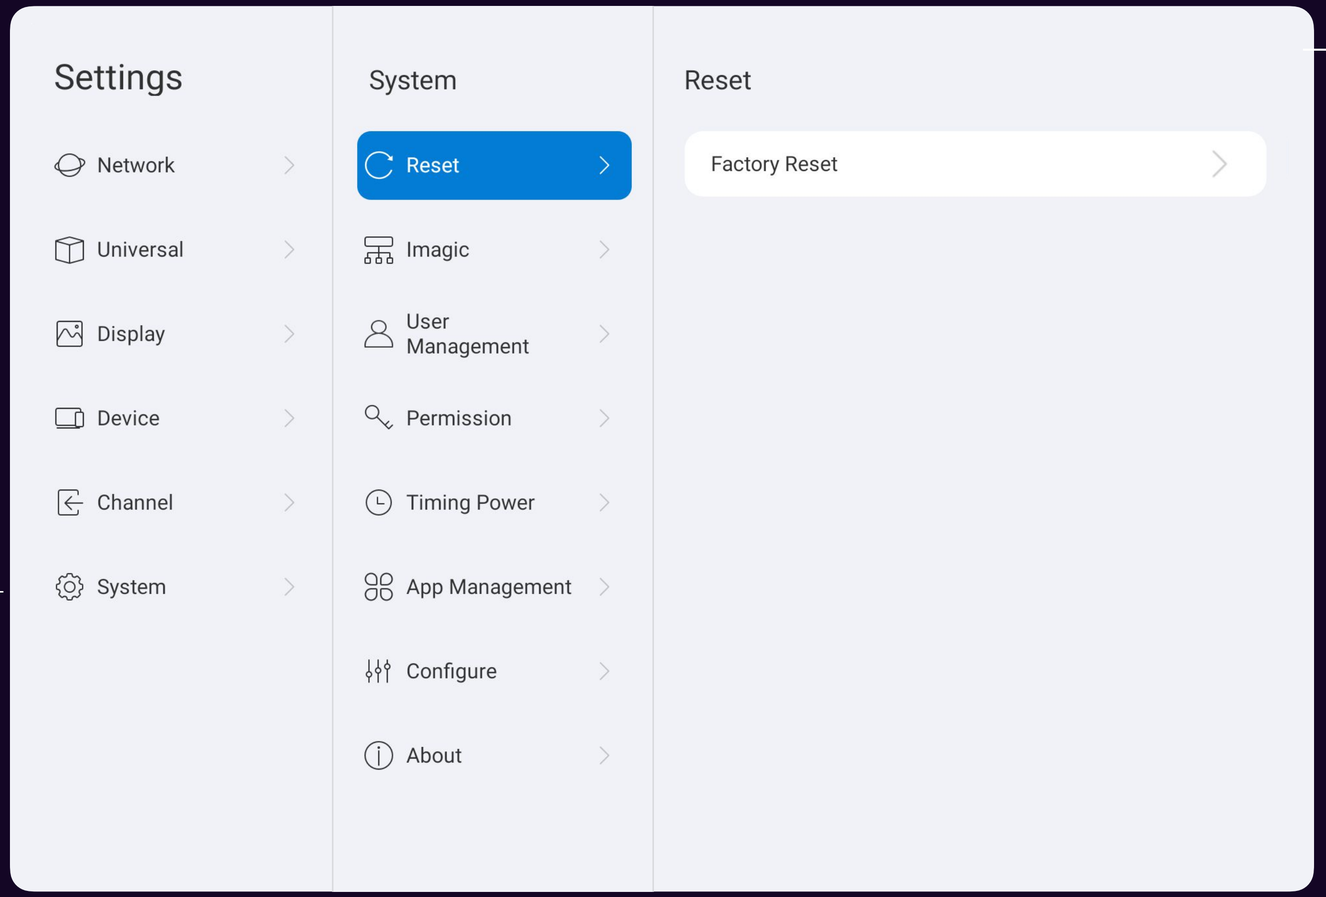


Restore the device to factory settings

View machine information, etc.

07-6-2 SETTINGS


Central Control System Settings

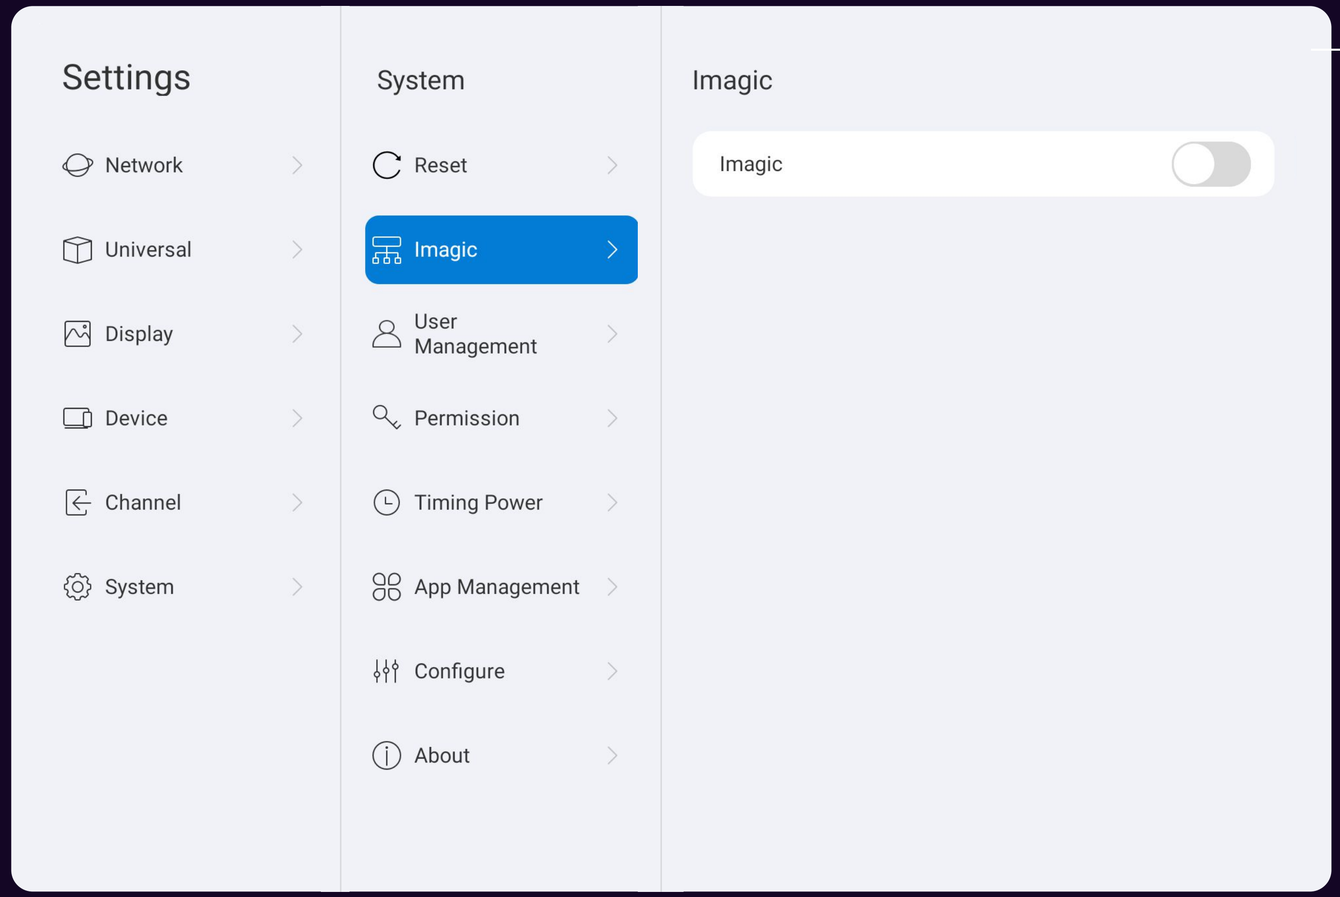

Enable central control service

07-6-3 SETTINGS


User Management Settings

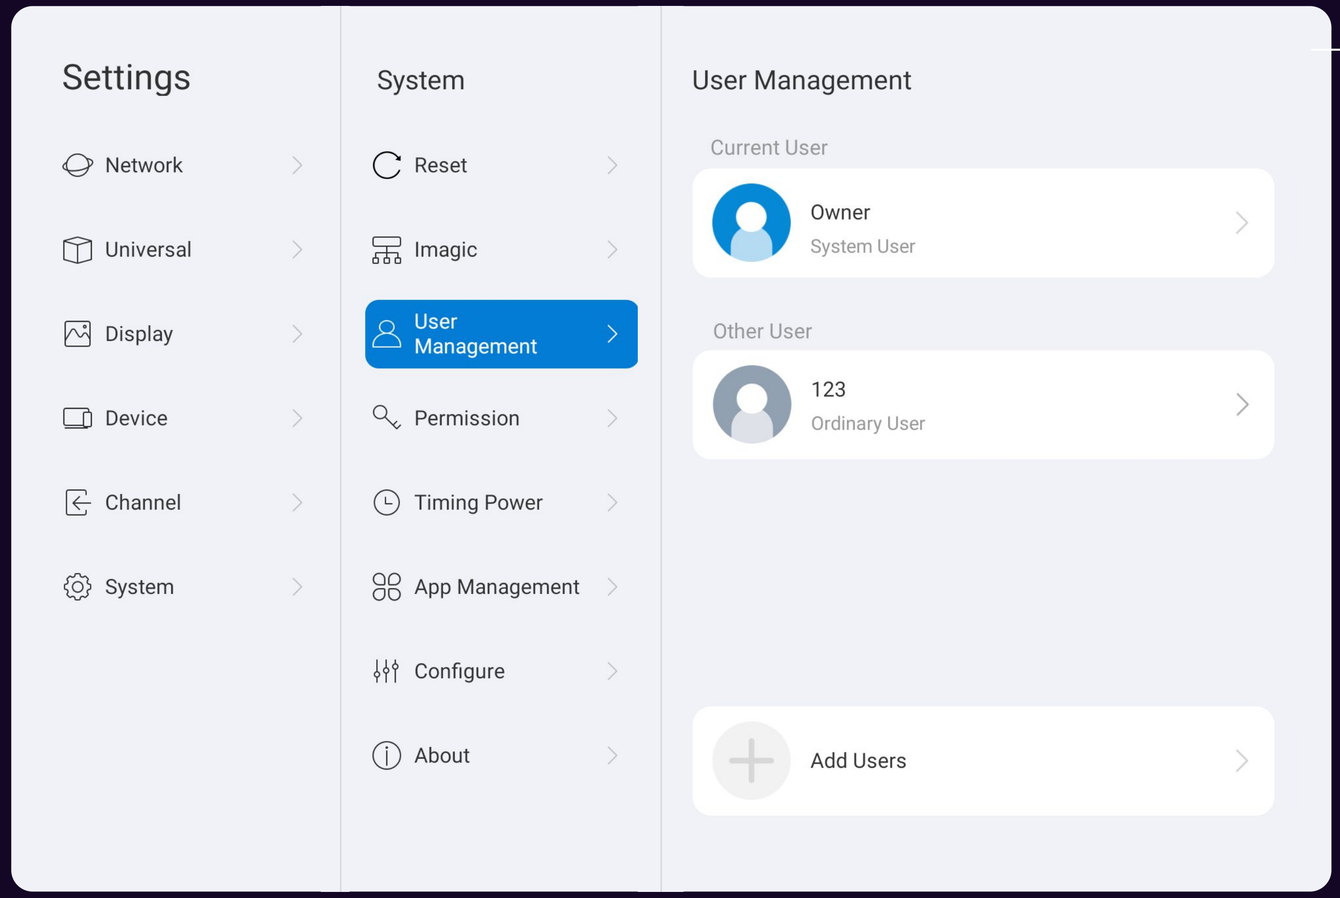

Add or delete subusers and user customization settings

07-6-4 SETTINGS


Permission and Privacy Management Settings

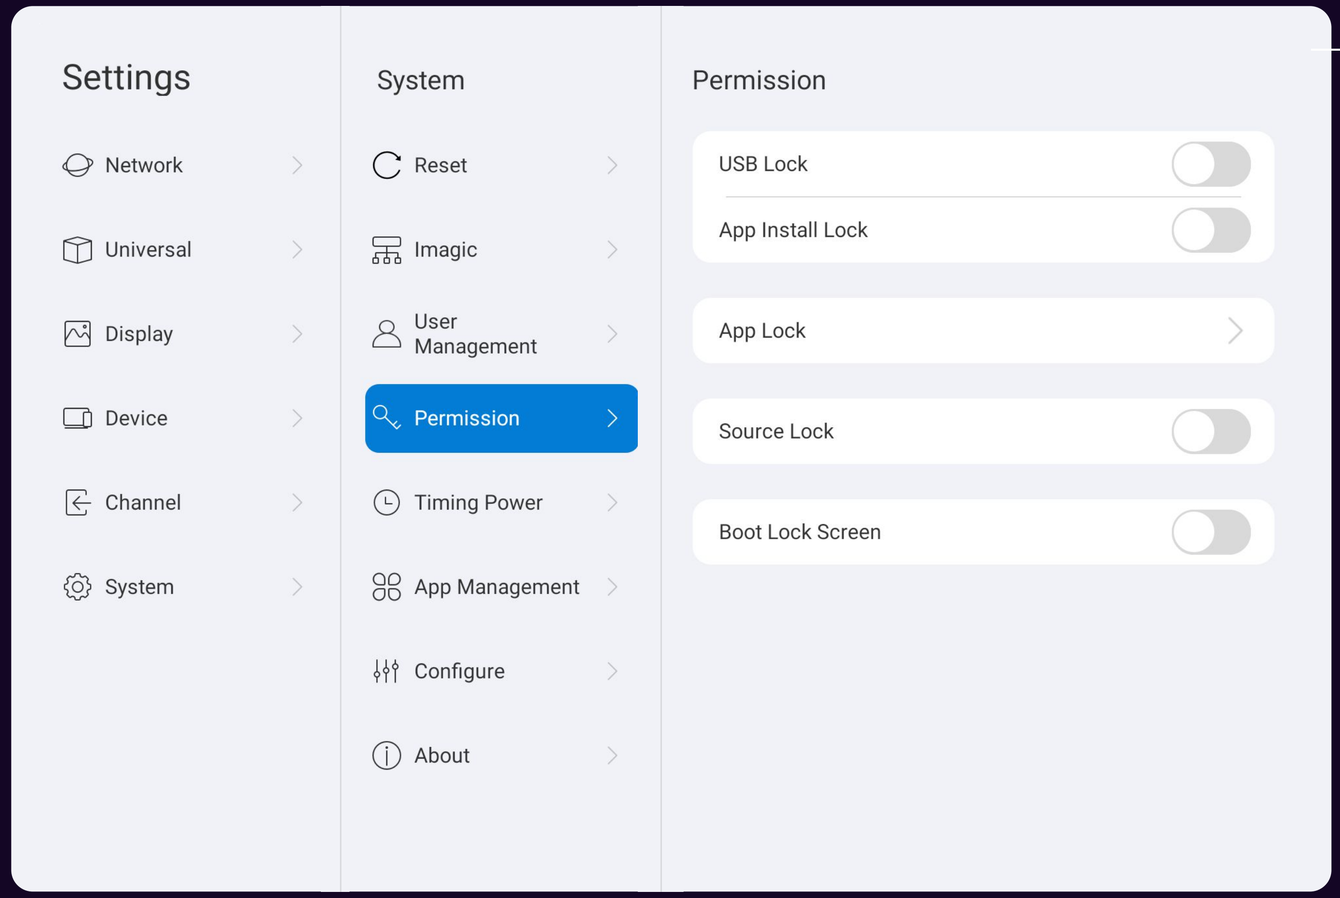

Manage system permissions and protect user privacy

07-6-5 SETTINGS


Timed Power On/Off Settings

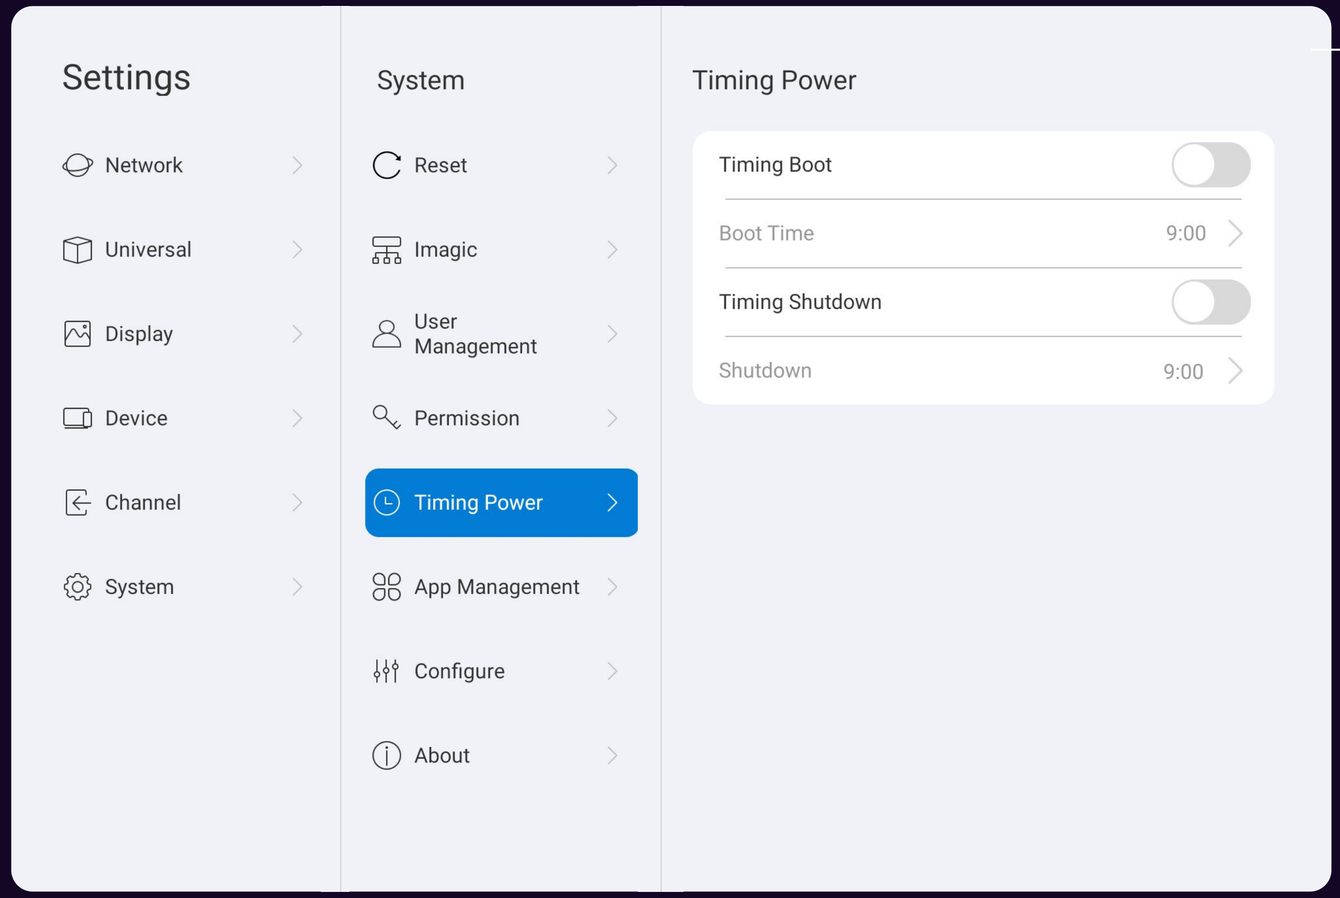

Set the device to power on or off automatically at a specified time

07-6-6 SETTINGS


Application Management Settings

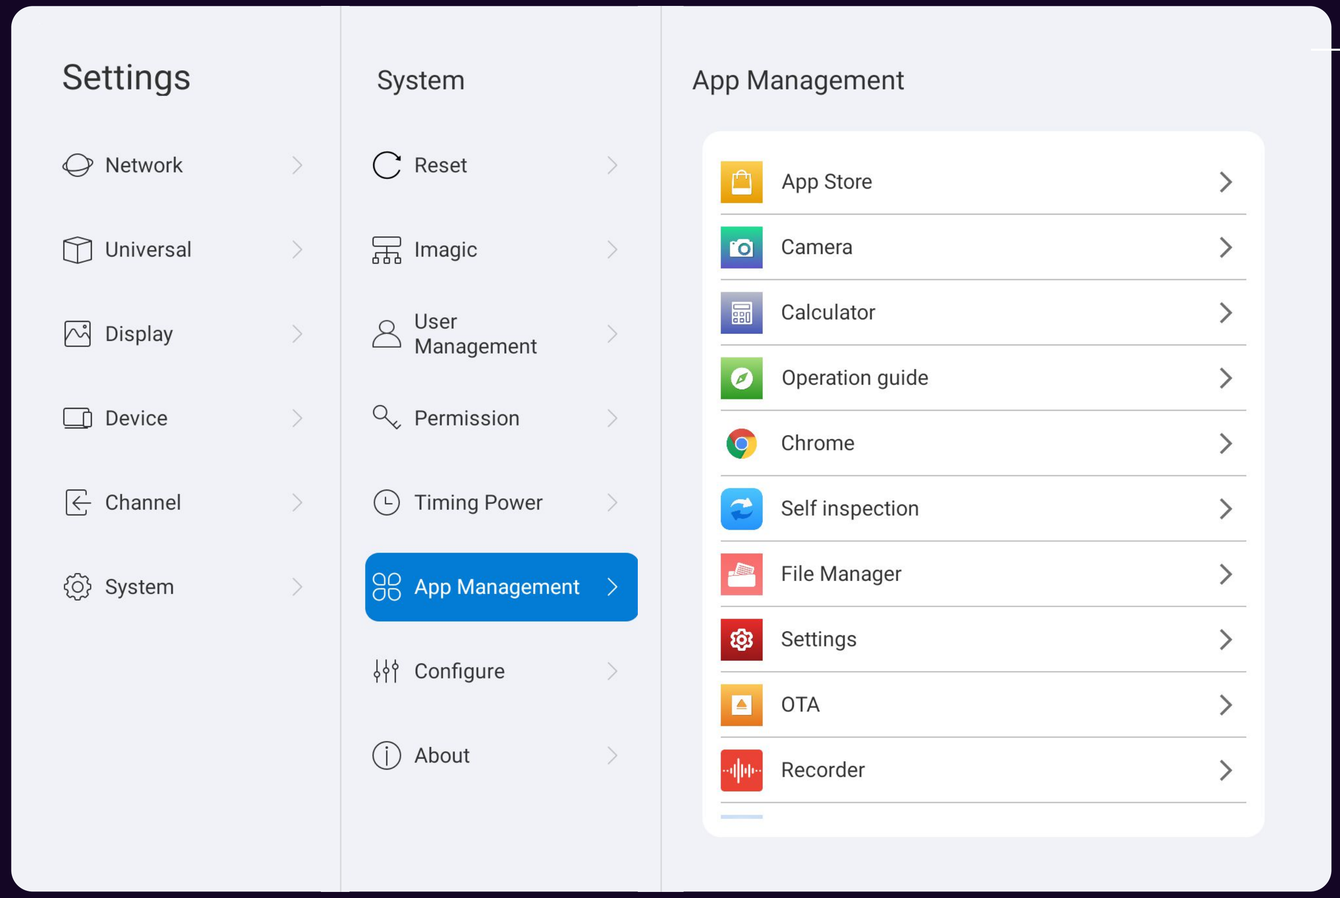

Manage and control applications

07-6-7 SETTINGS


Configuration Settings

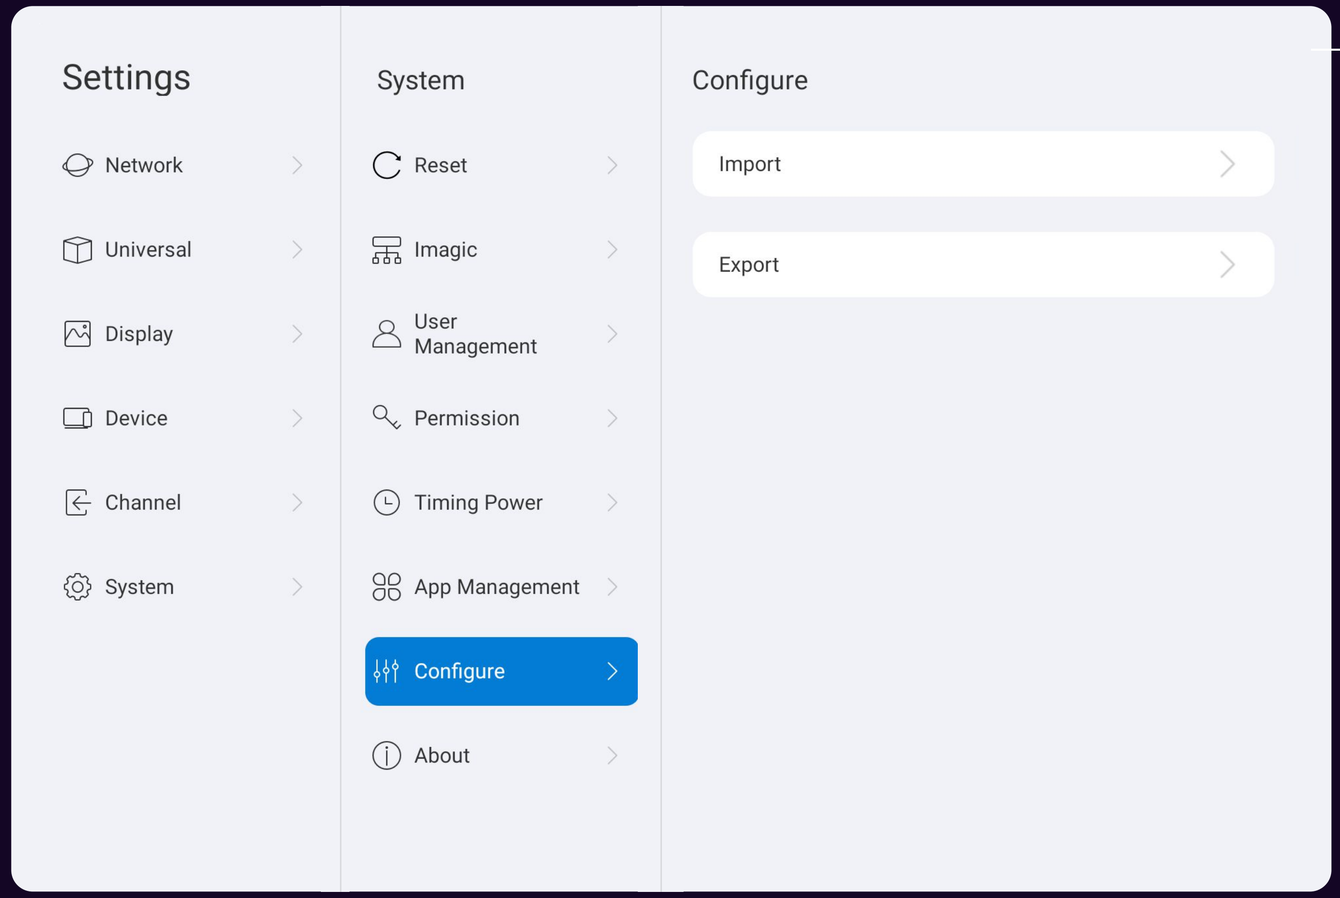

Import or export device configurations

07-6-8 SETTINGS


About This Machine

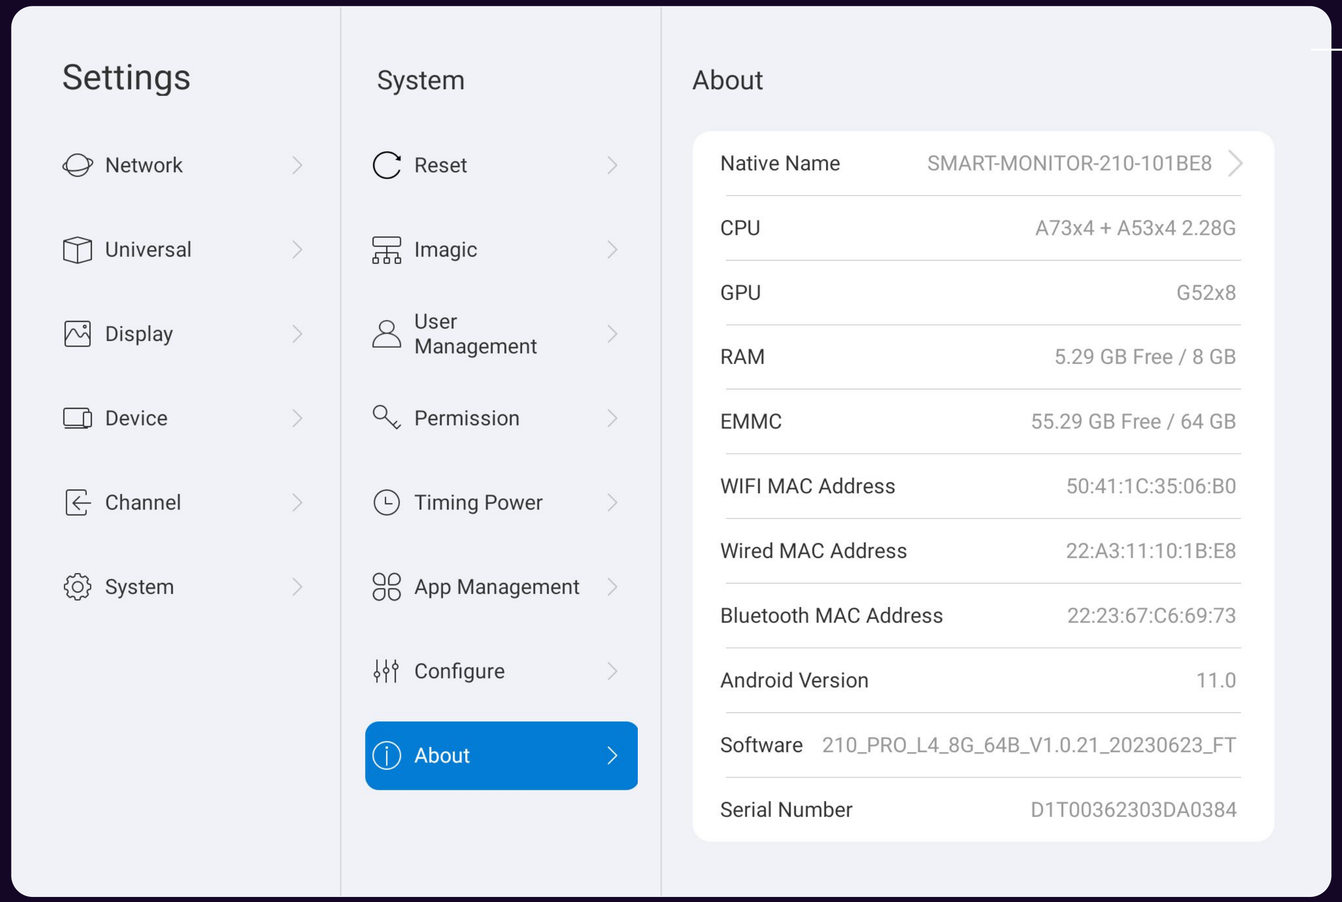

View basic device information

08-1 PORTS


Front Panel

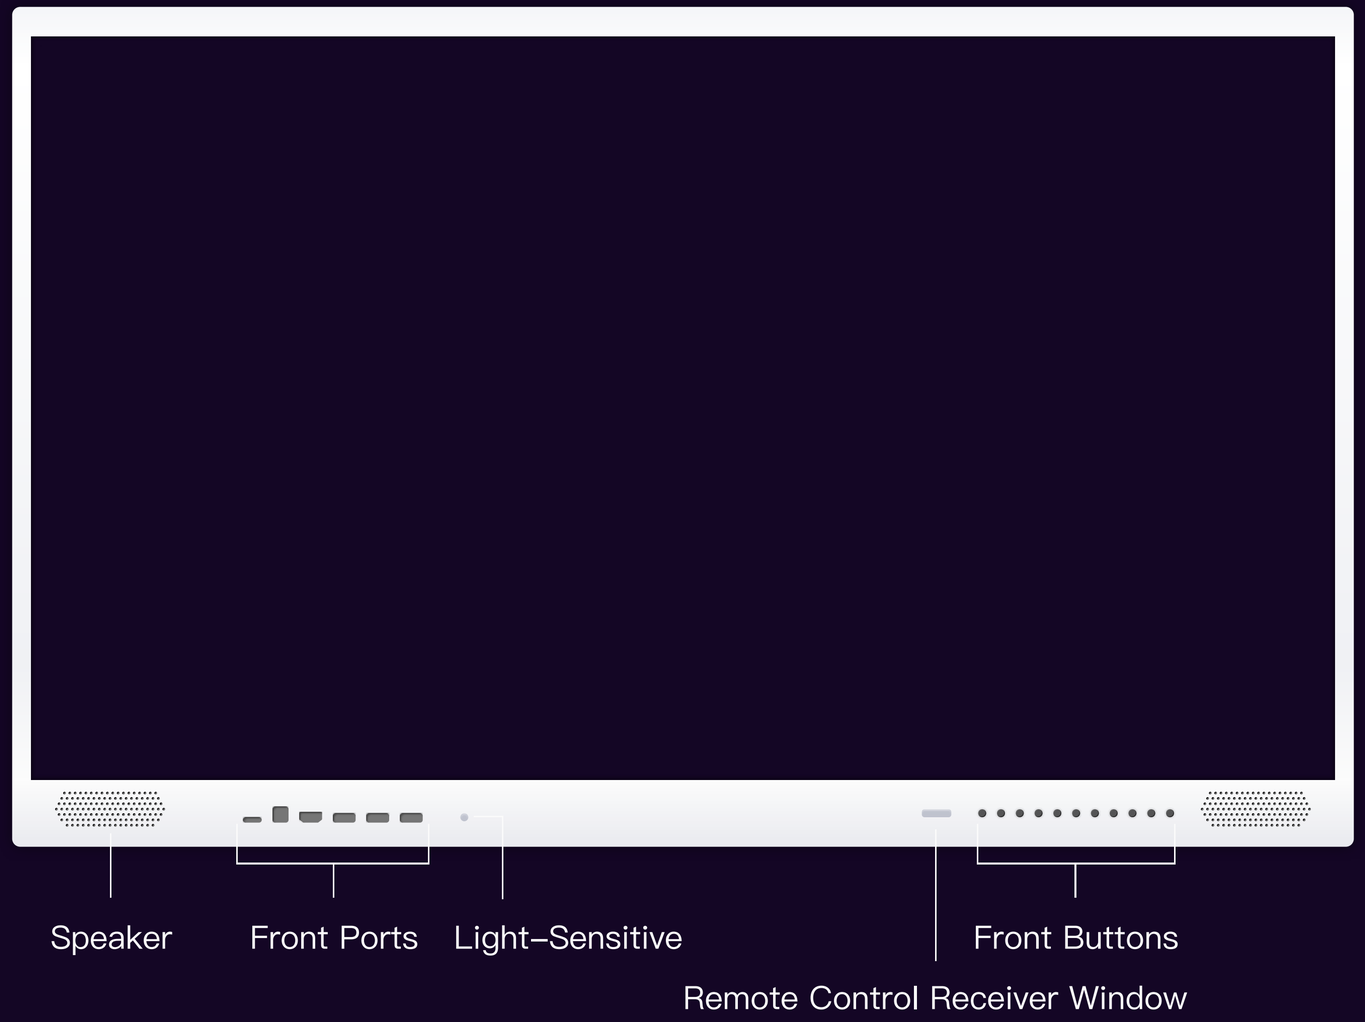

Front port numbers or button position might be different between different model of touch screens, this picture is for reference only.

08-2 PORTS

Front Ports

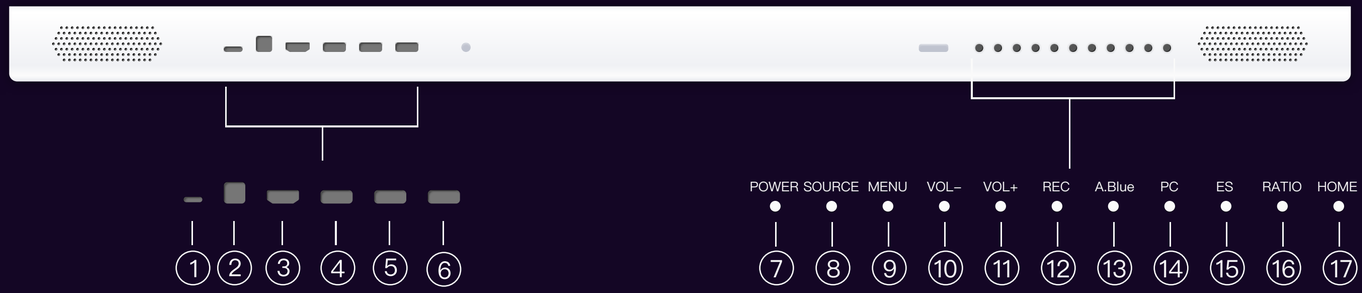


NO.	NAME	DESCRIPTION
1	TYPE-C	Front Type-C channel (supports fast charging)
2	TOUCH USB	Front HDMI3 touch output
3	HDMI 3	Front HDMI3 high definition signal input
4	USB	Android/PC 3.0USB
5	USB	Android/PC 3.0USB
6	USB	Android/PC 3.0USB

NO.	NAME	DESCRIPTION
7	POWER	Standby, power switch key
8	SOURCE	Switch between different signal channels
9	MENU	Display/exit OSD menu
10	VOL-	Reduce volume
11	VOL+	Increase volume
12	REC	Screen recording
13	A.Blue	Turn on/off blue light prevention
14	PC	Built-in OPS power on/off key (if no built-in OPS, this key is invalid)
15	ES	Enter/exit energy-saving mode
16	RATIO	Switch the screen display ratio can only be used in the channel
17	HOME	Return to the Android home page

Front port numbers or button position might be different between different model of touch screens, this picture is for reference only.

08-3 PORTS

Bottom Ports

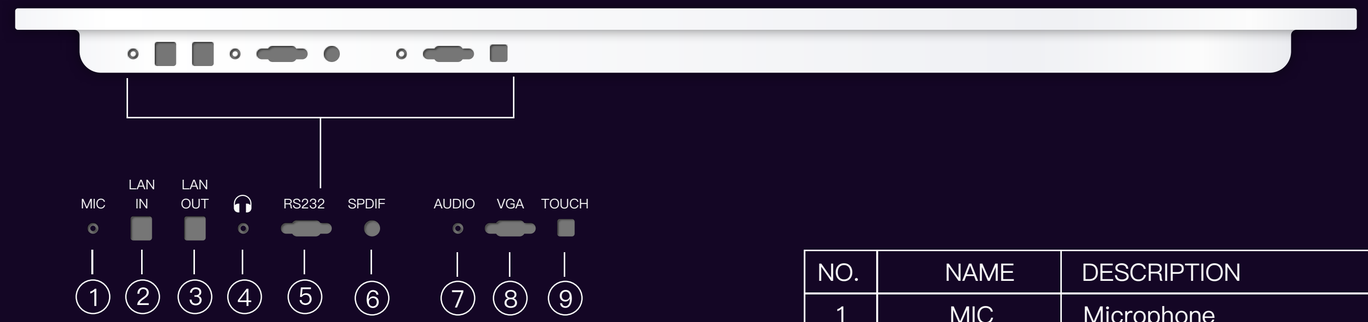


NO.	NAME	DESCRIPTION
1	MIC	Microphone
2	LAN IN	Wired network input
3	LAN OUT	Wired network output
4	🎧	Headphone/audio output
5	RS232	Serial port control
6	SPDIF	Coaxial digital audio output
7	AUDIO	VGA audio input
8	VGA	VGA signal input
9	TOUCH	VGA touch output

Front port numbers or button position might be different between different model of touch screens, this picture is for reference only.

08-4 PORTS

Side Ports

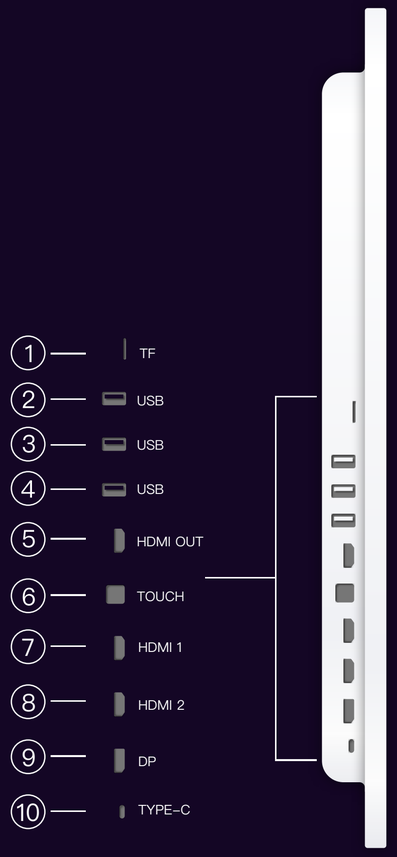


NO.	NAME	DESCRIPTION
1	TF	TF card slot, up to 64GB supported
2	USB	USB 2.0 interface
3	USB	USB 3.0 interface
4	USB	USB 3.0 interface
5	HDMI OUT	4K/2K high definition signal output
6	TOUCH	Touch output contact piece
7	HDMI 1	High definition 1 signal input
8	HDMI 2	High definition 2 signal input
9	DP	DP signal input
10	TYPE-C	Type-C signal input

Front port numbers or button position might be different between different model of touch screens, this picture is for reference only.

09 REMOTE CONTROLLER

Remote Controller Buttons

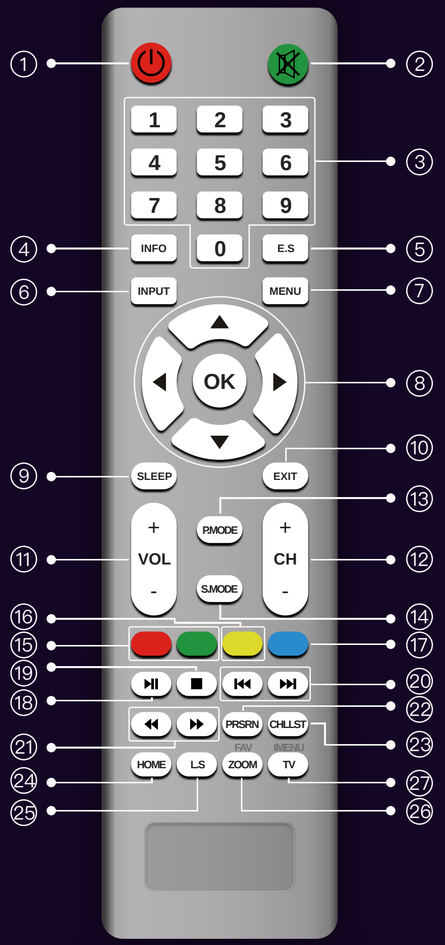

NO.	NAME	DESCRIPTION
1	POWER	Turn on/off the machine
2	MUTE	Open/close the sound
3	NUMERIC KEY	A/DTV channel selection or digital input
4	INFO	Display the current screen information
5	E.S	Turn on/off energy saving Normal sound output when energy saving
6	INPUT	Signal source channel switching
7	MENU	Enter/exit OSD menu
8	CONTROL KEY	Select up, down, left and right and confirm selection object
9	SLEEP	Set the shutdown time when the channel has no signal
10	EXIT	Exit function key
11	VOL+/−	Increase/decrease volume
12	CH+/−	Select the previous or next channel
13	P.Mode	Switch image mode
14	S.Mode	Switch sound mode
15	N/A	

NO.	NAME	DESCRIPTION
16	FREEZE	Turn on/off freezing the current screen
17	TOUCH BUTTON	Open/close touch and key functions at the same time
18	PLAY/PAUSE	Used for multimedia audio and video playback/pause
19	STOP	Used for multimedia audio and video stop playing
20	PREVIOUS/NEXT	Used for multimedia audio and video previous/next chapter
21	FORWARD/REWIND	Used for multimedia audio and video fast forward/rewind
22	PRSRN	Take a screenshot of the current screen
23	CHLLST	Used for A/DTV signal channel list display
24	HOME	One-click return to the Android homepage
25	L.S (LIGHT SENSOR)	Turn on/off light sensing
26	ZOOM	Adjust the screen display ratio (non-Android)
27	TV	One-key quick jump to ATV signal (device supports ATV channel)