
TrackMix Series G770


TrackMix Series G770 is a dual-lens camera working on 4G LTE network and it can capture sharper and finer details with 4K 8MP high resolution. With battery or solar power, you can bring this camera to any place and enjoy its rich features, including smart detection, auto-tracking, two-way audio, and more.

1. Specs

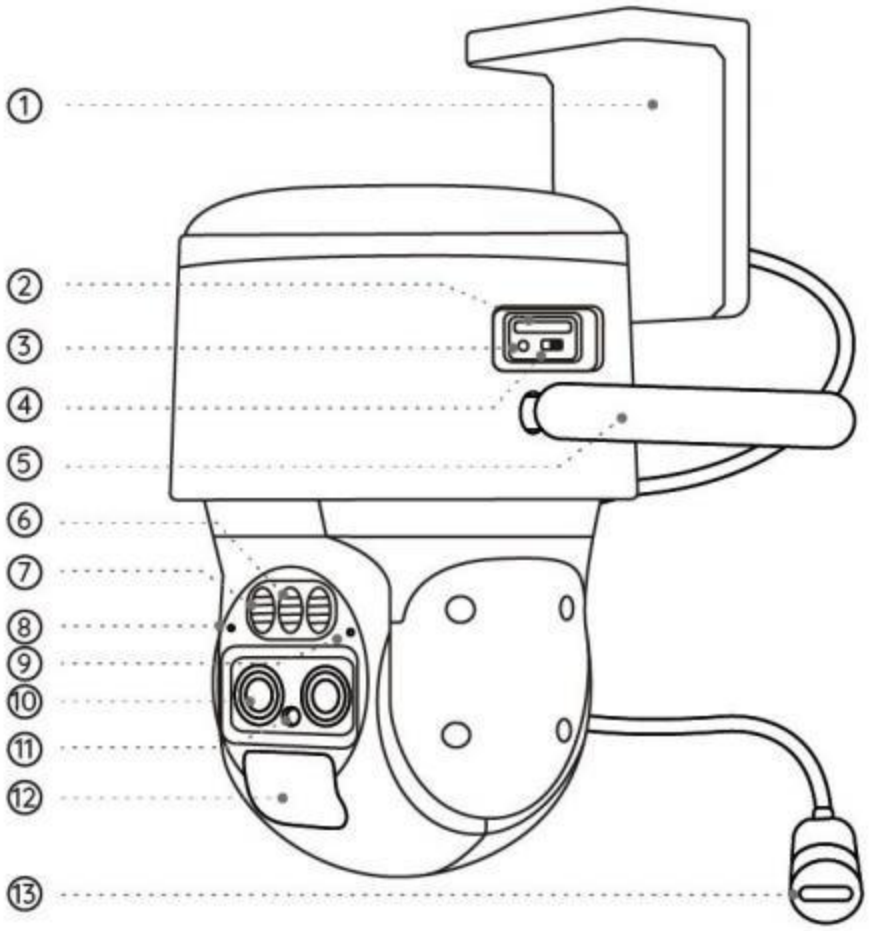

1	Mount
2	SIM Card Slot
3	Reset Button
4	Power Switch
5	Antenna

6	Spotlight
7	Infrared LED
8	Mic
9	Status LED
10	Lens
11	Daylight Sensor
12	PIR Sensor
13	Power Port

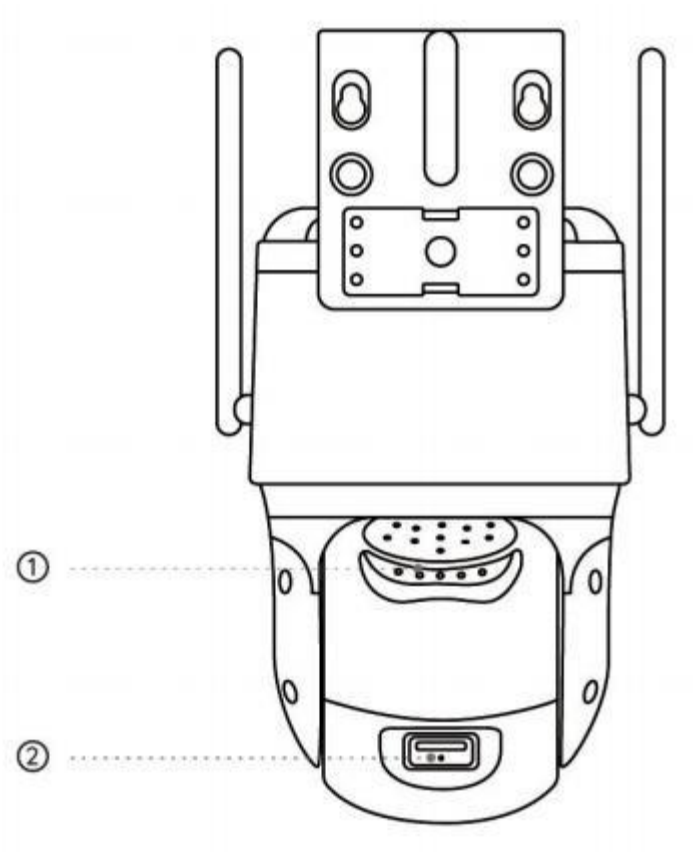

1	Speaker
2	microSD Card Slot

2. Setup and Install

Set up the Camera


What's in the Box

Note: The package content may vary and update with different version and platforms, please take the below information only for a reference. And the actual package content are subject to the latest information on the product selling page.


Track Mix Series G770



Track Mix Series G770

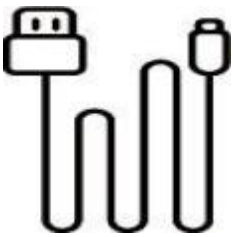

USB Cable

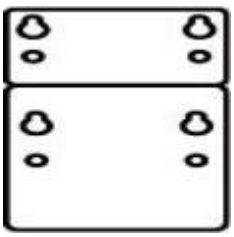


Mounting Hole Template Template




Quick Start Guide




Surveillance Sign

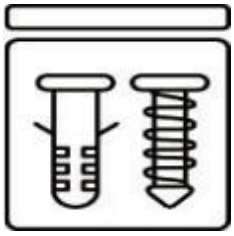

Pack of Screws

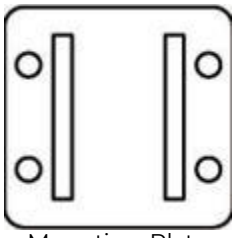

Mounting Plate

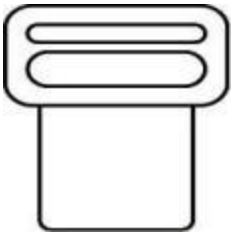

Strap

Set up the Camera on the App


Please follow the steps below to do initial setup for the battery-powered cameras via Reolink App.

Step 1. Activate the SIM card for the camera.


- Choose a Nano SIM card that supports WCDMA and FDD LTE.
- Some SIM cards have a PIN code, please use your smartphone to disable the PIN first.
- Do not insert IoT or M2M SIM card into your smartphone.

Step 2. Insert the SIM card into the camera.


- Remove the cover with the screwdriver.

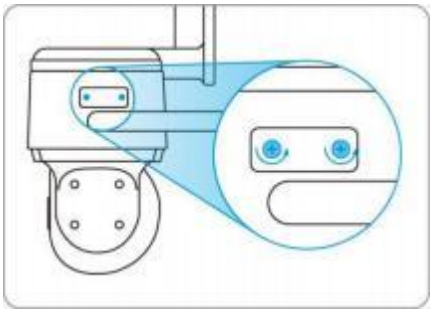

- Insert a SIM-eject tool into the hole beside the SIM tray and push it in to pop open the tray. Place the SIM card into the tray, then insert the tray into the camera completely.

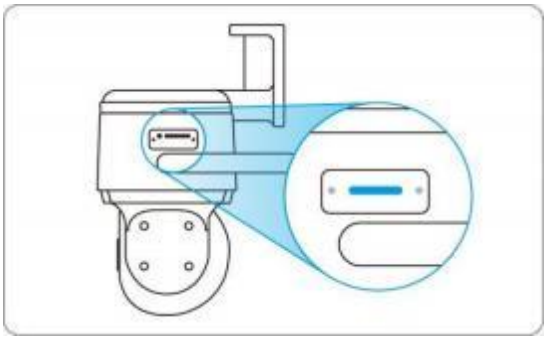


Step 3. Use the power adapter provided to power on the camera.

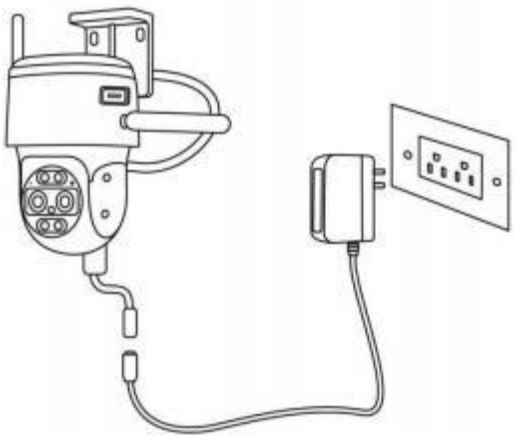


Step 4. Register the SIM card.

- With the SIM card inserted, wait a few seconds and a red light will be on and solid for a couple of seconds. Then, it will go out.

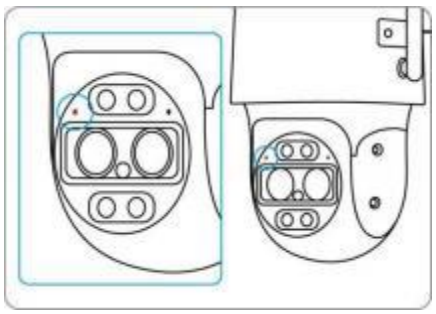

l A blue LED will flash for a few seconds and then go solid before going out. You will hear a voice prompt “Network Connection Succeeded”, which means the camera has been successfully connected to the network.

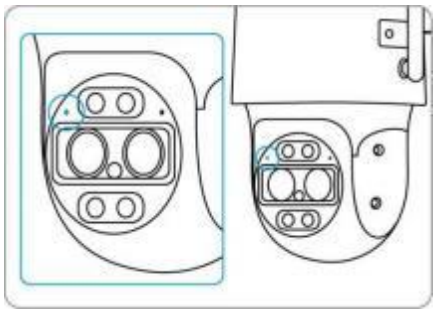

Note:

You may also run into the following situations:

No.	Voice Prompts	Camera Status	Solutions
1	“SIM card cannot be recognized”	Camera cannot recognize this SIM card.	1. Check if the SIM card is facing the reverse direction. 2. Check if the SIM card is not fully inserted and insert it again.
2	“The SIM card is locked with a PIN. Please disable it”	Camera cannot recognize this SIM card.	Put the SIM card into your mobile phone and disable the PIN.


3	“ Not registered on network. Please activate your SIM card and check the signal strength”	Camera fails to register to the operator network.	1. Check whether your card is activated or not. If not, please call your operator to activate the SIM card. 2. The signal is weak at the current position. Please move the camera to a location with better signal. 3. Check ifyou are using the correct version of the camera.
4	“ Network connection failed”	Camera fails to connect to the server.	The camera will be in standby mode and reconnect later.
5	“ Data call failed. Please confirm your cellular data plan is available or import the APN settings”	The SIM card has run out of data or APN settings are not correct.	1. Please check whether the data plan for the SIM card is still available. 2. Import the correct APN settings to the camera.

Step 5. Add the camera to the Reolink App.


l Tap the icon in the top right corner to add the camera.




l Scan the QR code on the bottom of the camera. If the phone doesn't respond, please tap **Input UID/IP** below the scan window, and then enter the 16-digit UID number under the QR code of the camera.

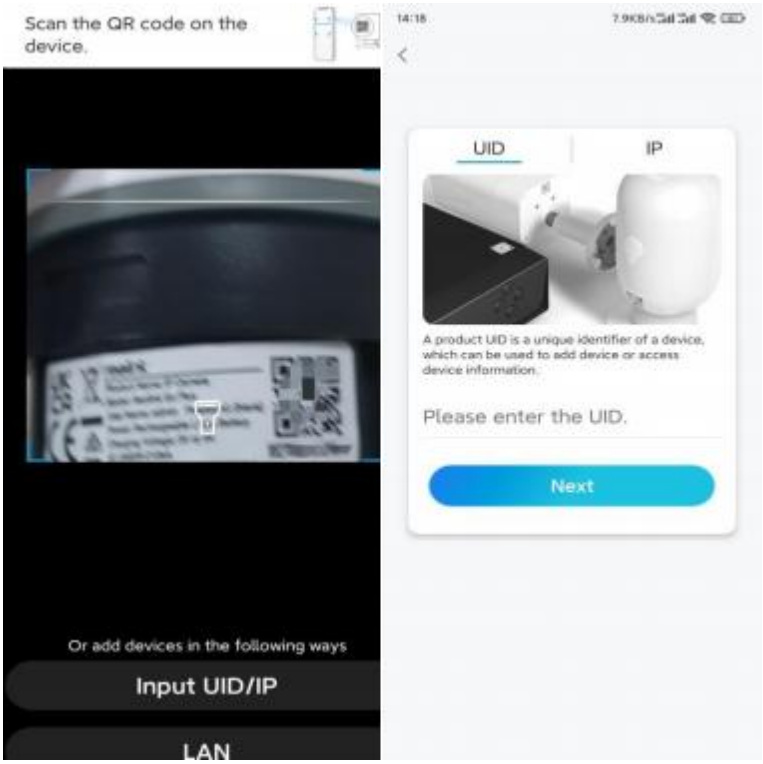

l Create a login password and name your camera. Then tap **Next**.

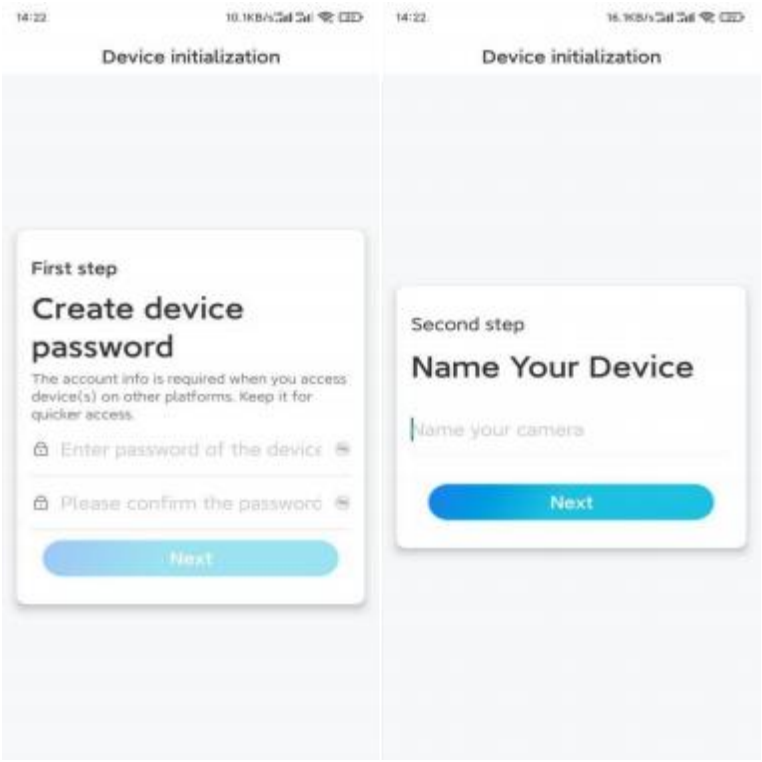

l Read the note and then tap **Finish** to complete the initialization of your camera.

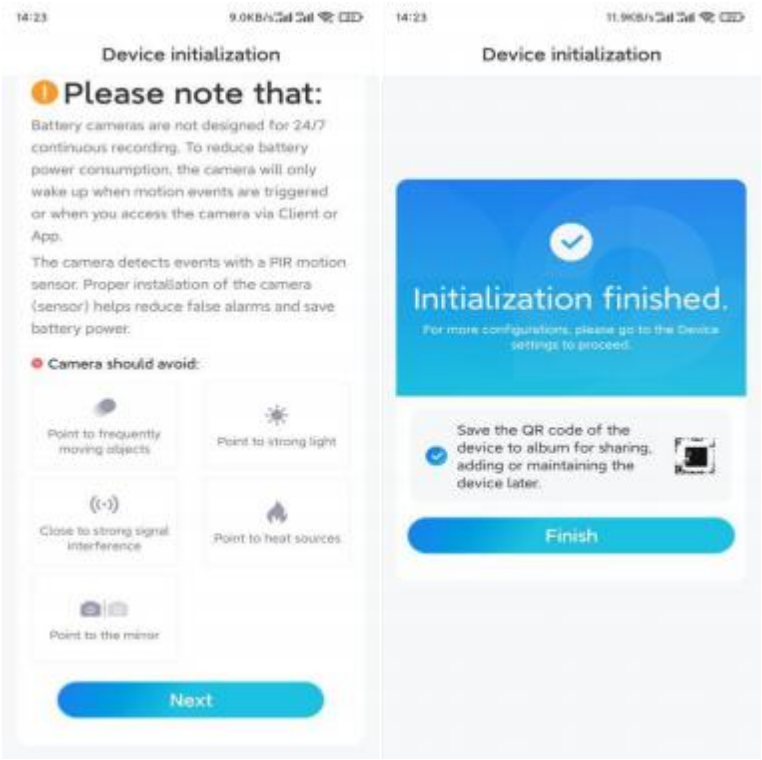


Now the initialization is finished and you can move it to the position you want. Here is an article to choose a good position for the camera.

Install the Camera

Following the excitement of setting up your Track Mix Series G770, you will face up the installation of the camera. So we are here to help you with guides on how to mount the Track Mix Series G770 on the wall or the ceiling. It's up to you.

Mount the Camera on the Wall


Step 1. Stick the mounting hole template on the wall and drill holes correspondingly.
Step 2. Screw the mount base to the wall using the screws included in the package.
Step 3. You may control the camera to pan and tilt via Reolink App or Client to adjust the camera's direction.

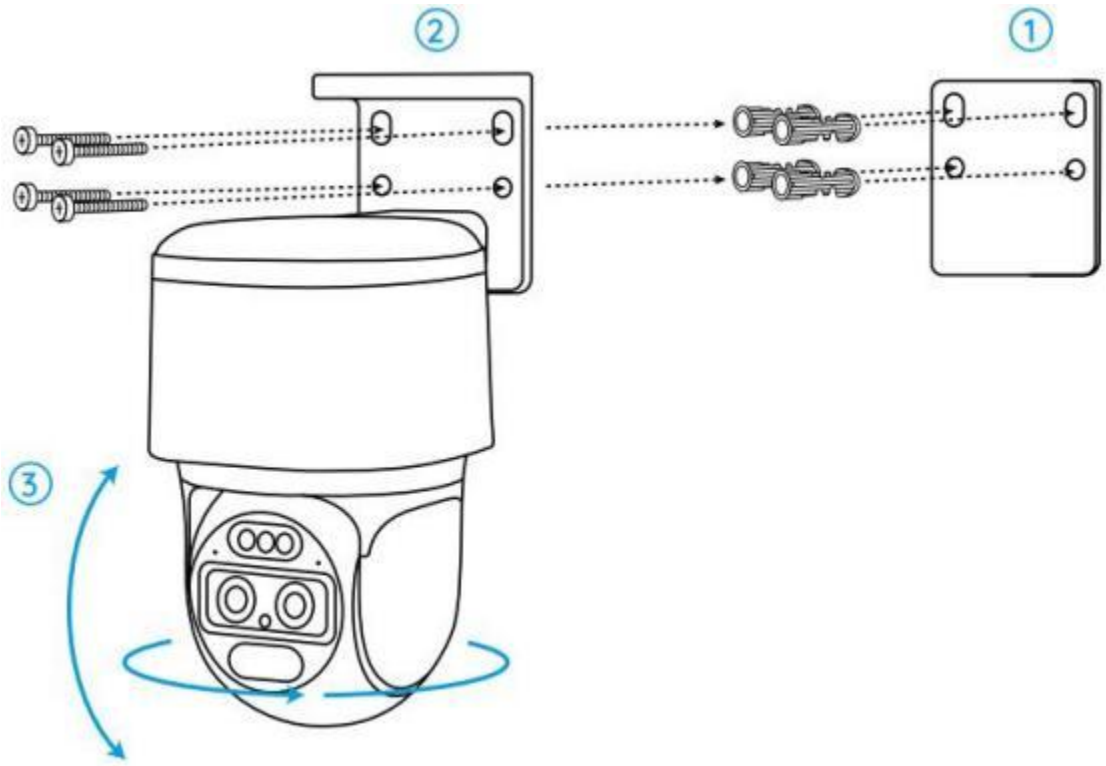

Note: If you install the camera on a pretty hard surface such as drywall, use the drywall anchors included in the package.

Mount the Camera on the Ceiling


Step 1. Stick the mounting hole template on the ceiling and drill holes correspondingly.
Step 2. Install the mount base to the wall using the screws included in the package.
Step 3. Adjust the camera's direction by controlling the camera to pan and tilt via the Reolink App or Client.

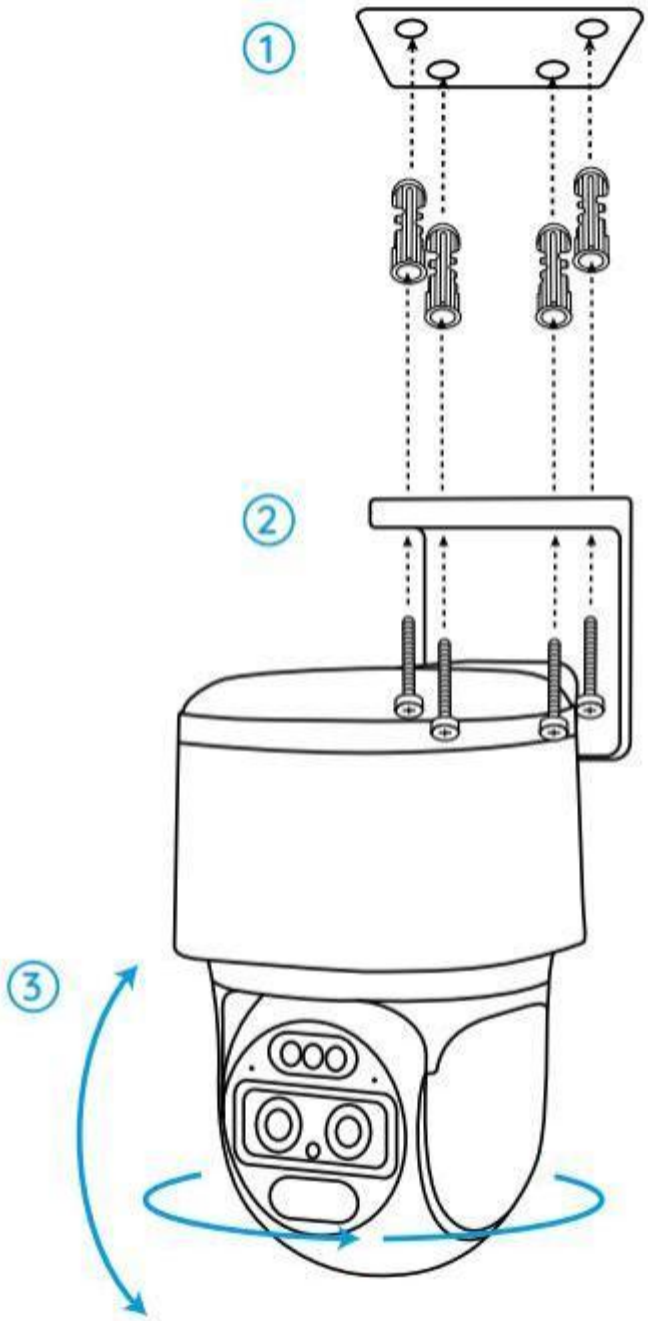



Note: Use the drywall anchors included in the package if needed.

Install the Camera with Loop Strap

Secure the mounting plate to the mount base with screws and run the provided strap through the plate.

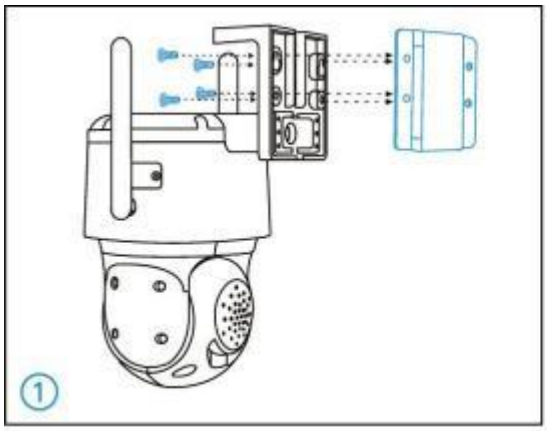
1

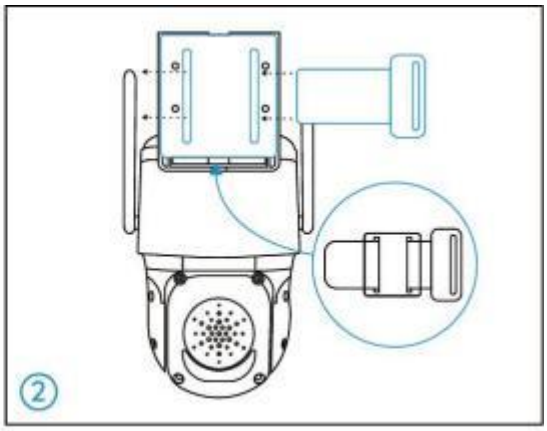
2

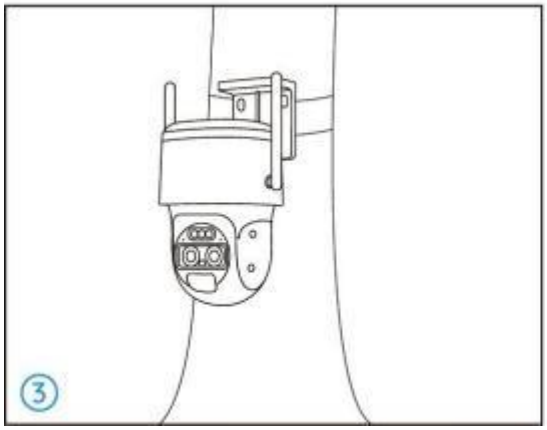
3