
NVS36

A multi-channel network video recorder is important for multi-location monitoring, especially for a larger area. This Reolink 36-channel NVR can be connected to 36 working cameras at the same time, all with up to 12MP resolution supported. It also has additional alarm in/out channels for you to customize various detecting/responding modes. The massive data produced can be safely stored into up to three Max. 16TB HDDs (purchased separately). Get ready to have a centralized easy monitoring!

1. Specs



1	USB Port
2	Power/HDD LED
3	Control Panel

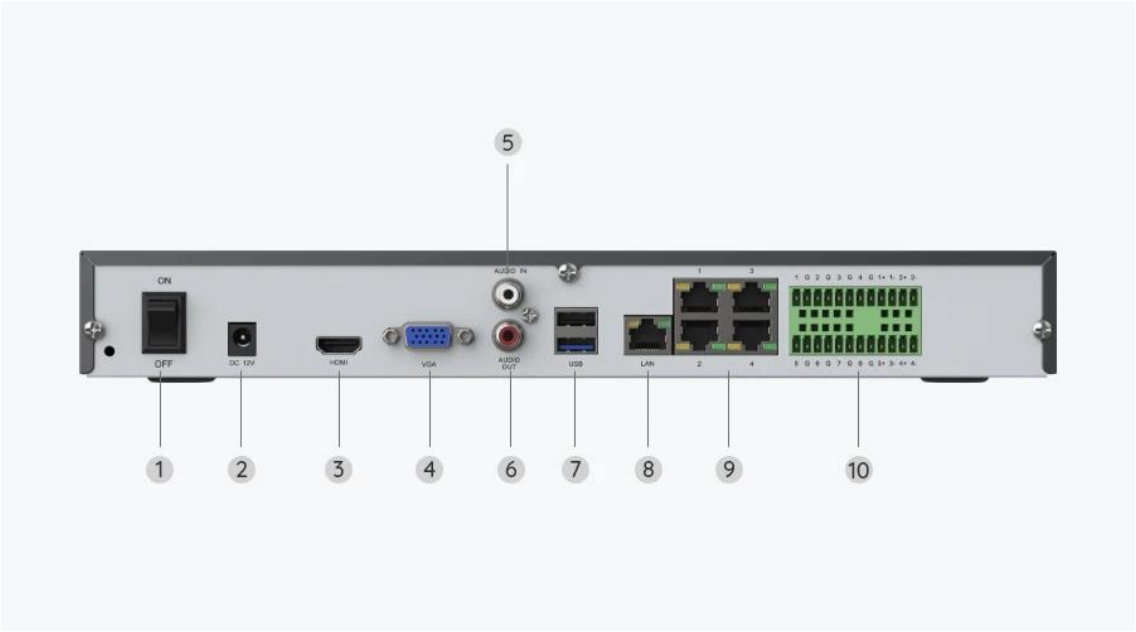

1	Power switch
2	Power Input
3	HDMI
4	VGA
5	Audio In
6	Audio Out
7	USB Ports
8	LAN Port
9	Ethernet Port
10	Alarm In/Out

2. Setup and Install

Set up the System

What's in the Box

Note: The package content may vary and update with different version and platforms, please take the below information only for a reference. And the actual

package content are subject to the latest information on the product selling page.
NVS36



NVS36



NVR Power Adapter



HDMI Cable



USB Mouse



1m Network Cable




Quick Start Guide




Pack of Screws

Connection Diagram

Before initialization, please power on and connect the cameras to the NVR.
1. Connect the NVR's LAN port to router with an Ethernet cable, and connect the mouse to the USB port of the NVR.

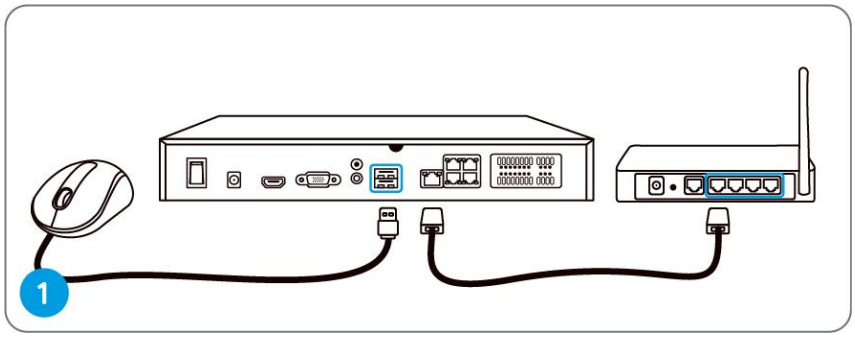


2. Connect the NVR to a monitor via an HDMI/VGA cable.
Note: There is no VGA cable included in the package.

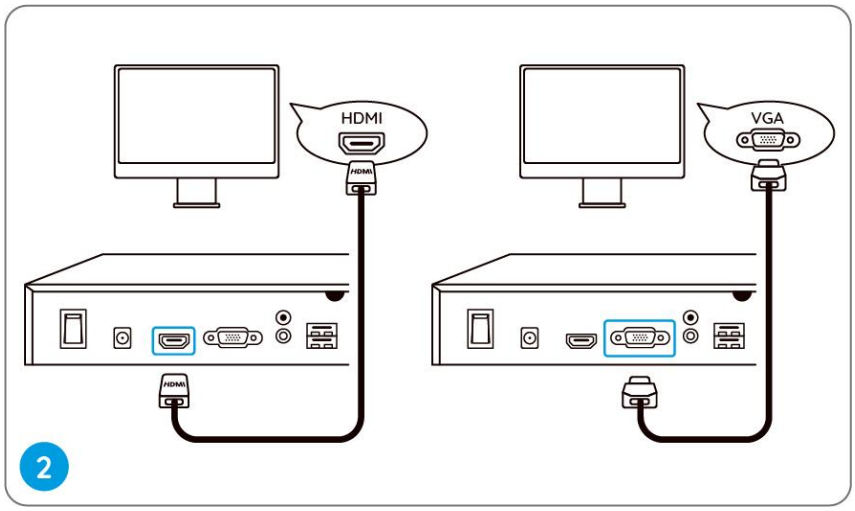


3. Connect the PoE switch to the NVR and power on the PoE switch. Then connect

the camera to the PoE switch via an Ethernet cable.

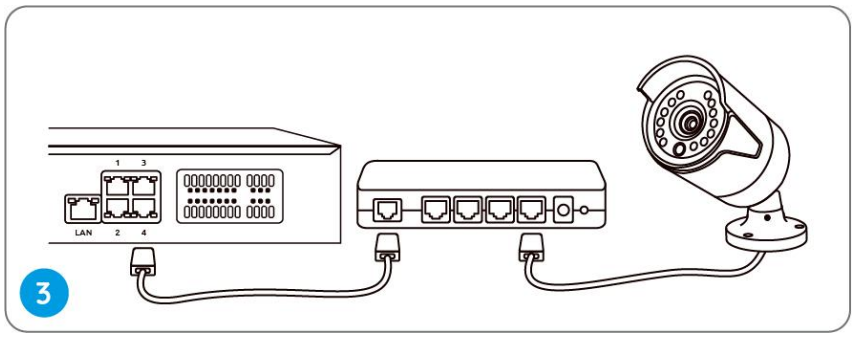


4. Connect the power adapter to the NVR, and switch on the NVR.

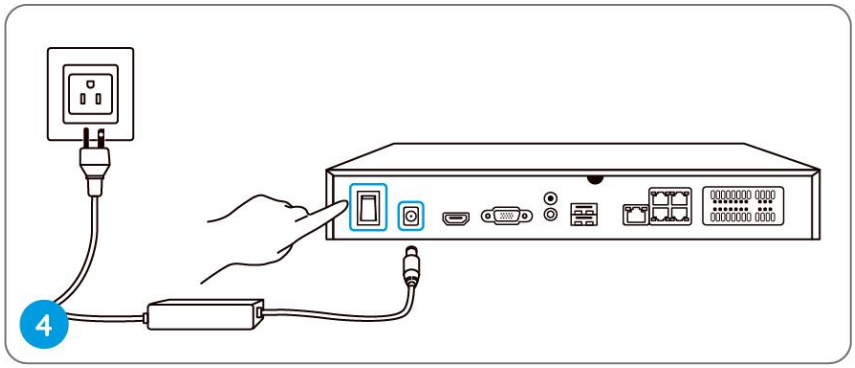


Set up NVR System on the Monitor

A setup wizard will guide you through the NVR system configuration process. Please set a password for your NVR (for the initial access) and follow the wizard to configure the system.


Step 1. After turning on the NVR system, you will see the splash screen below. System booting up might take a few seconds.

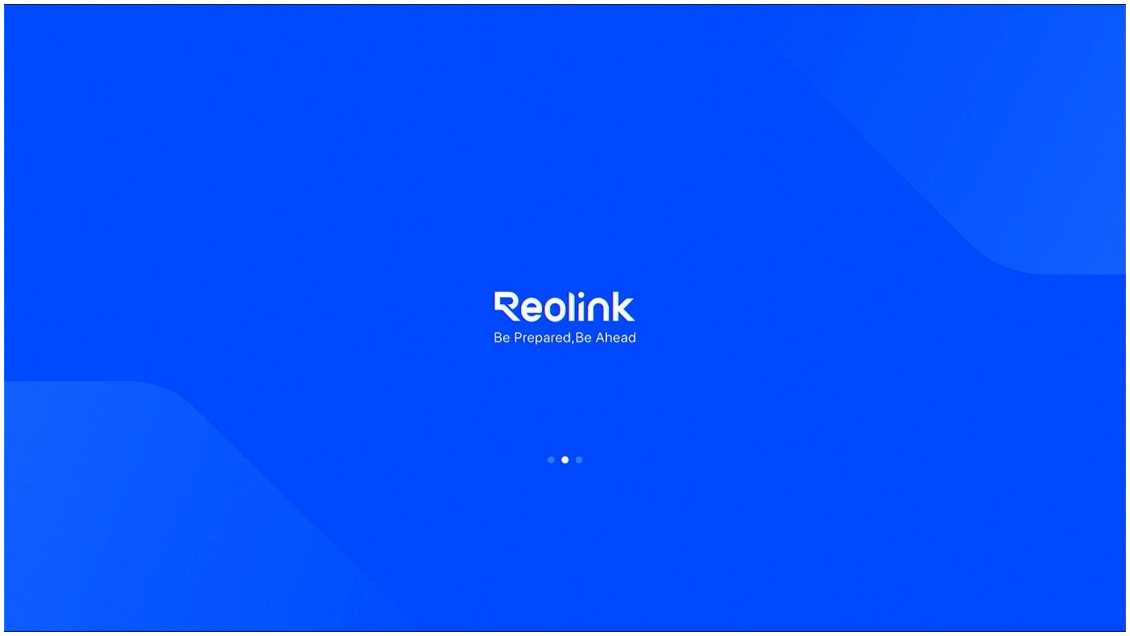


Step 2. General configurations. Set up the language, screen resolution, date format , time format and so on. Then click **Next**.

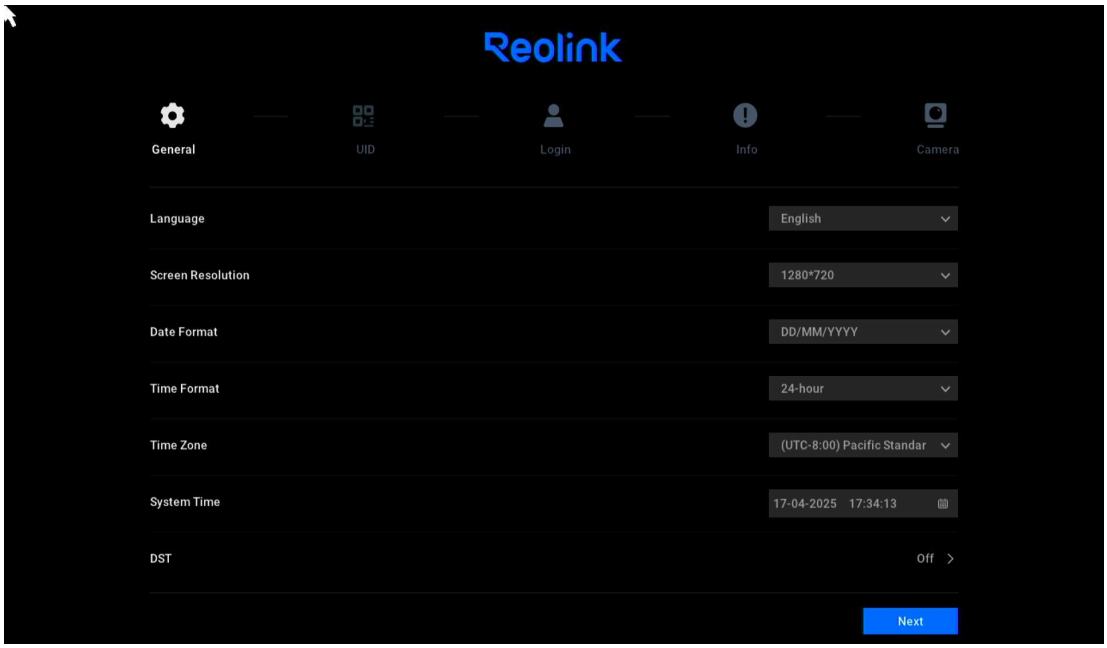


Step 3. UID settings. Choose whether to allow Reolink App/Client to access the device via WAN using UID. Then click **Next**.

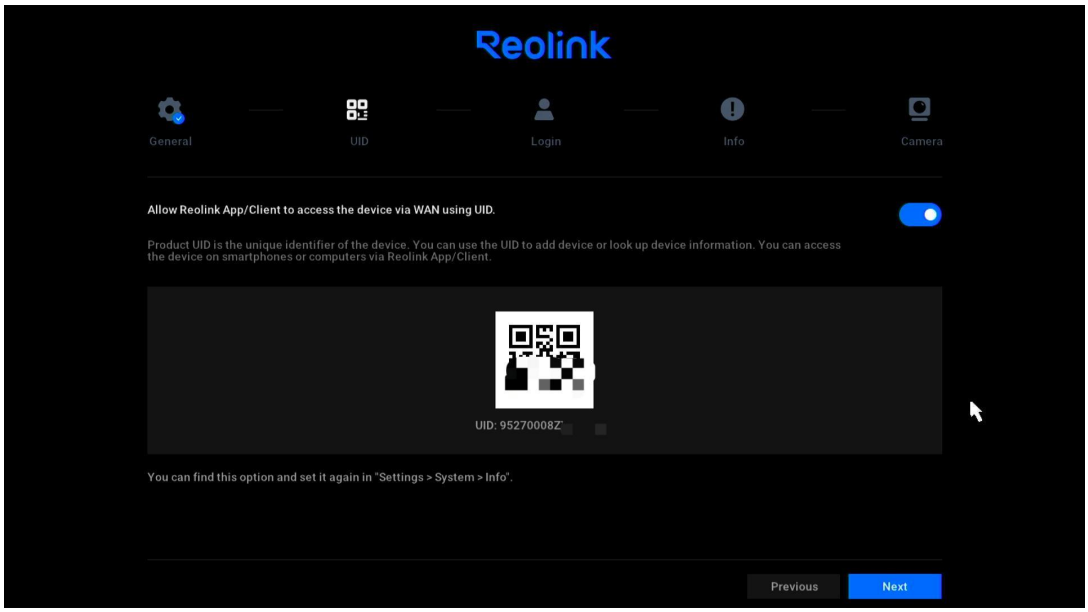


Step 4. Create a password for your NVR, and enable/disable screen auto-lock. Then click **Next.**

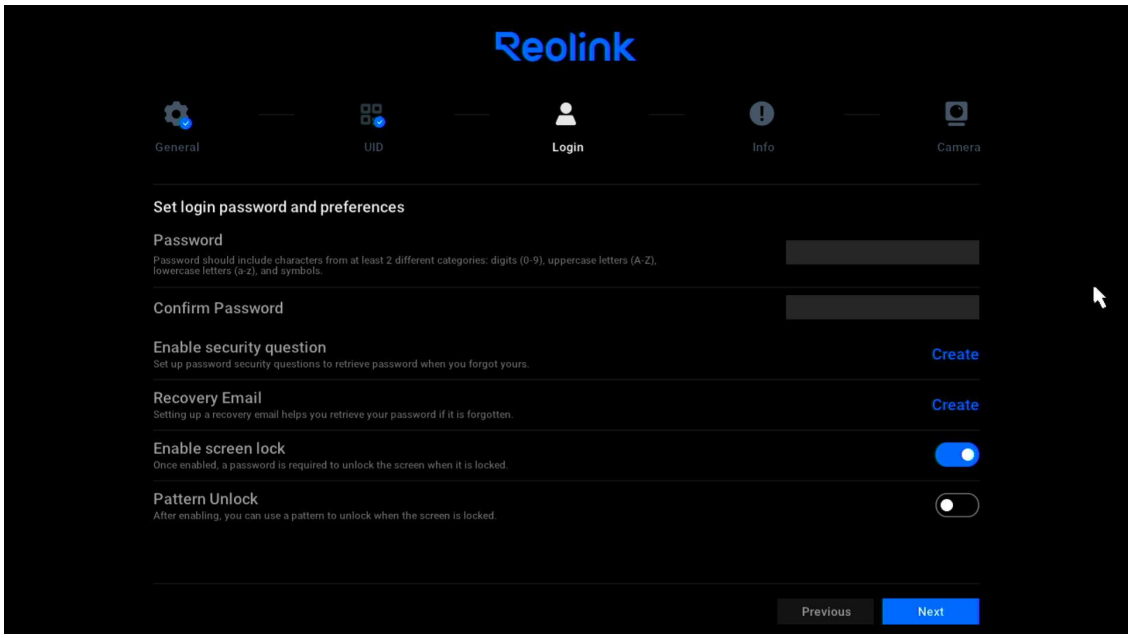

Step 5. Name your device and manage your HDD. Then click **Next**.

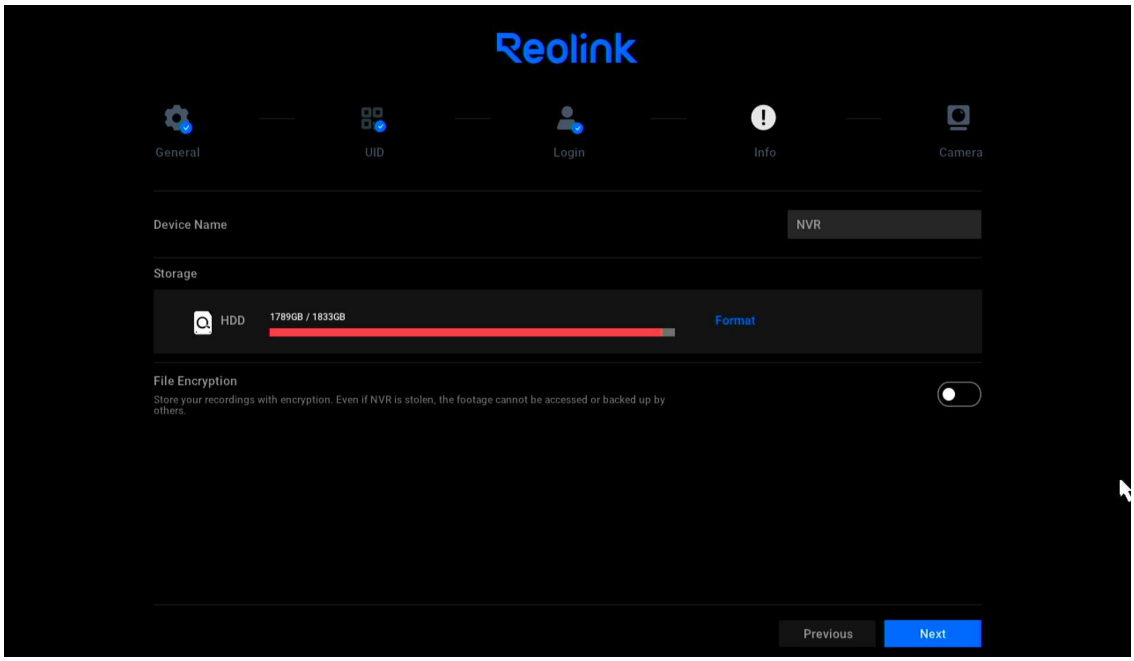

Step 6. Connect the camera to NVR according to the diagram.Then click **Next**.

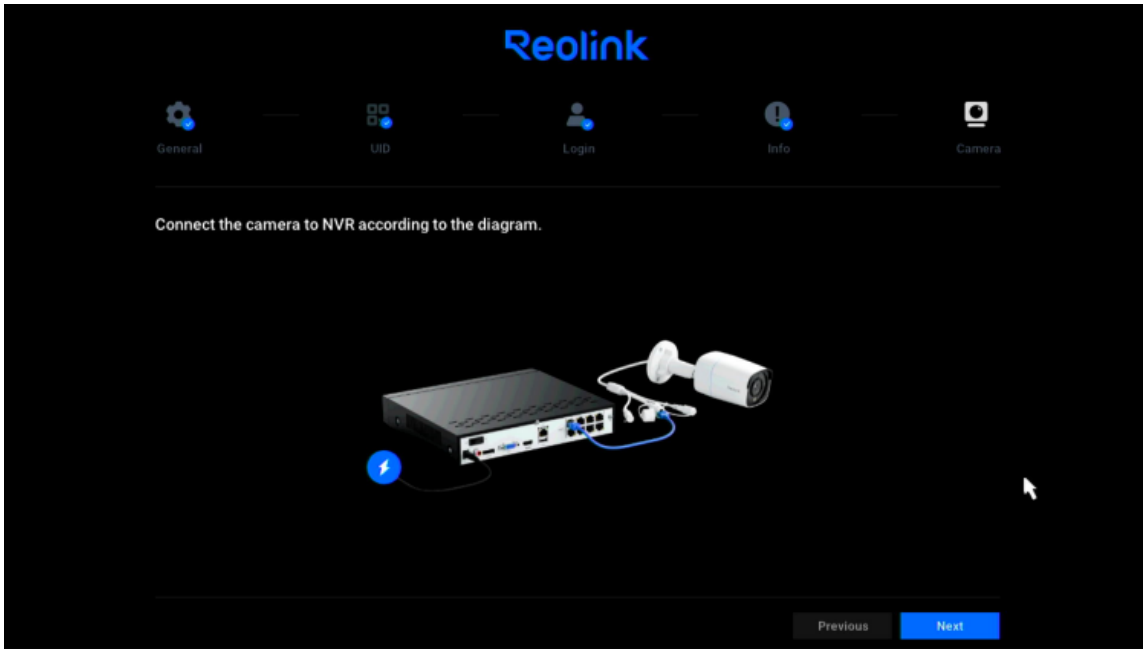


Step 7 . Initialization finished! You can start to use the NVR system now.


Access NVR System via Reolink App


You can add the NVR to Reolink App for easy access via smartphone.

Step 1. Tap the ⊕ icon on the top right corner.

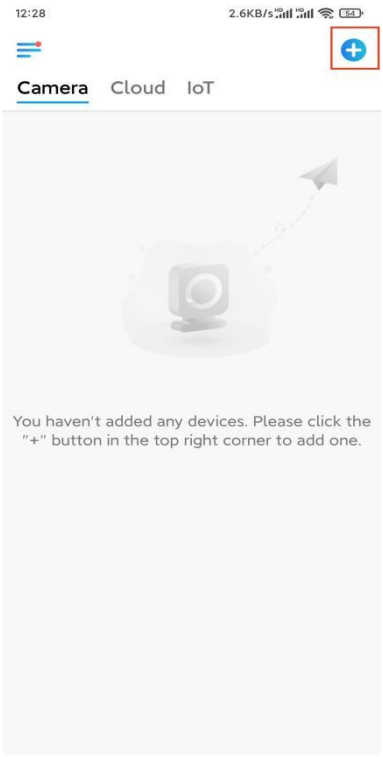


Step 2. Scan the QR code on your NVR, or tap **Input UID/IP** to enter the UID of the NVR (a 16-digit number under the QR code). Then tap **Next**.

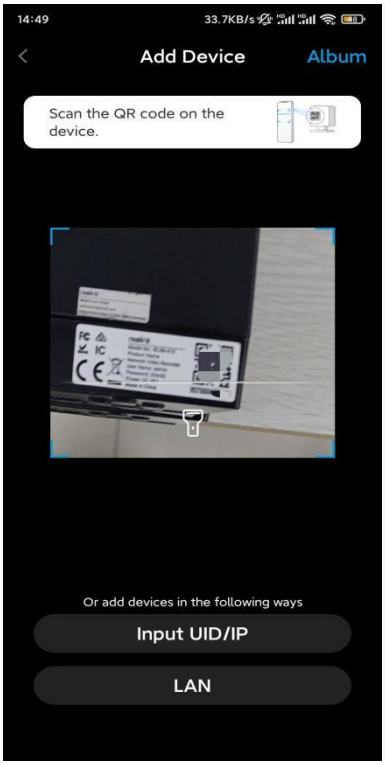

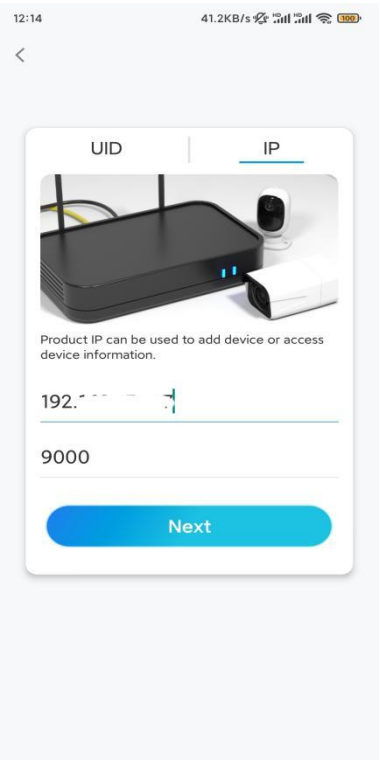

Step 3. Enter the username and login password for the NVR. By default, the username is **admin**. And the password is the one you created during initialization.

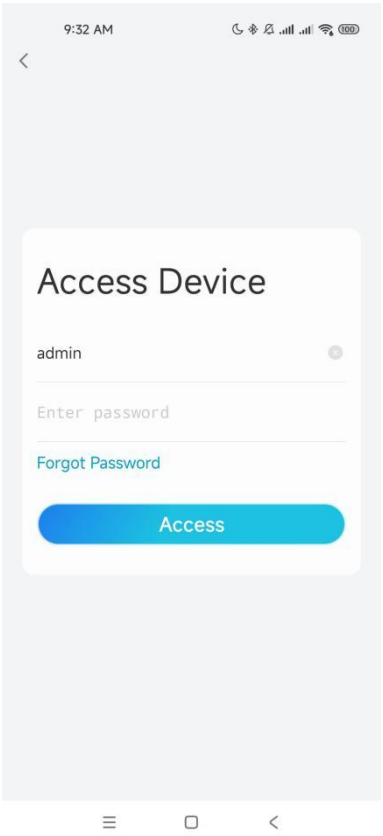

Step 4. Done! You can start to live view now.

