FLOOR BRACKET

Installation manual





SF-32WF-FB
SF-43WF-FB
SF-49WF-FB
SF-55WF-FB
SF-65WF-FB
SF-75WF-FB
SF-86WF-FB

Before installation and use, please read this manual carefully to ensure proper use. It is recommended to keep this manual for future use. The pictures in this manual are for reference only.

Installation Steps

Step 1: Install the power cable

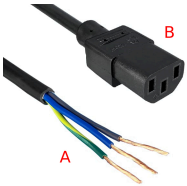


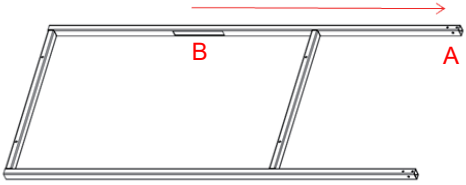


- Insert the A part of the power cable into the bore and slide it to the end.

NOTE: Part B will remain on the opposite side to be connected later to the monitor.

Step 2: Install the base adapter

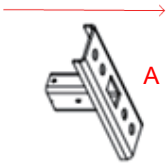


- Slide the A part of the power cable into the bore of the base adapter.

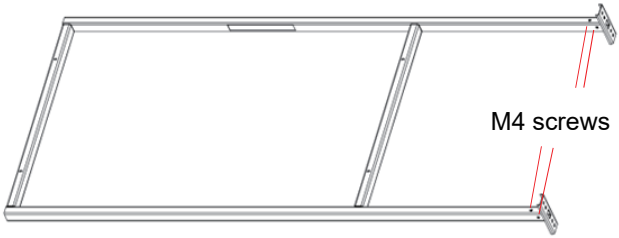

- Install the base adapter on the rod holder and secure it using M4 screws.

Installation Steps

Step 3: Install base beams

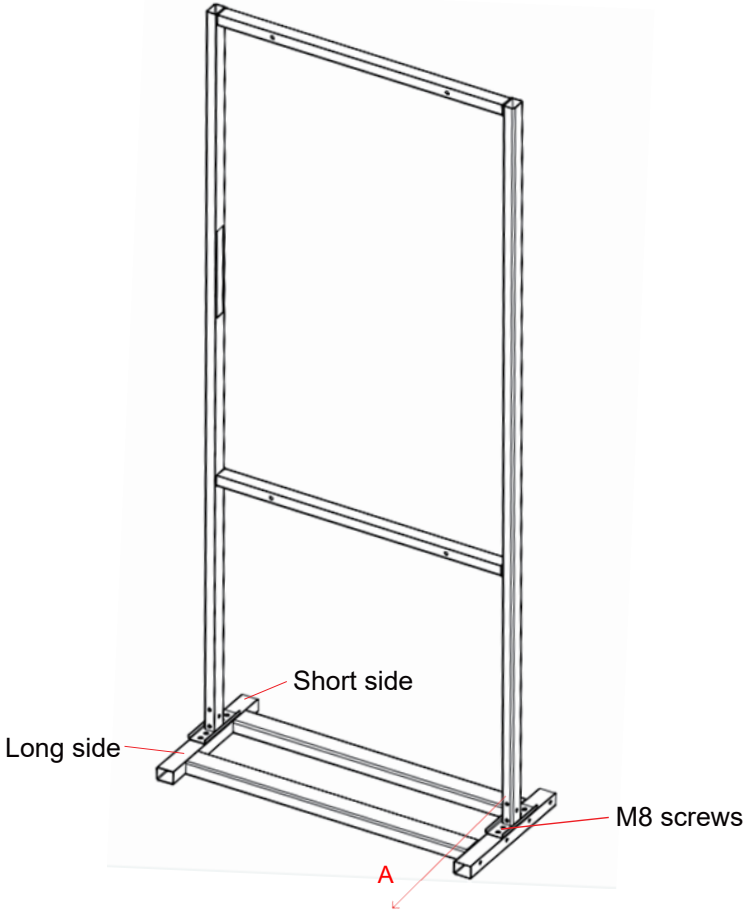


- Install the base beams fixing it with M8 screws.

NOTE: the long side of the beams will be the rear part of the bracket and the short side the front of the bracket.

- Slide the A part of the power cable into the bore of the base beam.

Installation Steps

Step 4: Connect the socket, switch wire and install the front and back covers of the base.

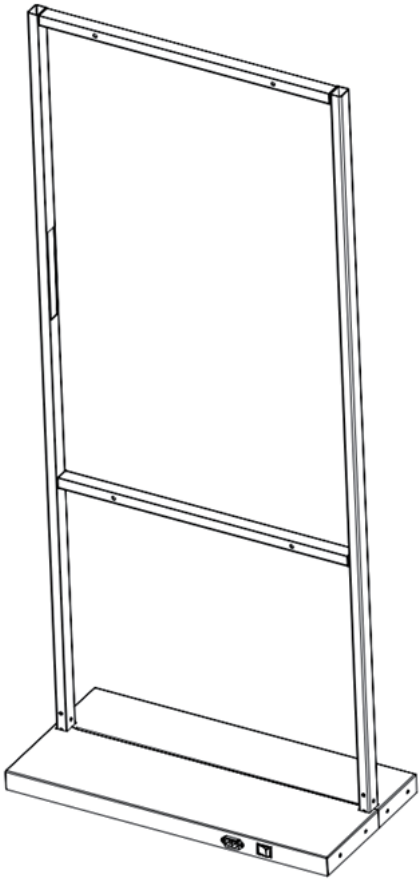


- Connect the socket and switch wires first.

- Secure the front and rear covers with M3 screws.

Installation Steps

Step 5: Install the monitor

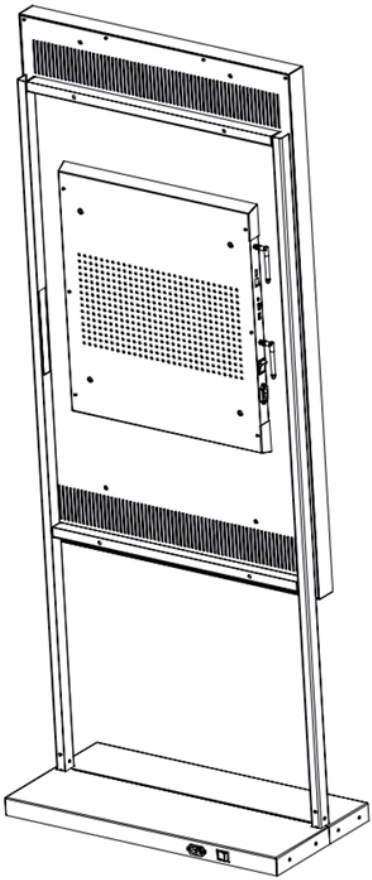

- Fix the monitor to the floor bracket with M6 screws.

NOTE: The back of the monitor must be installed toward the switch side.

- Conect the B part of the power cable to the monitor.
- Conect the power cable to the socket of the base.

Dimensions

SF-32WF-FB



SF-43WF-FB



Dimensions

SF-49WF-FB









SF-55WF-FB









Dimensions

SF-65WF-FB










SF-75WF-FB







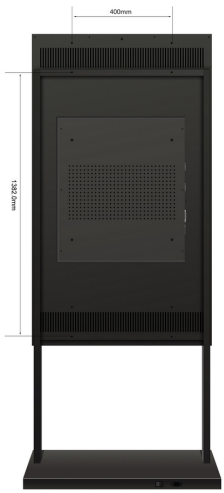

Dimensions

SF-86WF-FB

