01 SIDEBAR

Full-channel display of bitateral sidebar

Click to show the left sidebar

Click to hide the sidebar

Click to return homepage

Click to start quick annotation

Quick access to the channel


More functions

Multitask windows

Click to return to the previous step

02 CONTROL CENTER

Full channel dual side sidebar

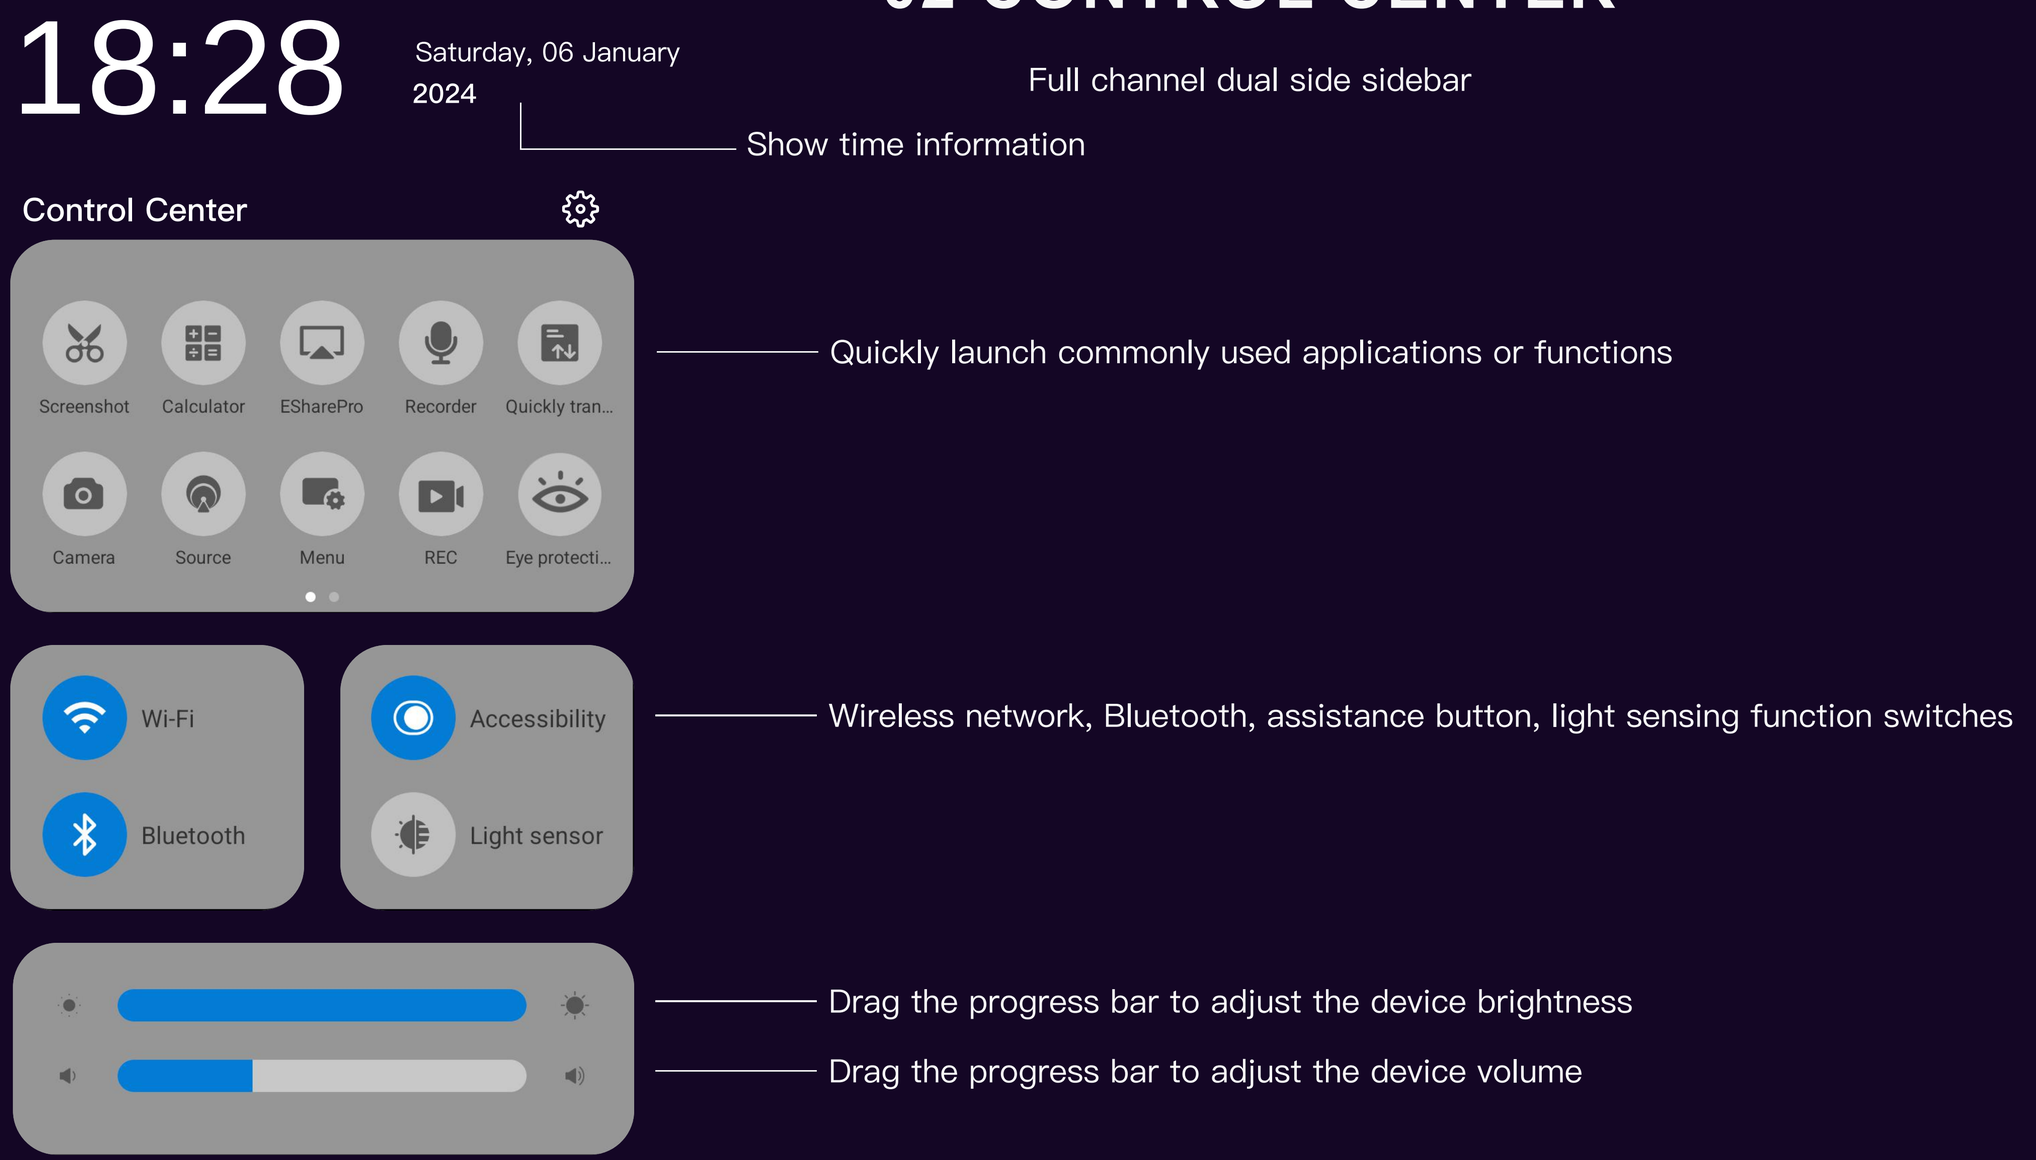

03 APP STORE

Provide common android applications

Office



Microsoft Word

Efficient office

Version 16.0.10730.20043

Install



Microsoft Excel

Efficient office

Version 16.0.10730.20043

Install



Microsoft PowerPoint


Efficient office

Version 16.0.10730.20043

Upgrade


04-1 ANNOTATION WHITEBOARD

Annotation software with simple and quick operation

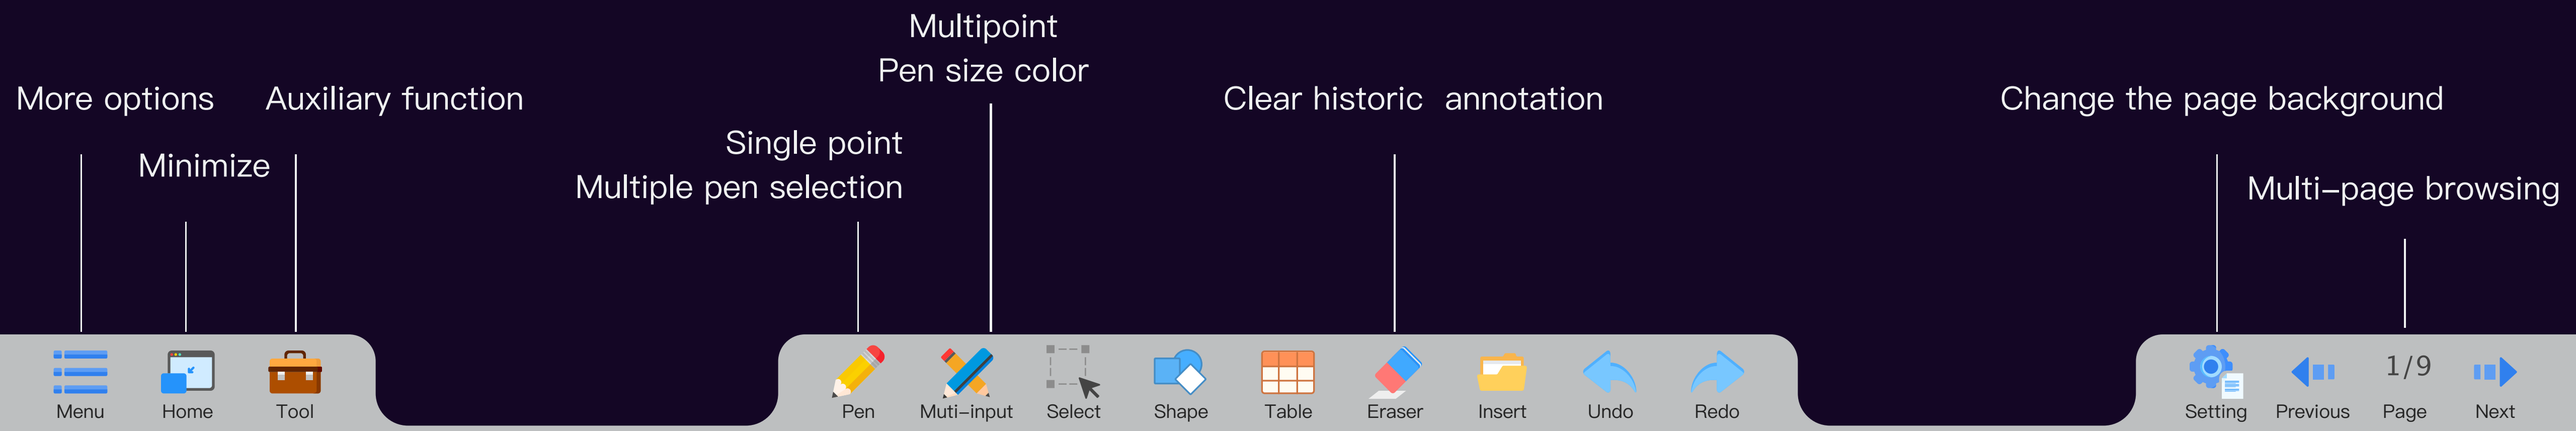

04-2 ANNOTATION WHITEBOARD

Menu & Toolbox

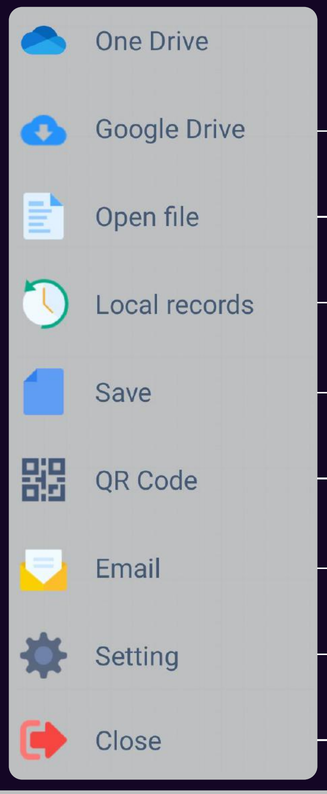

Open cloud disk files

Open PDF File

Find and open saved records

Conference records saved on the cloud or locally


Scan QR code for sharing to mobile devices

Share records via email

Set up the whiteboard

Exit the whiteboard software

Remote room application

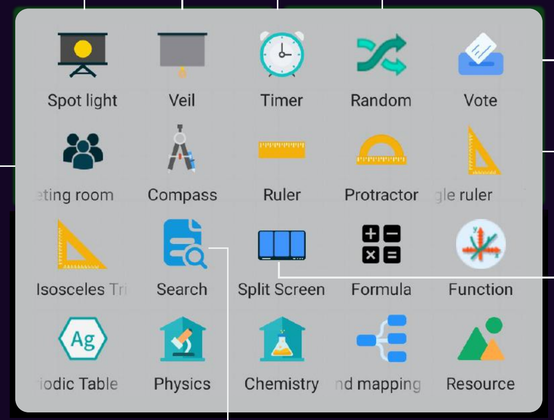

Focus at a specific position on the screen

Shade current page

Timer/Coutdown

Random Arabic Arabic numerals

Apply to voting in meetings or classrooms


Measure the length or draw a straight line

Multi-screen writing

Insert search images into the annotation whiteboard

04-3 ANNOTATION WHITEBOARD

Pen & Eraser

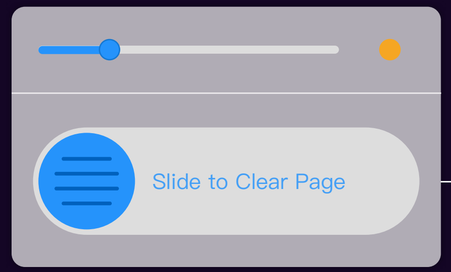

Slide to clear annotation on the page

Pen nibs

Handwriting recognition

Laser pen


Mark pen



Slide to show the pen size


04-4 ANNOTATION WHITEBOARD

Page Settings

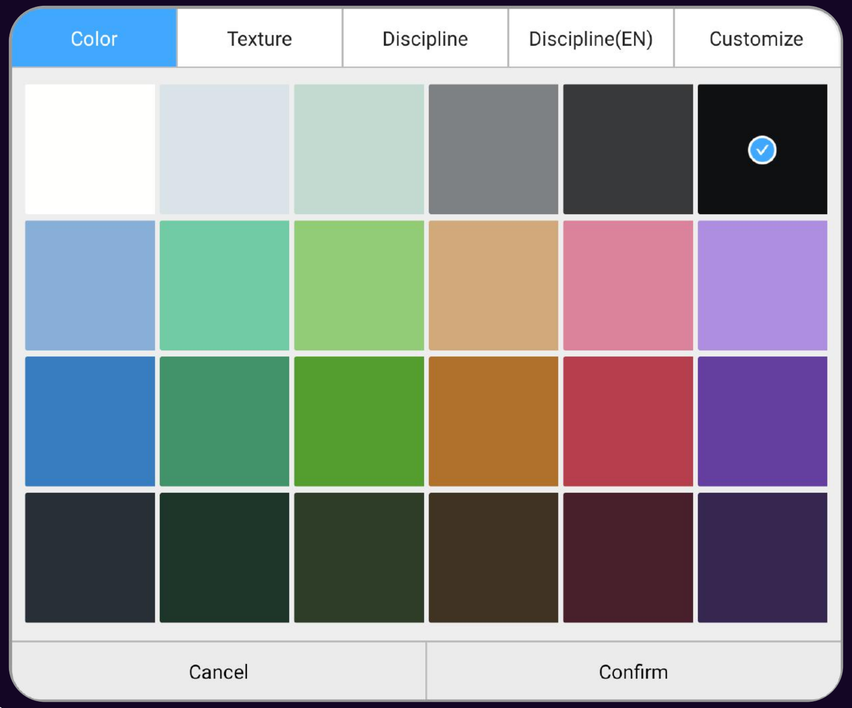

New page


Delete the current page

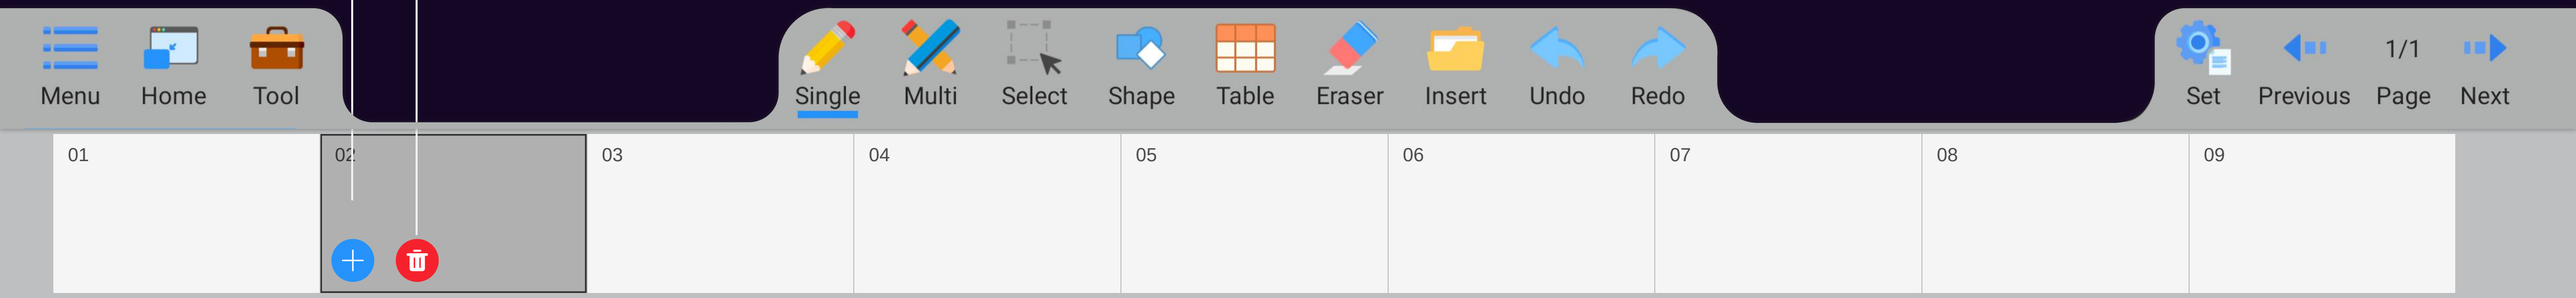

Owner
System User


05-1 HOME

Business Theme

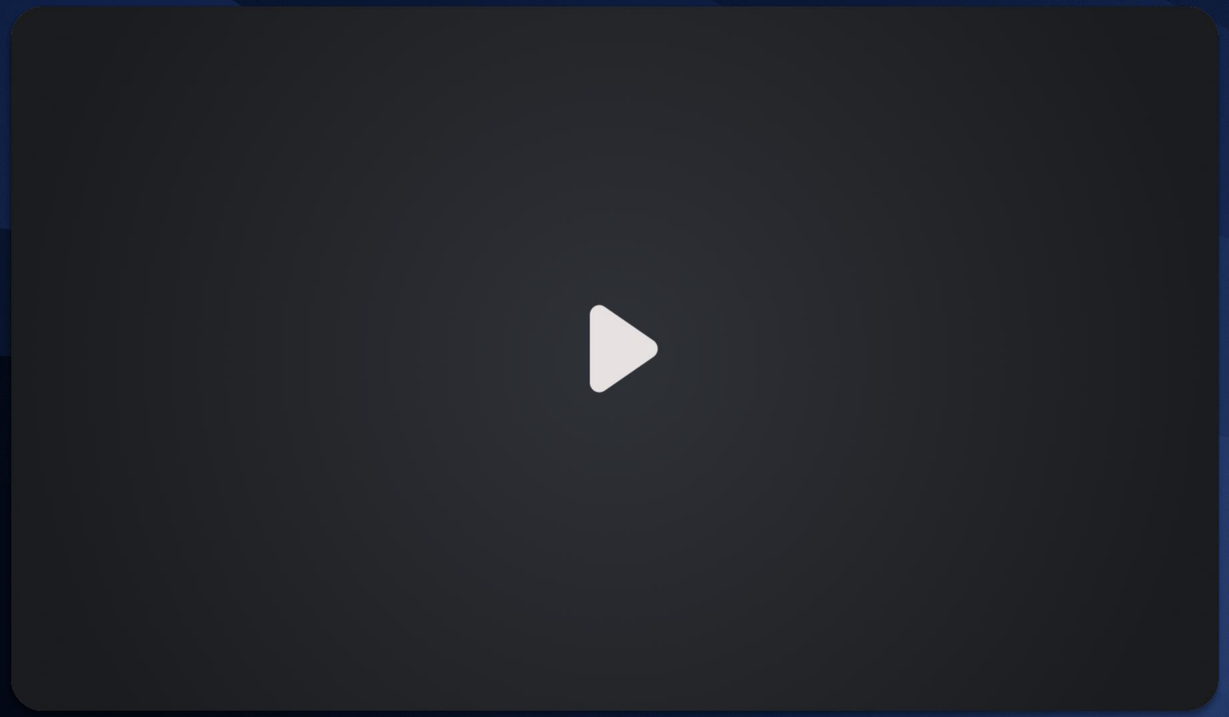




15 : 10
Tuesday, 29 October

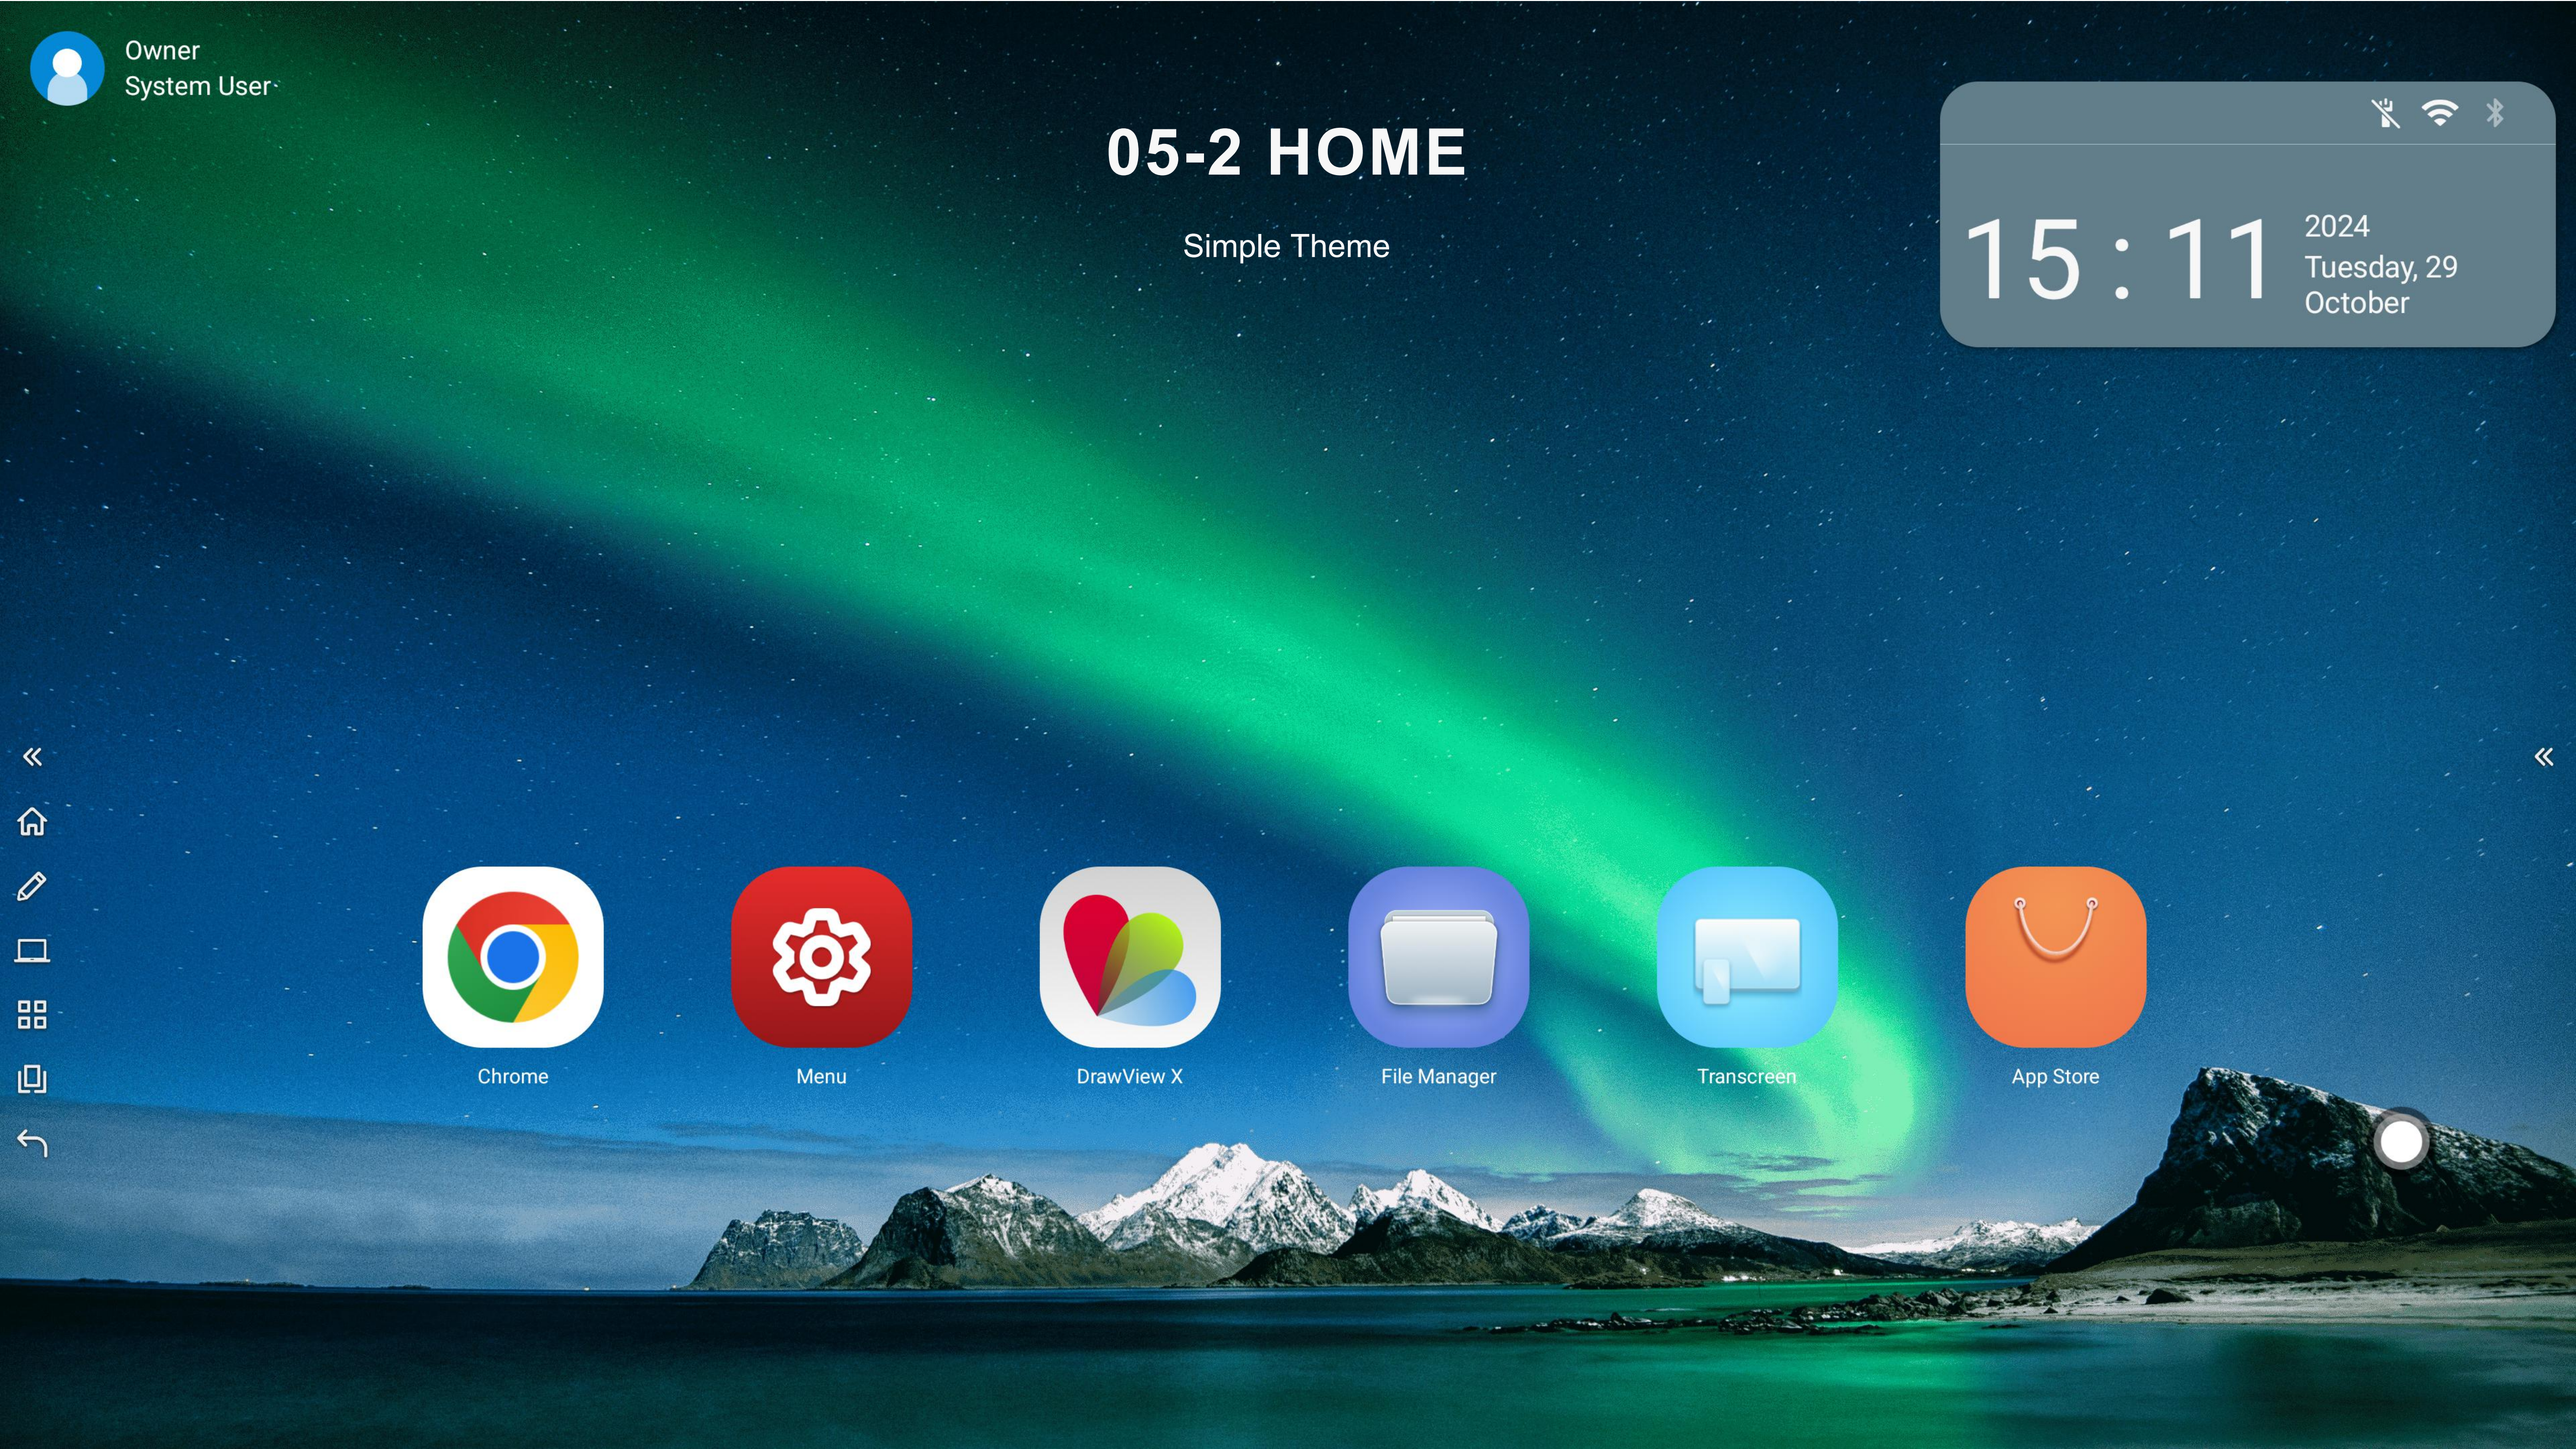
Owner
System User
05-2 HOME
Simple Theme
15 : 11
2024
Tuesday, 29
October
Chrome
Menu
DrawView X
File Manager
Transcreen
App Store

06 SOURCE

Click here or select the corresponding source button to switch to the corresponding channel

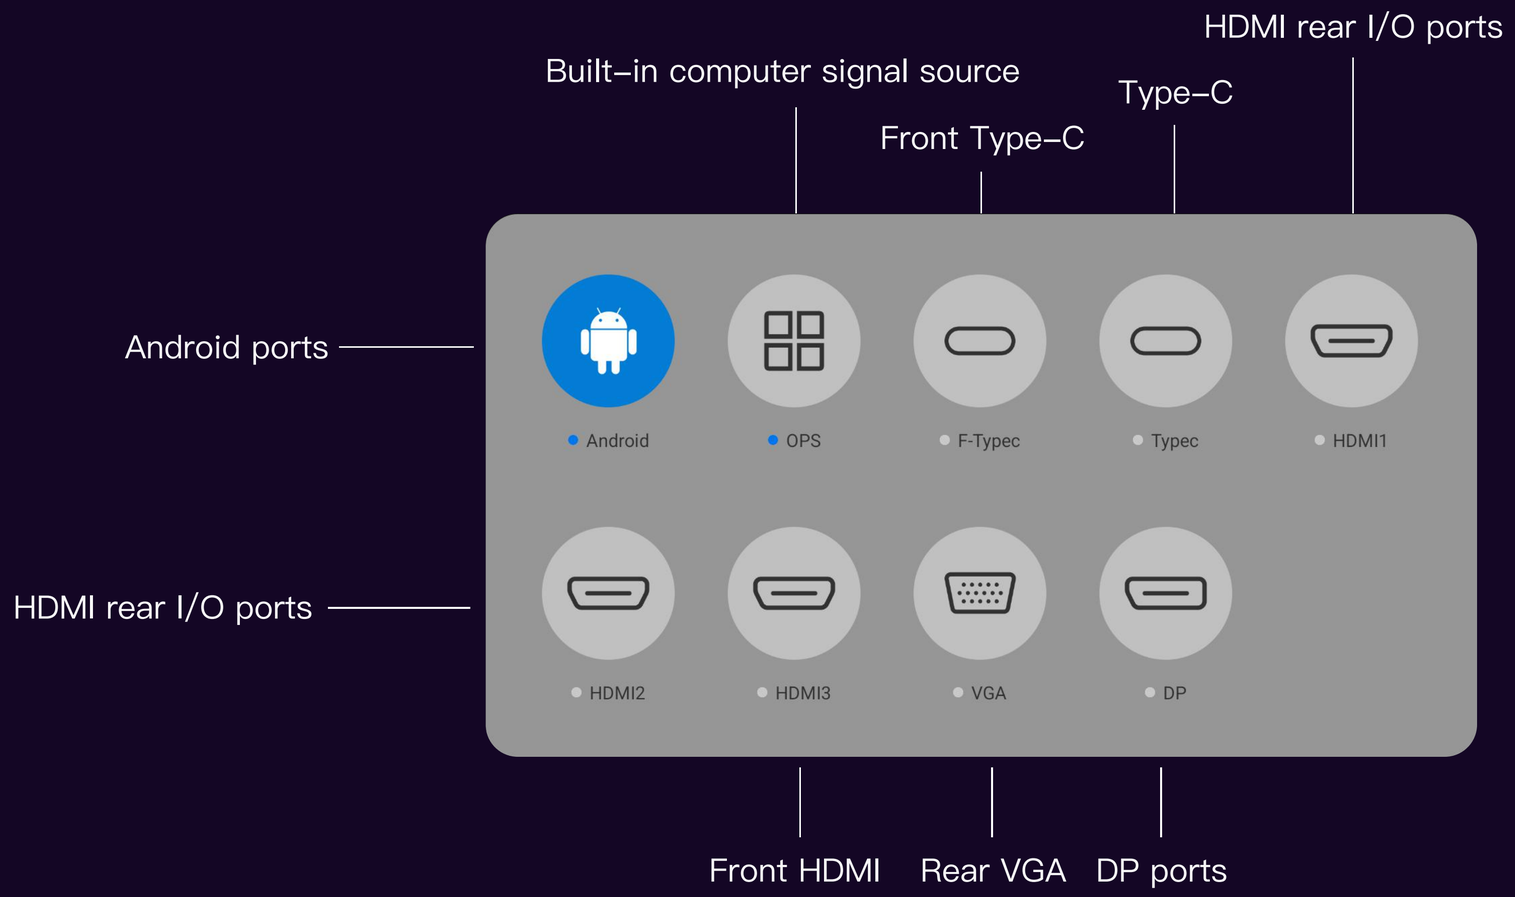


Input sources may differ, this picture is for reference only, please refer to actual product.

07-1-1 MENU

Network Setting


WiFi and hotspot settings

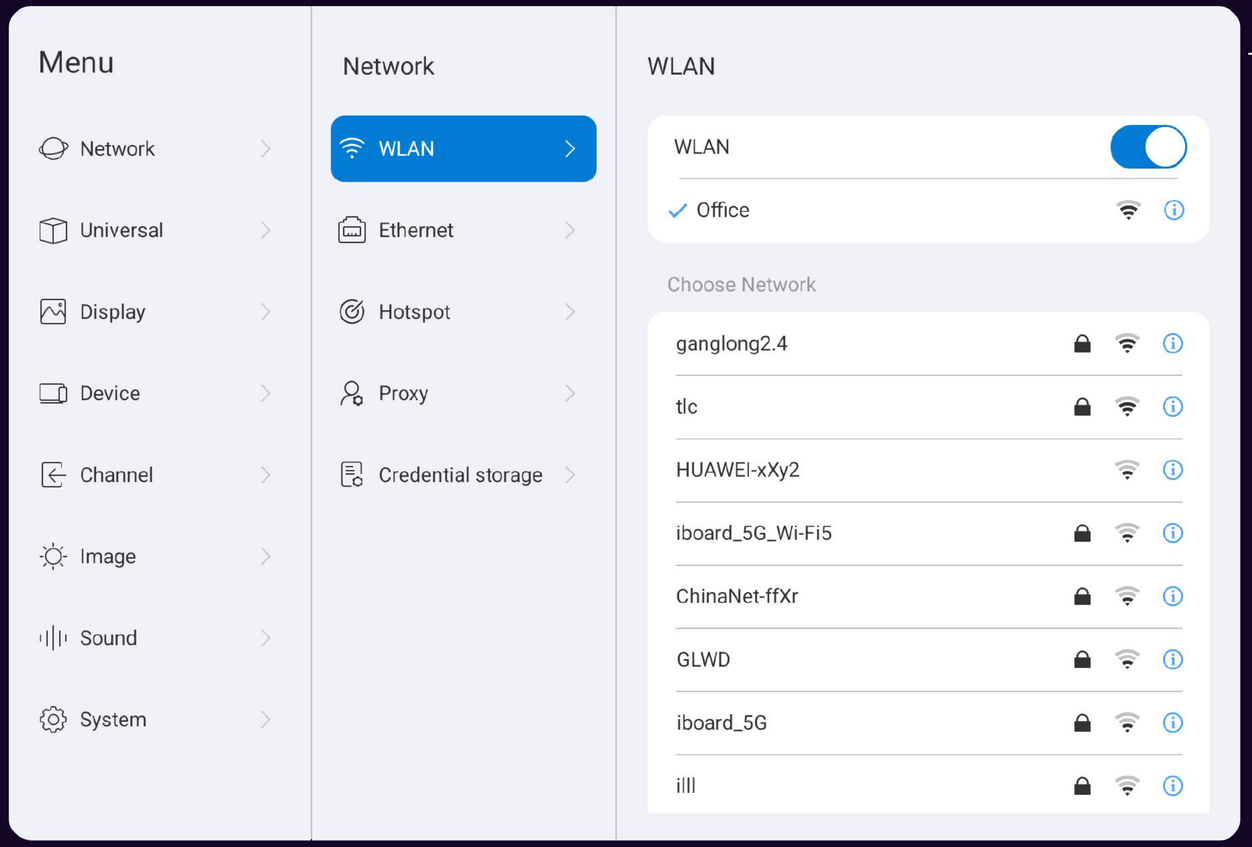

Can be connected to nearby wireless networks

07-1-2 MENU


Wired Network Settings

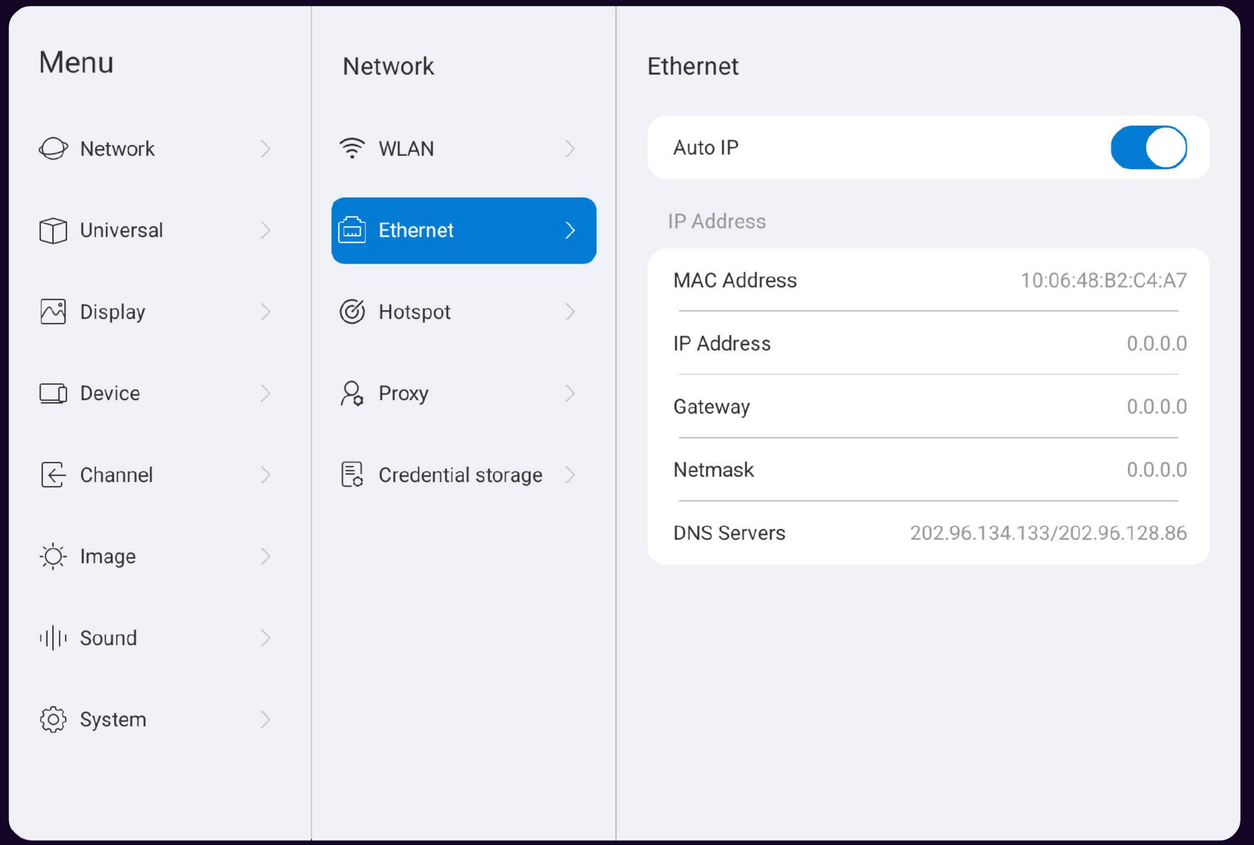

Connect to the LAN or Internet via an Ethernet cable

07-1-3 MENU


Hotspot settings

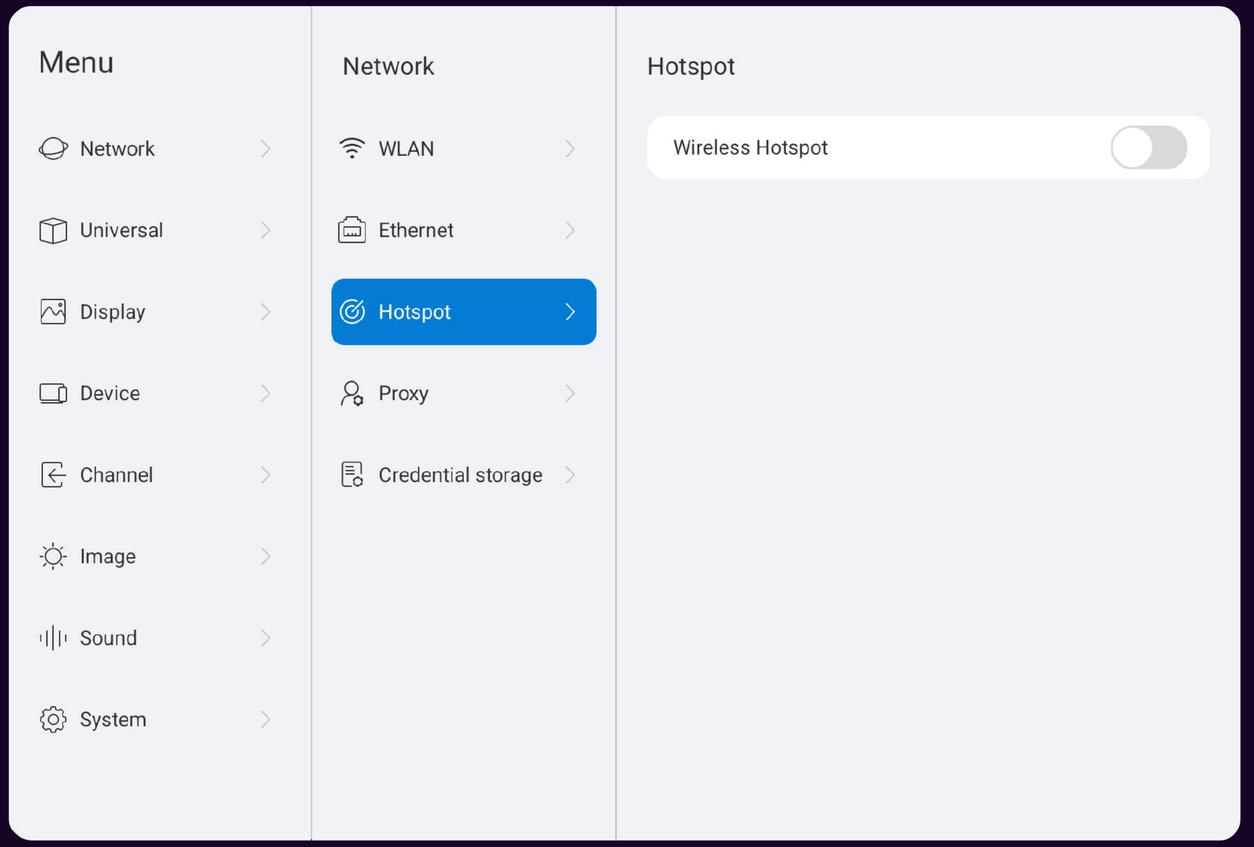

A hotspot can be set up, allowing other devices to discover and connect to the shared network of the device.

07-1-4 MENU


Proxy Settings

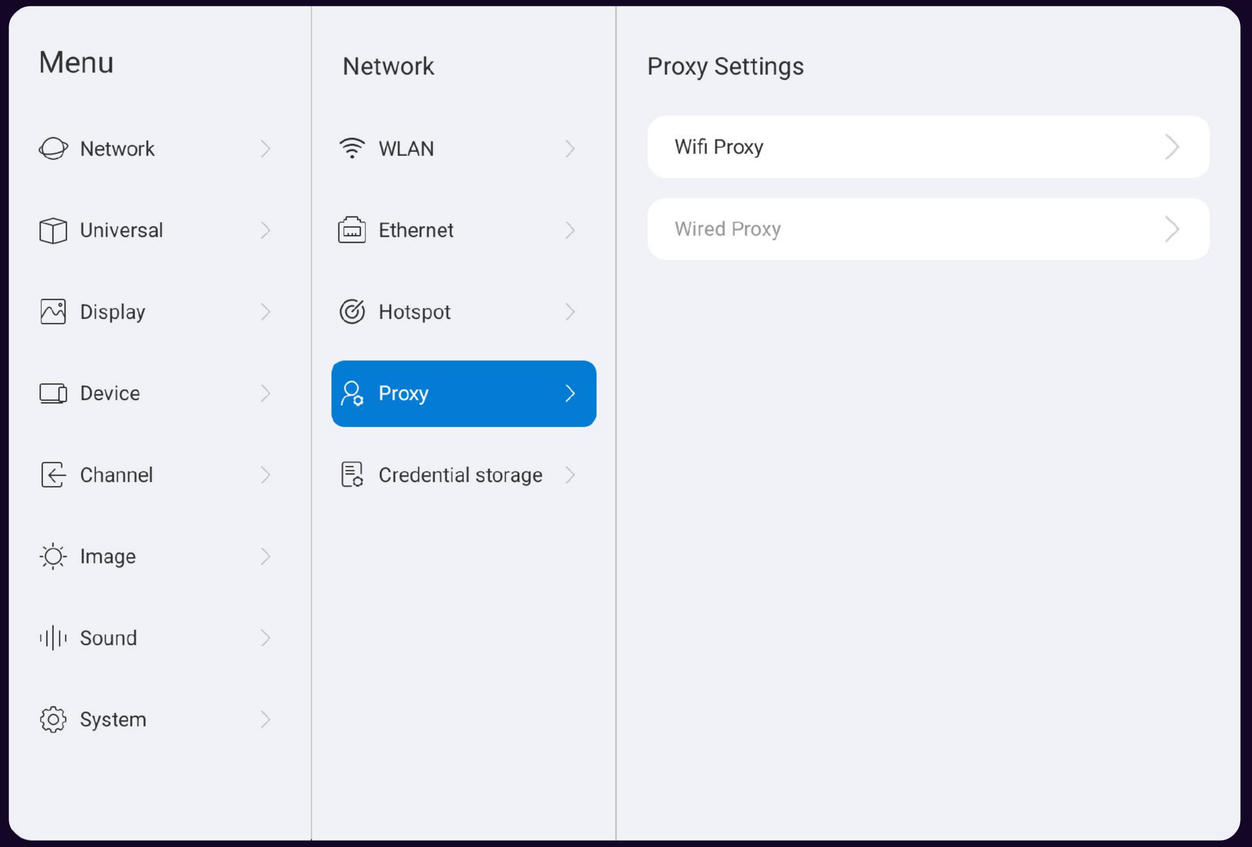

Set up a proxy server

07-1-5 MENU

Credentials Storage Settings

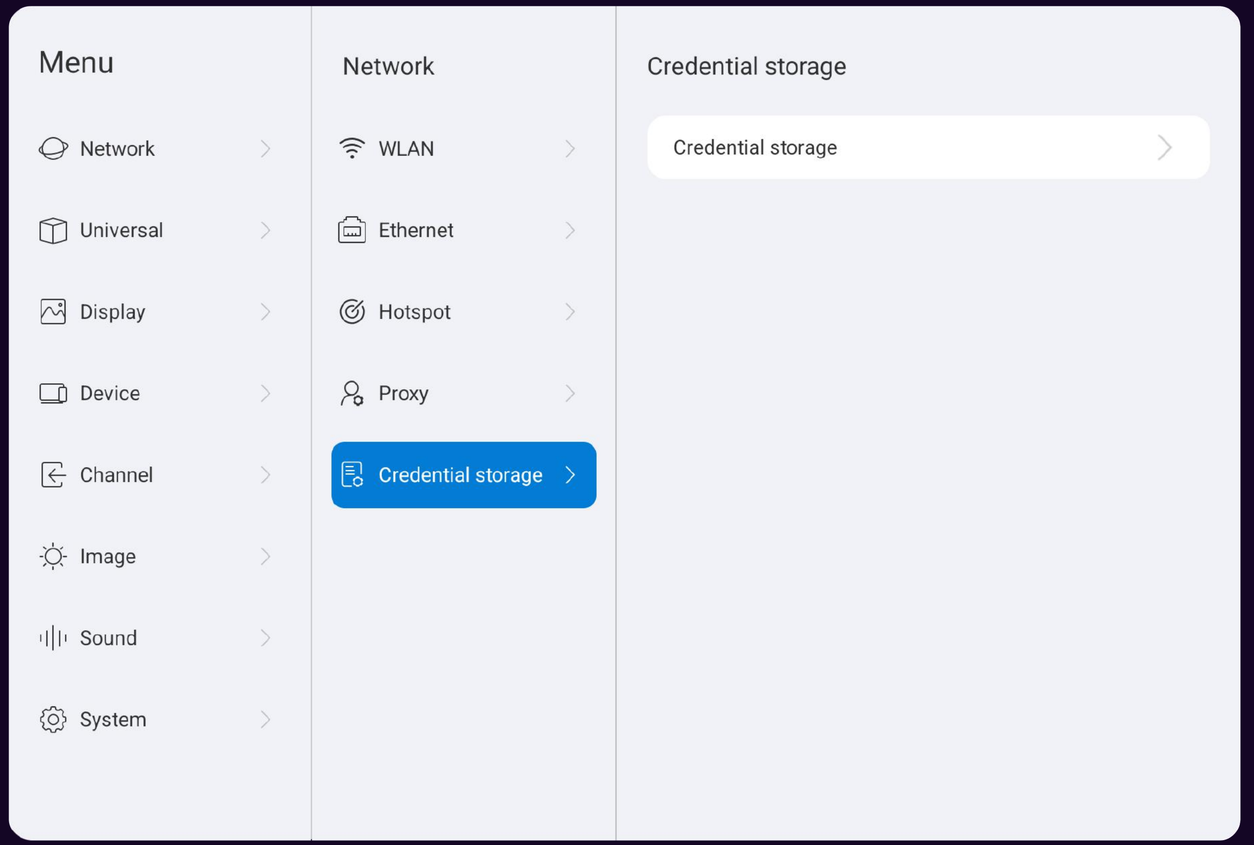


Store and manage users' sensitive information and credentials

07-2-1 MENU

Universal Setting


Region and time settings

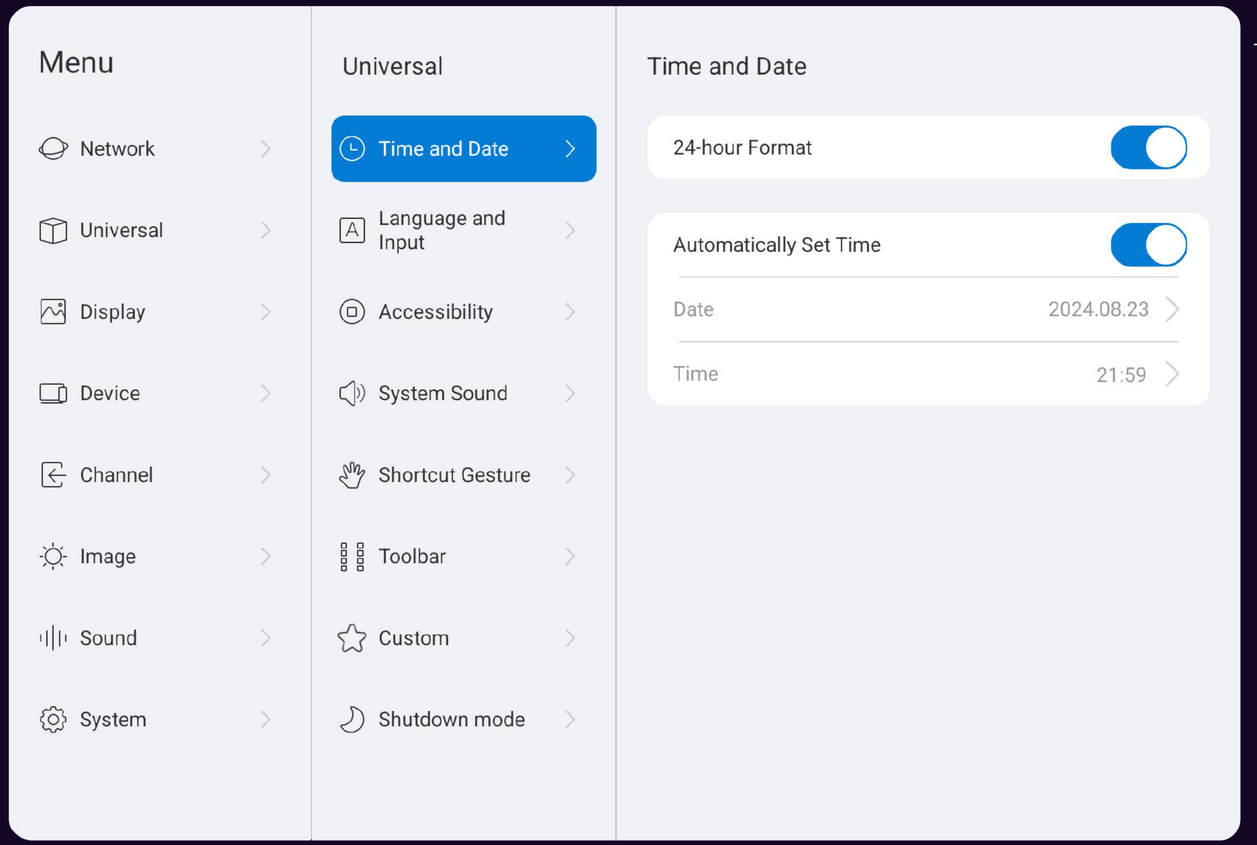

Can set 24–hour format, time and time zone

07-2-2 MENU


Language and Input Settings

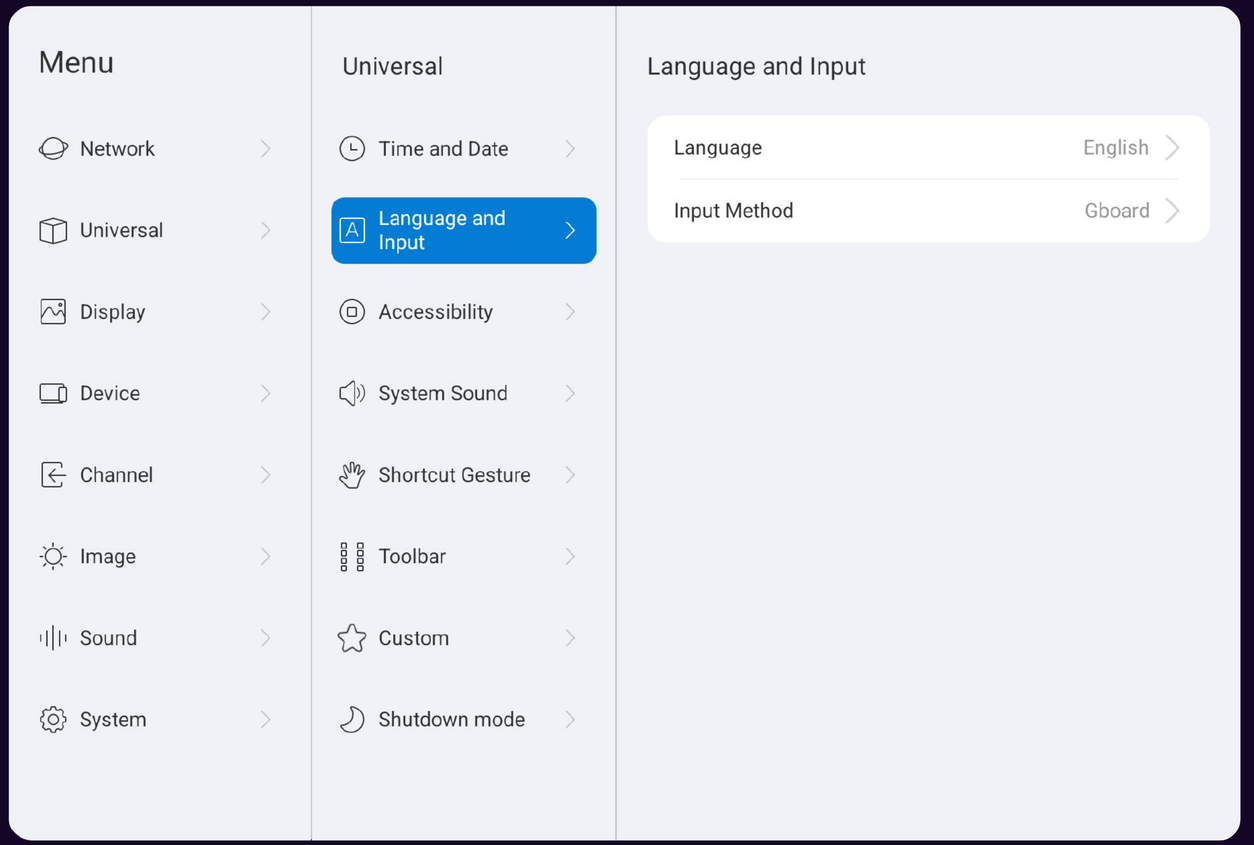

Select language and input method

07-2-3 MENU


Auxiliary Touch Settings

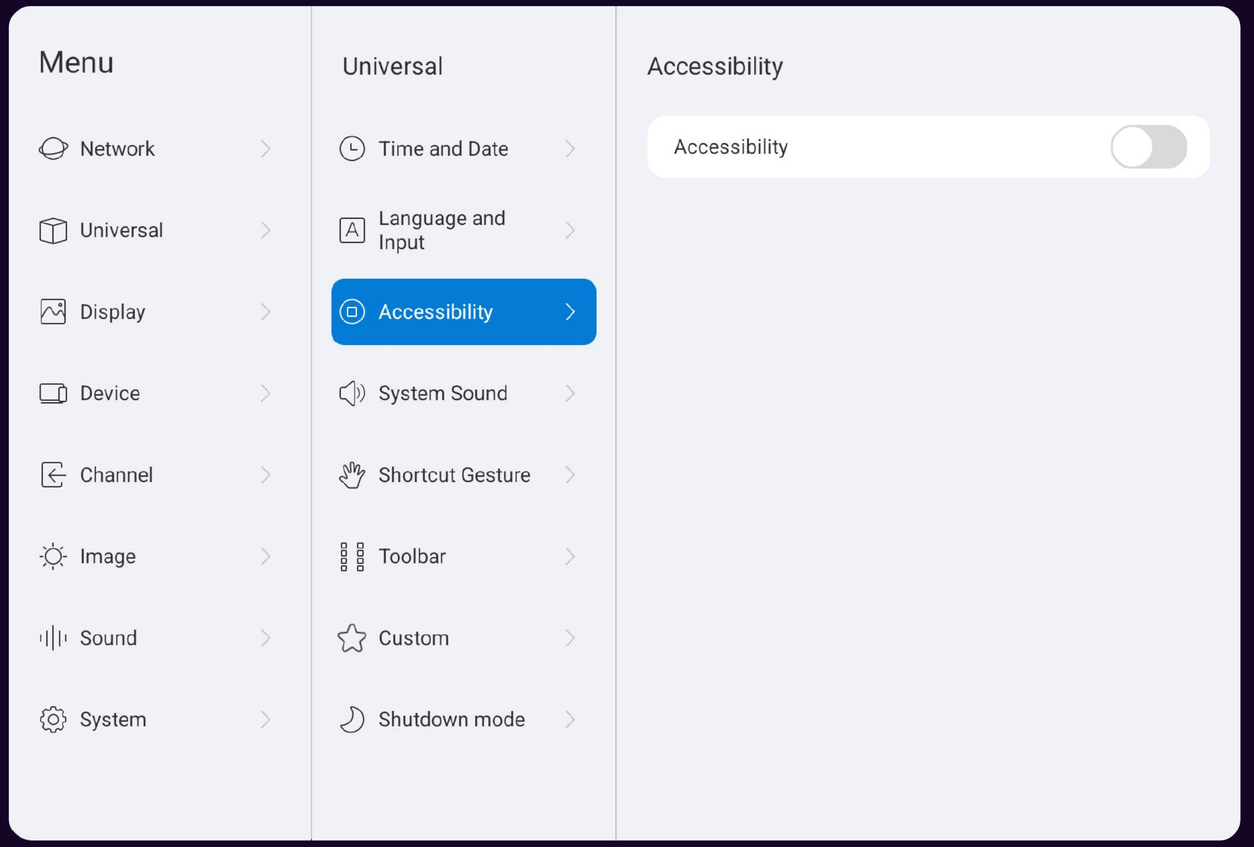

Set the floating ball switch

07-2-4 MENU


System Sound Settings

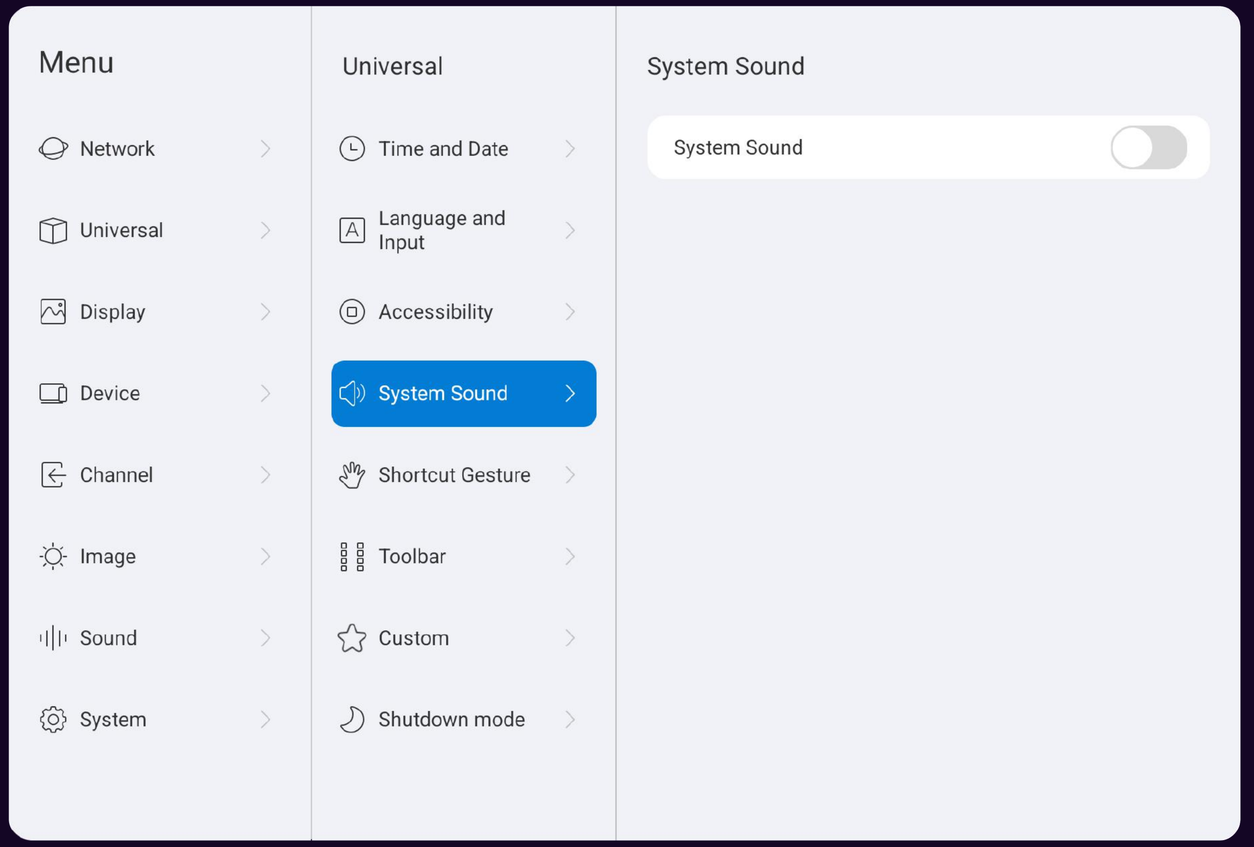

System prompt sound switch

07-2-5 MENU


Gesture Settings

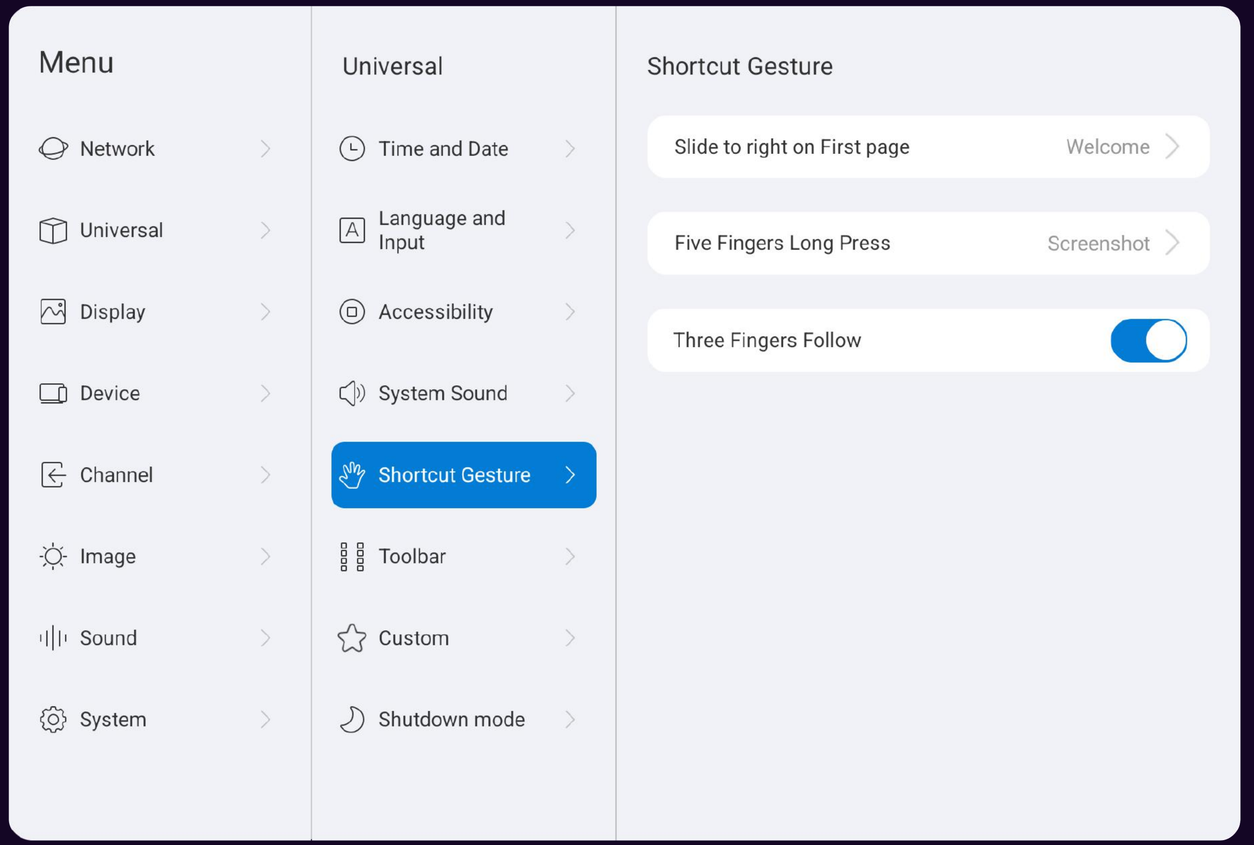

Set specific operations performed by dragging or pressing fingers on the screen

07-2-6 MENU


Quick Action Bar Settings

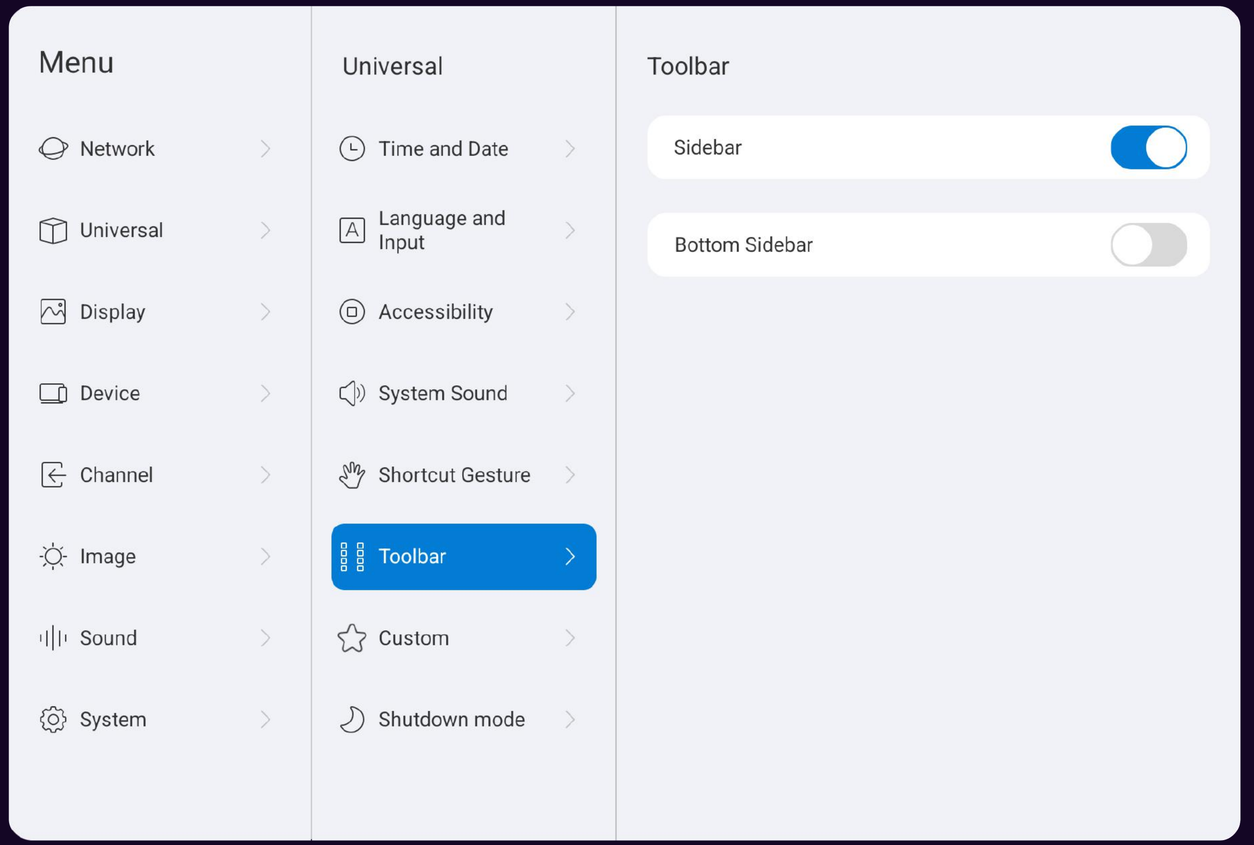

Set the switch for the side bar and bottom bar

07-2-7 MENU


Custom Key Settings

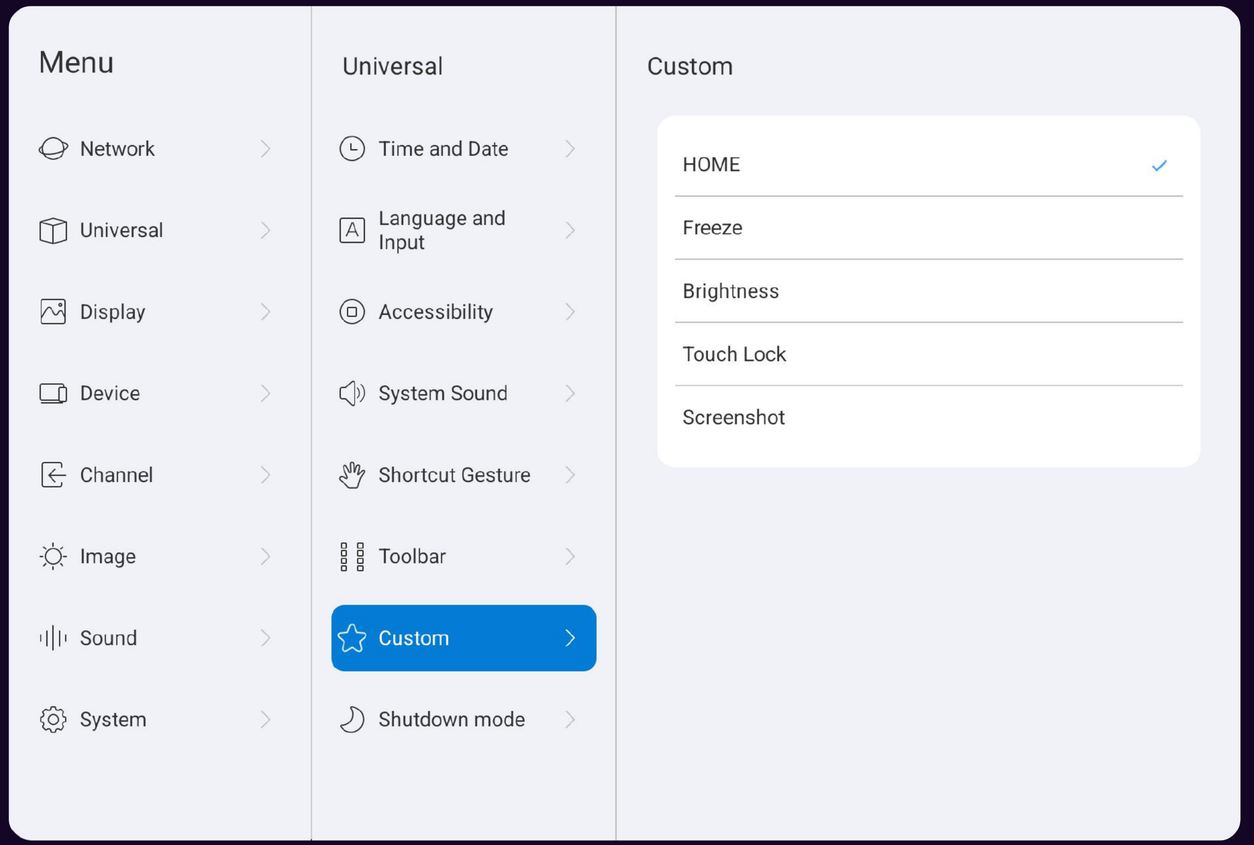

Set the HOME key to HOME/ Freeze/Brightness/Touch lock/Screenshot

07-2-8 MENU

Shutdown Mode Settings

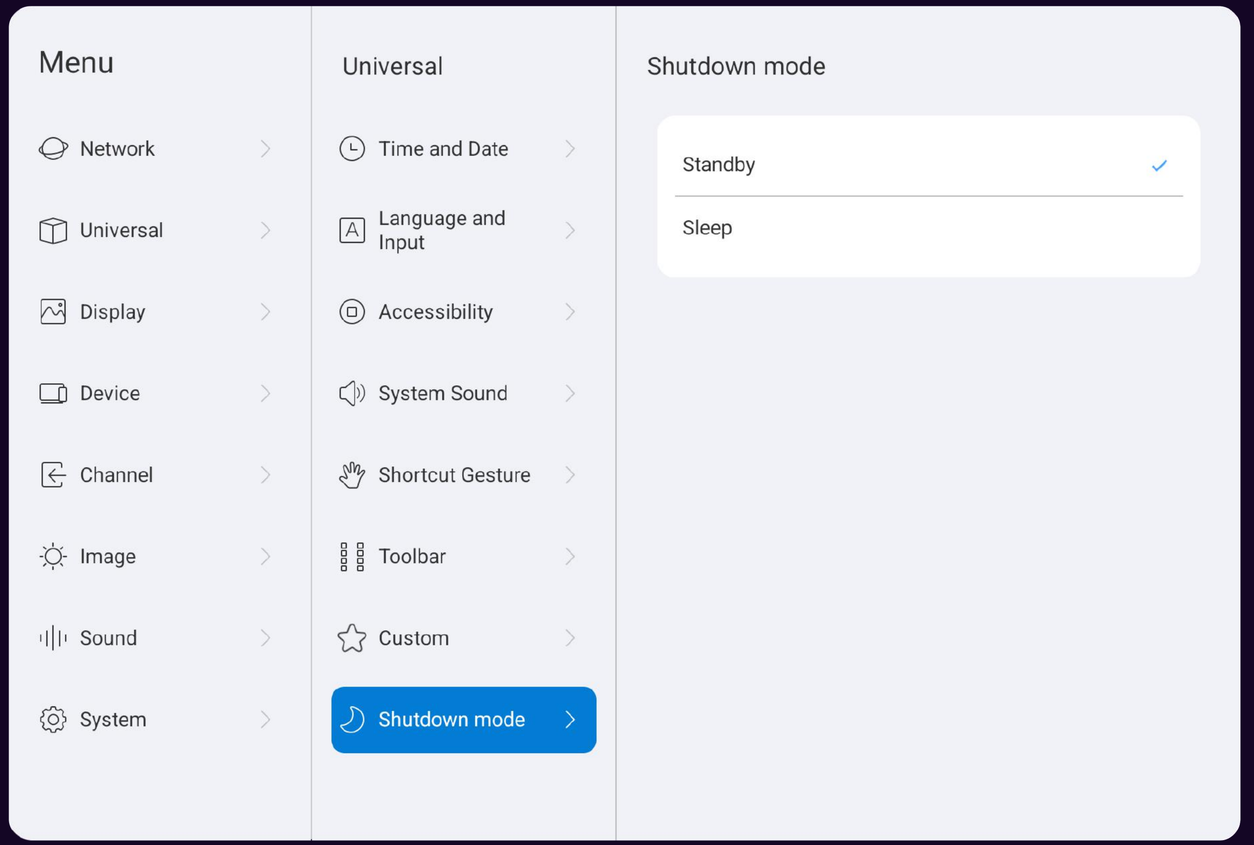


Standby and sleep modes

07-3-1 MENU

Wallpaper Settings


Switch personalized UI

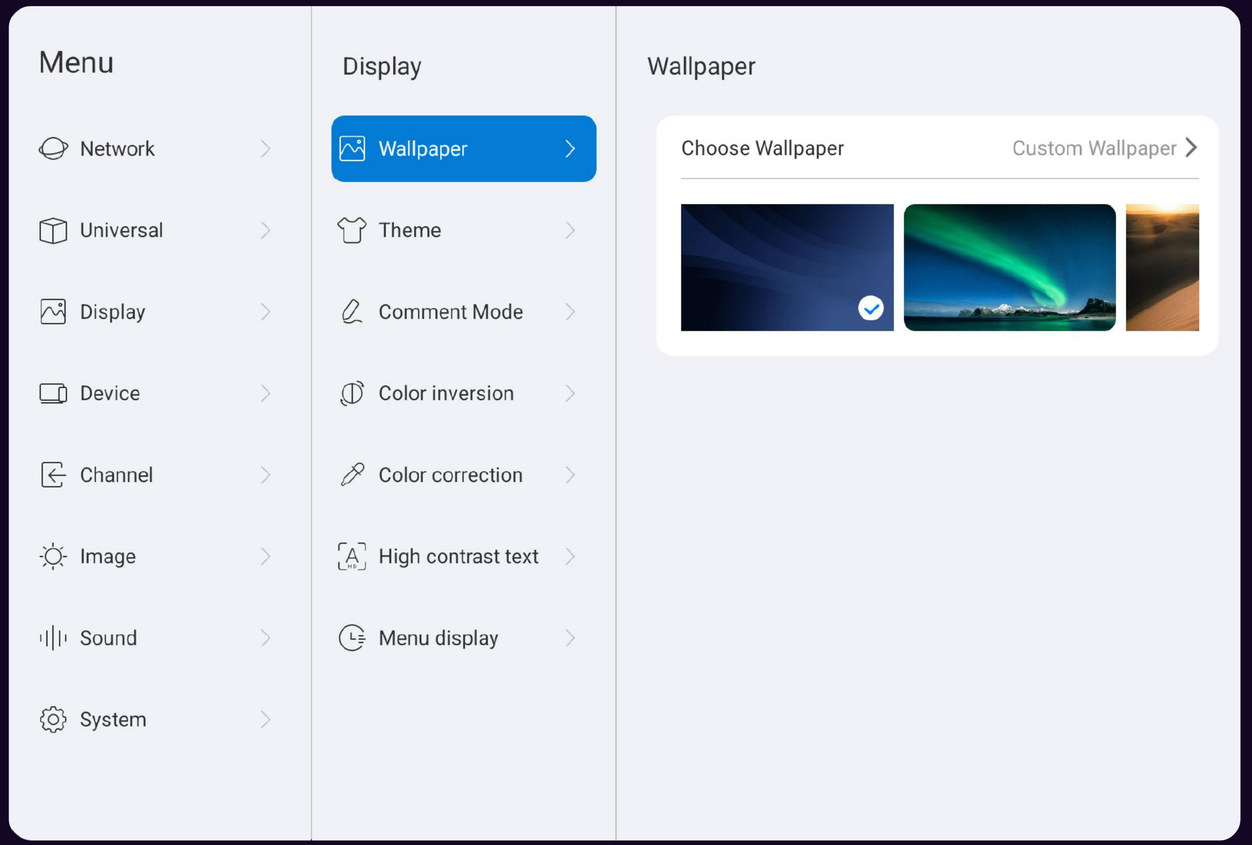

Select to replace wallpaper/ add custom wallpaper

07-3-2 MENU


Theme Settings

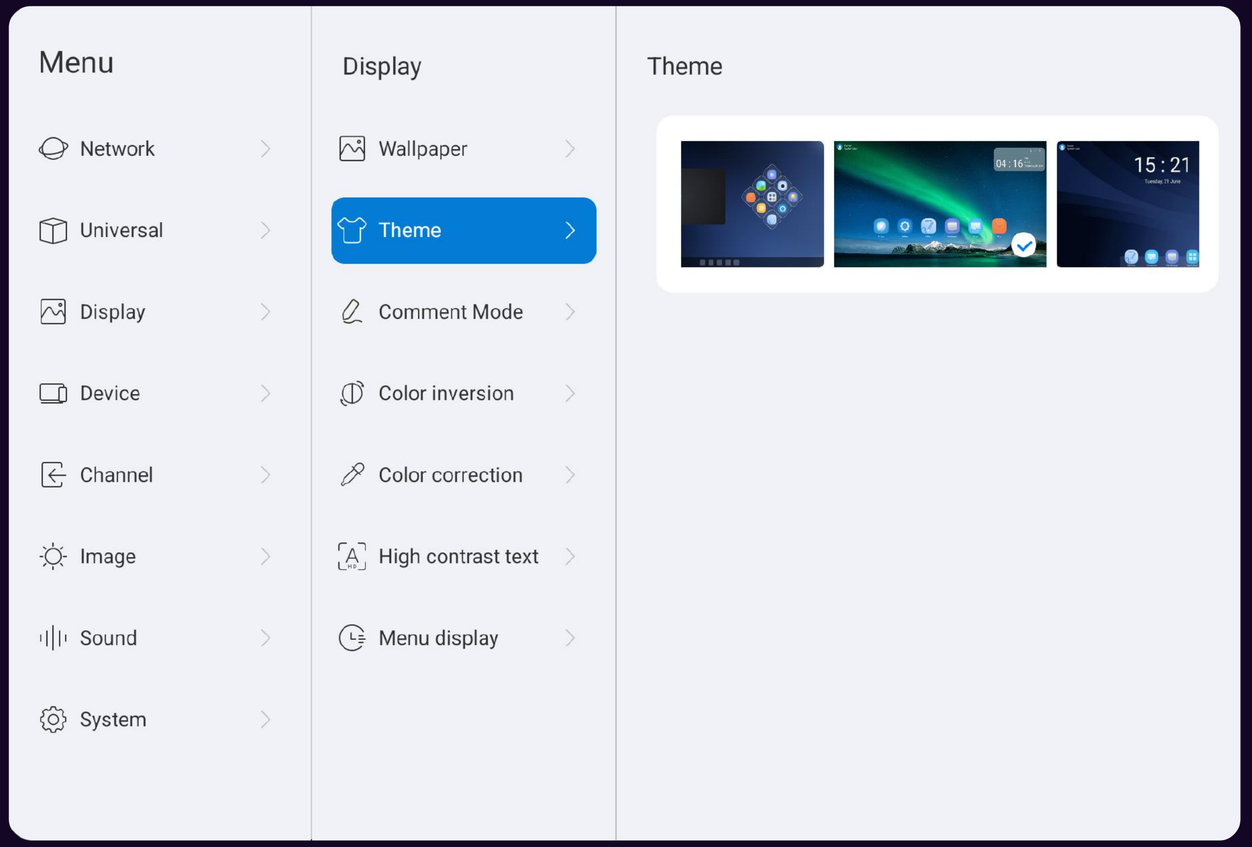

Select Switch Theme

07-3-3 MENU


Annotation Mode Settings

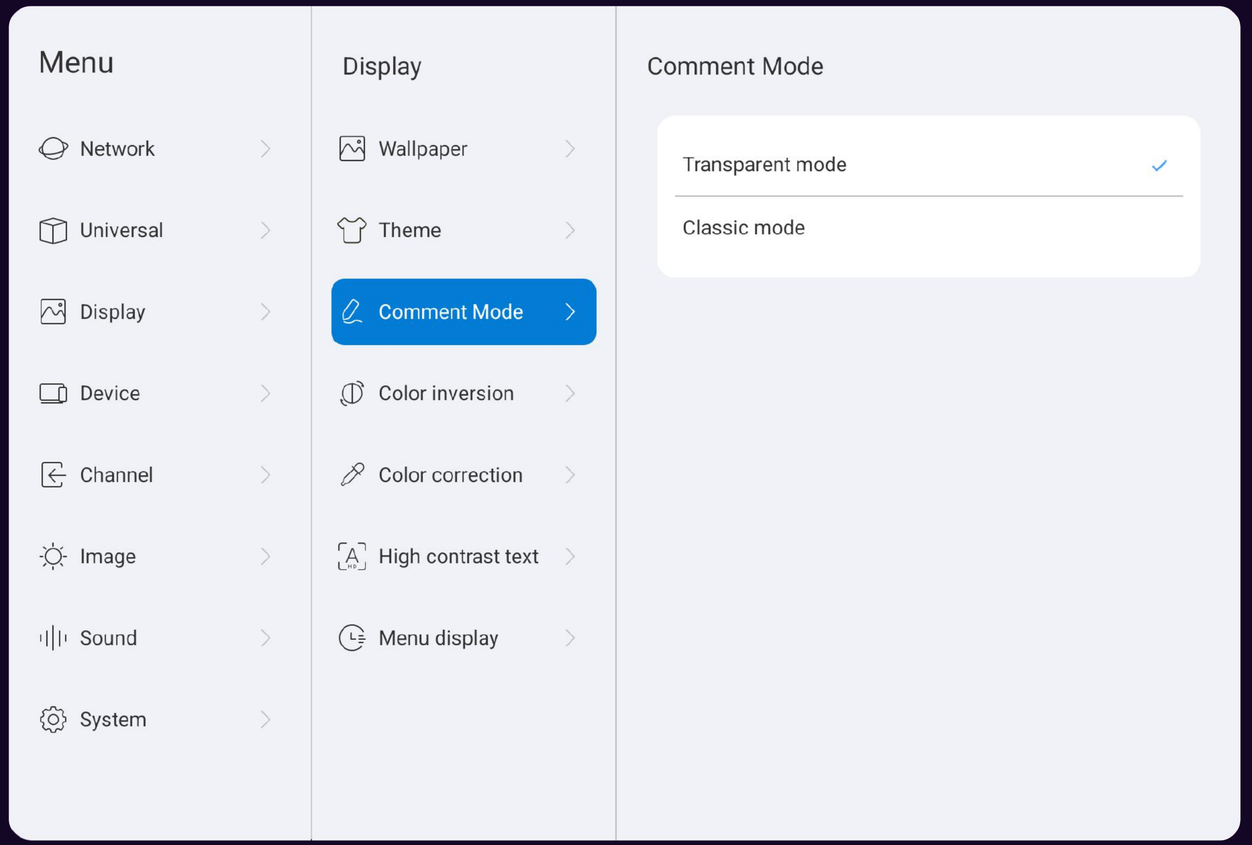

Set the startup mode of the sidebar annotation (transparent mode/classic mode)

07-3-4 MENU


Color inversion settings

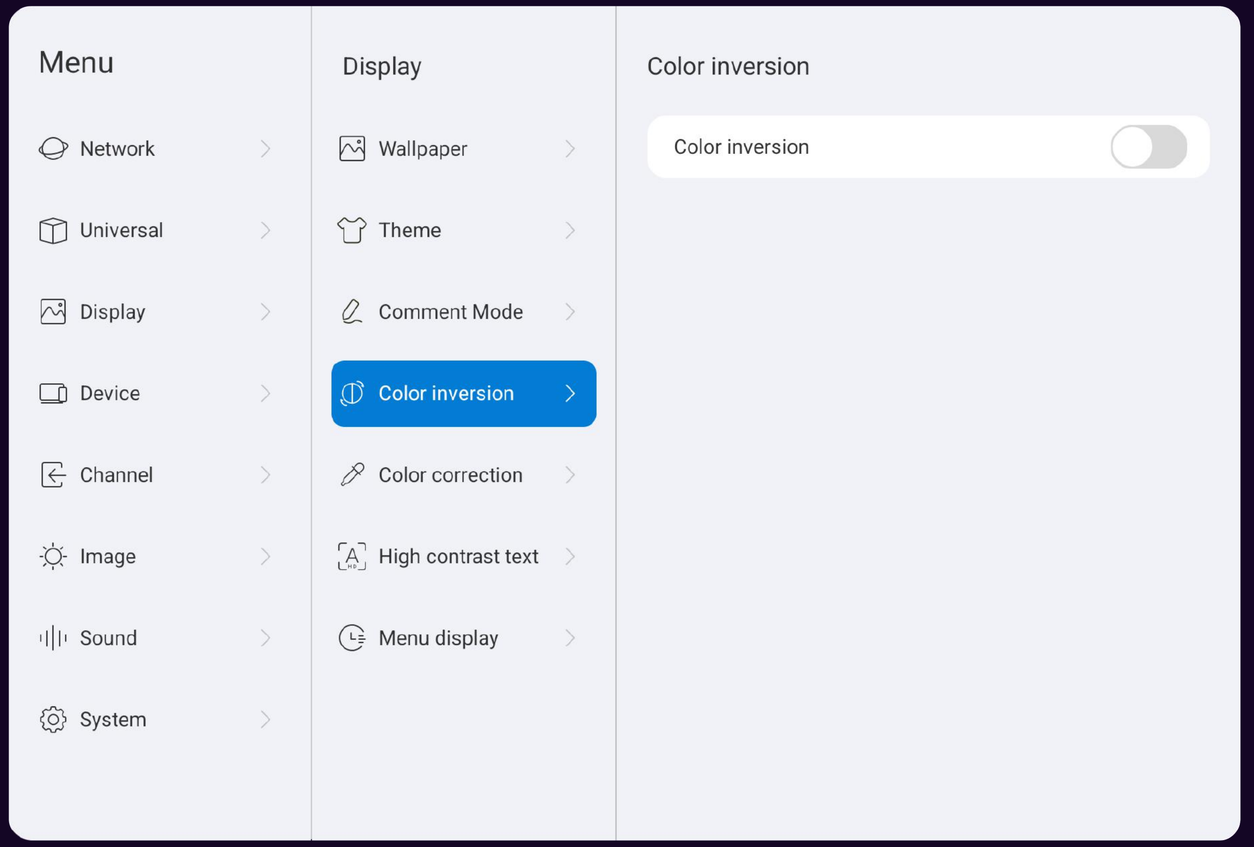

Toggle the function switch to enable screen color inversion

07-3-5 MENU


Color correction settings

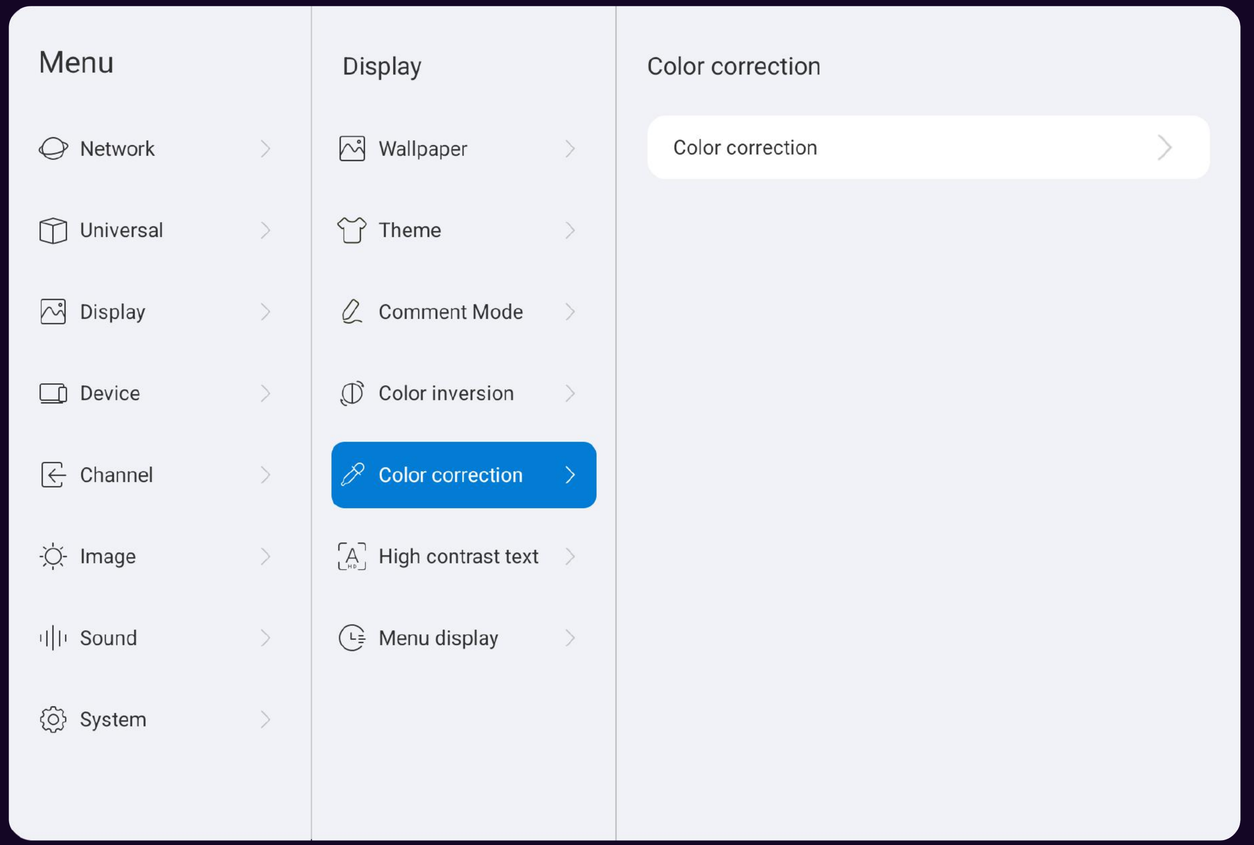

Adjust and align the display colors of the image

07-3-6 MENU


High contrast text settings

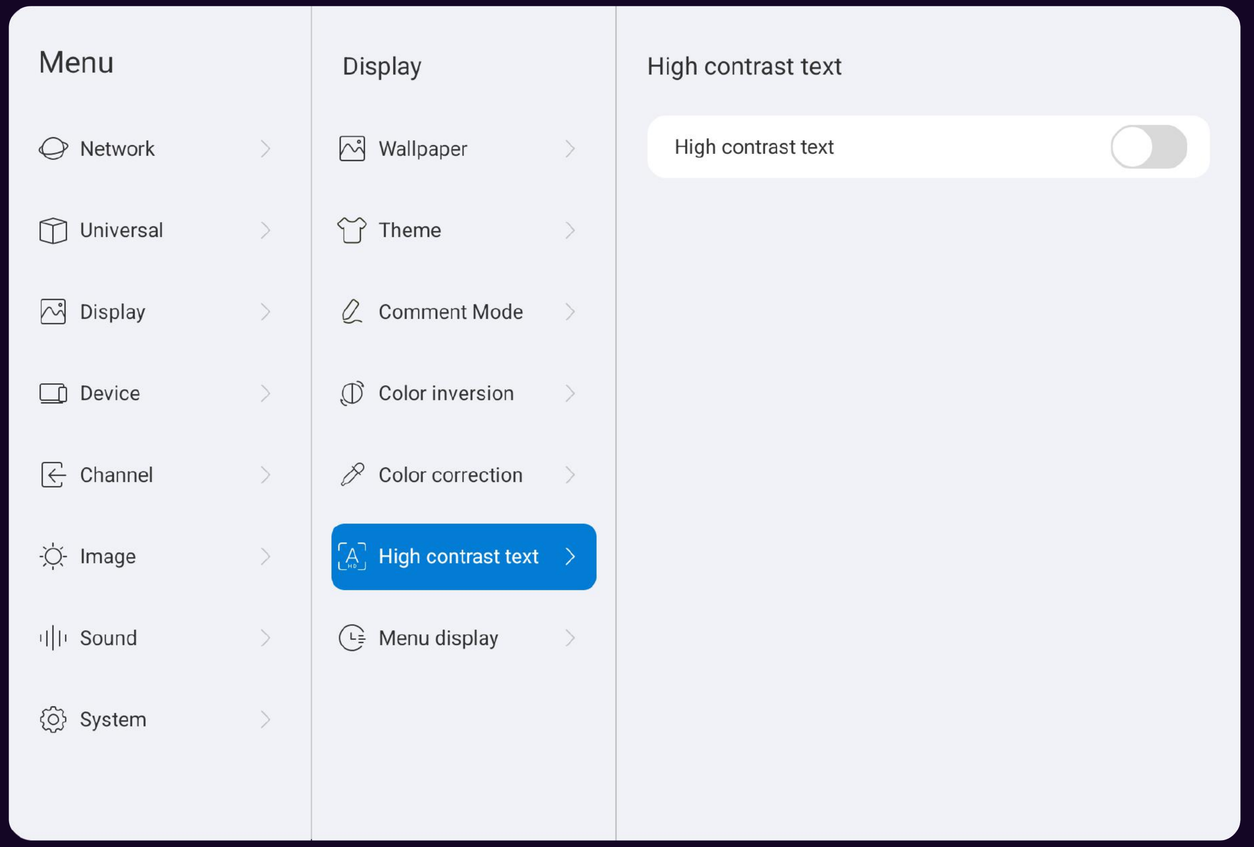

Toggle the switch to enable high contrast text display

07-3-7 MENU

Menu Display Settings

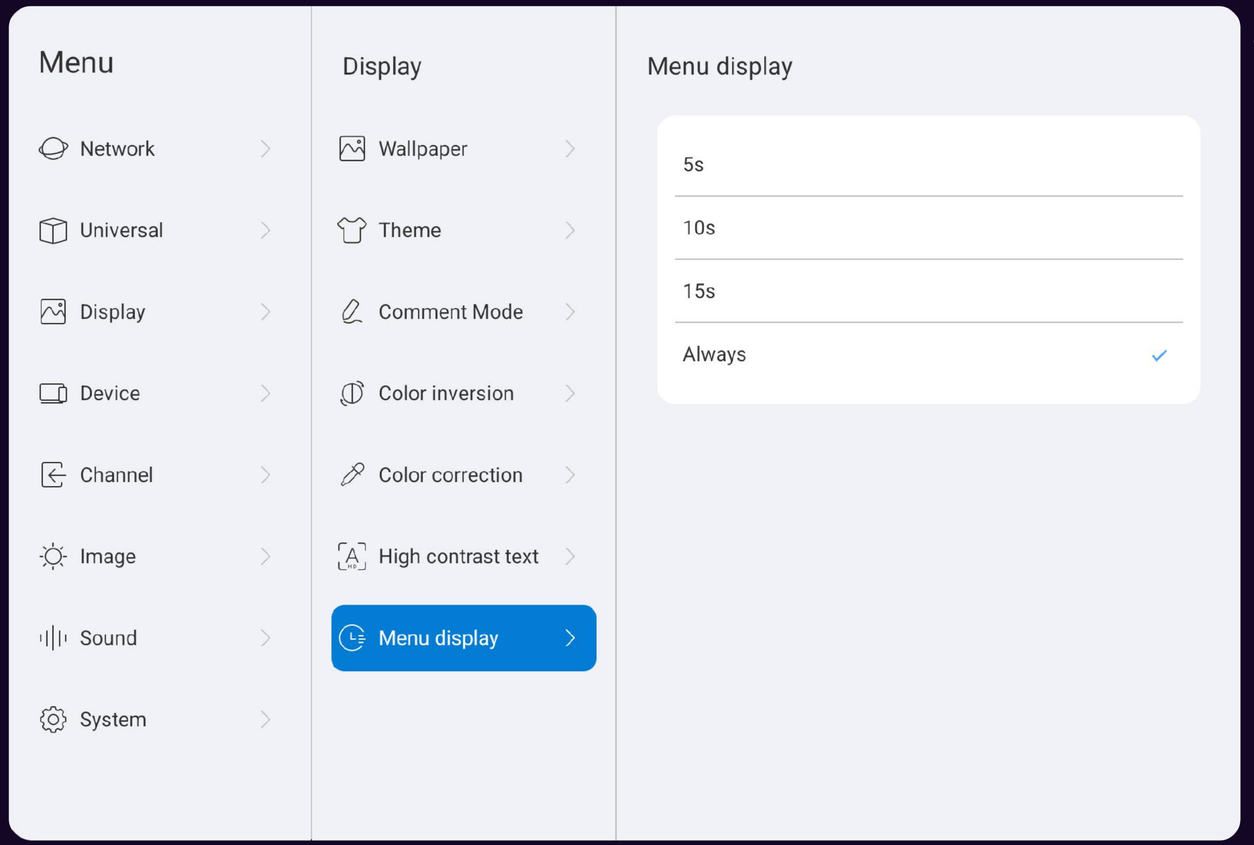


Switch menu display time

07-4-1 MENU

Bluetooth Settings


Bluetooth and camera settings

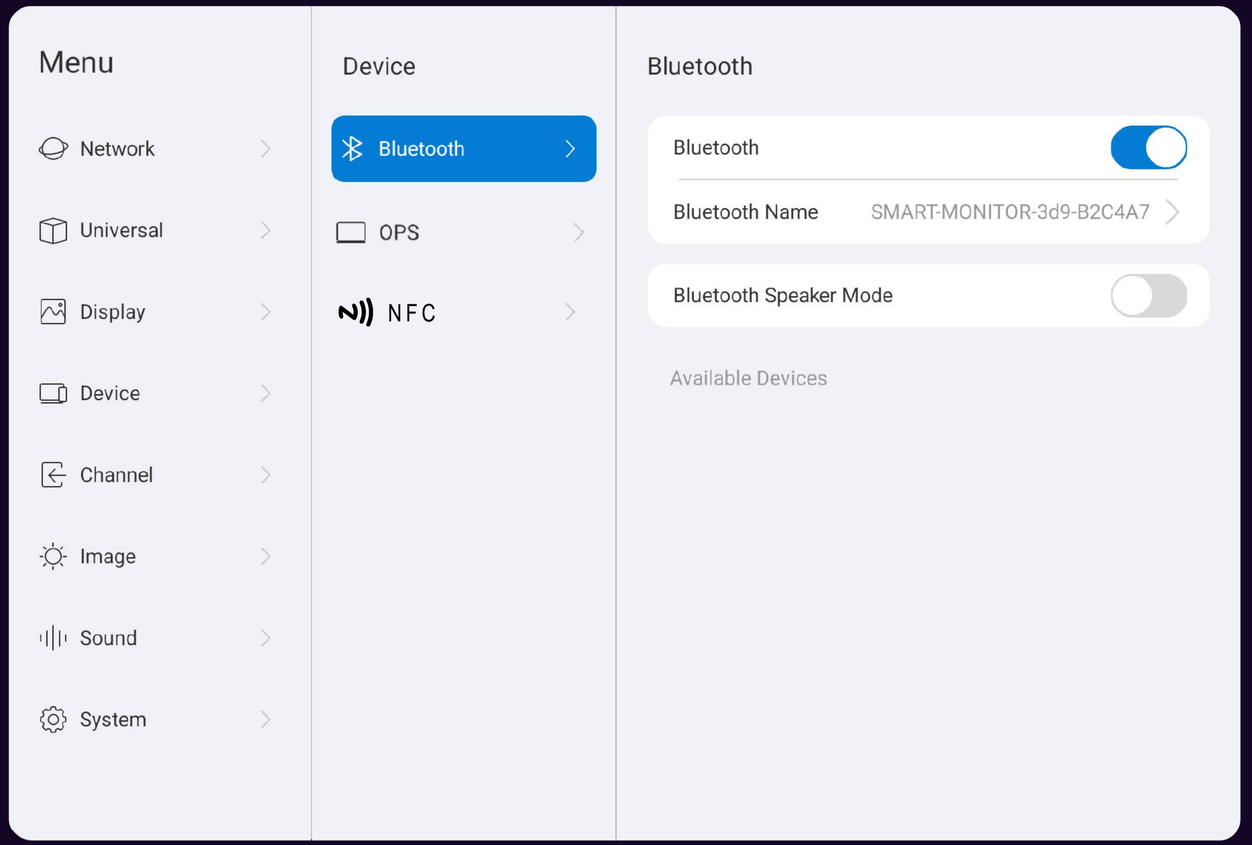

Bluetooth pairing connection and speaker mode and name settings

07-4-2 MENU


OPS Settings

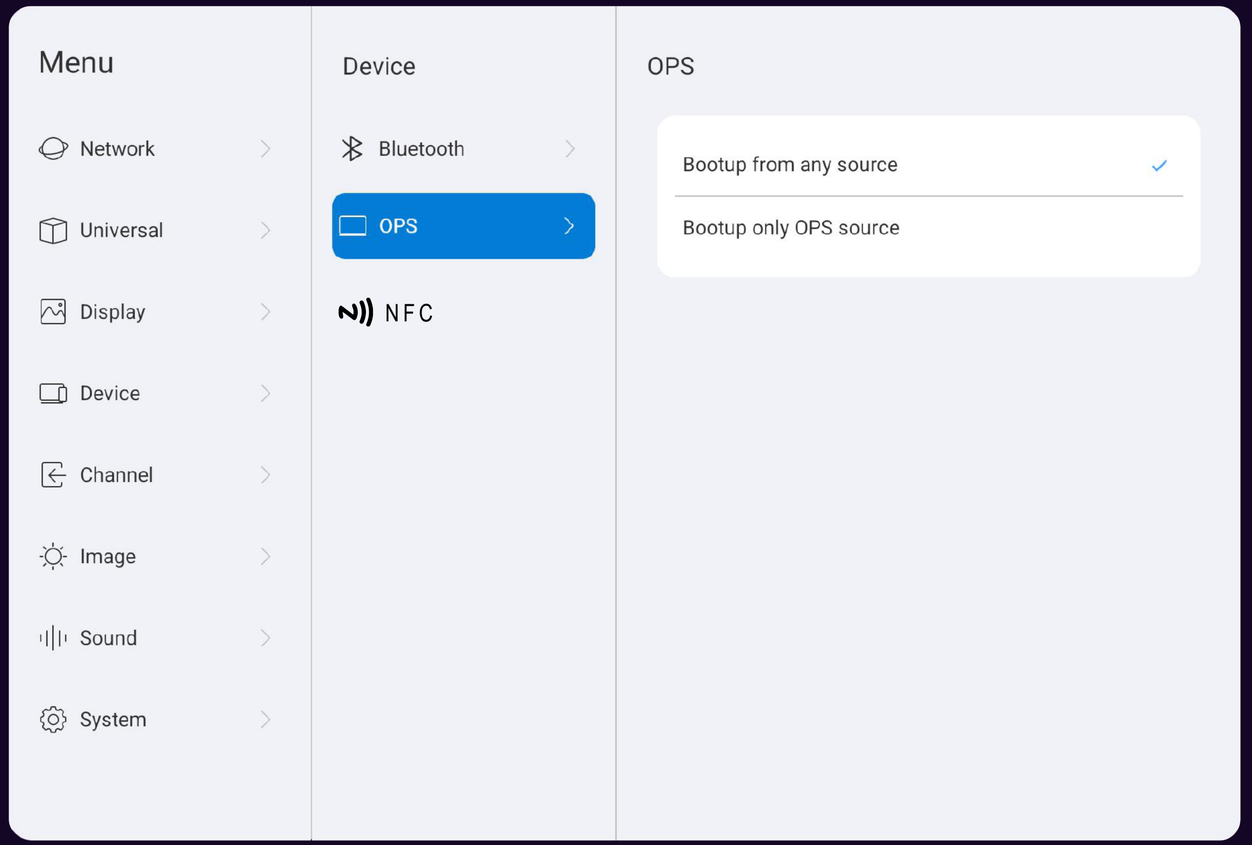

OPS startup setting follows the device

07-4-3 MENU

NFC Settings

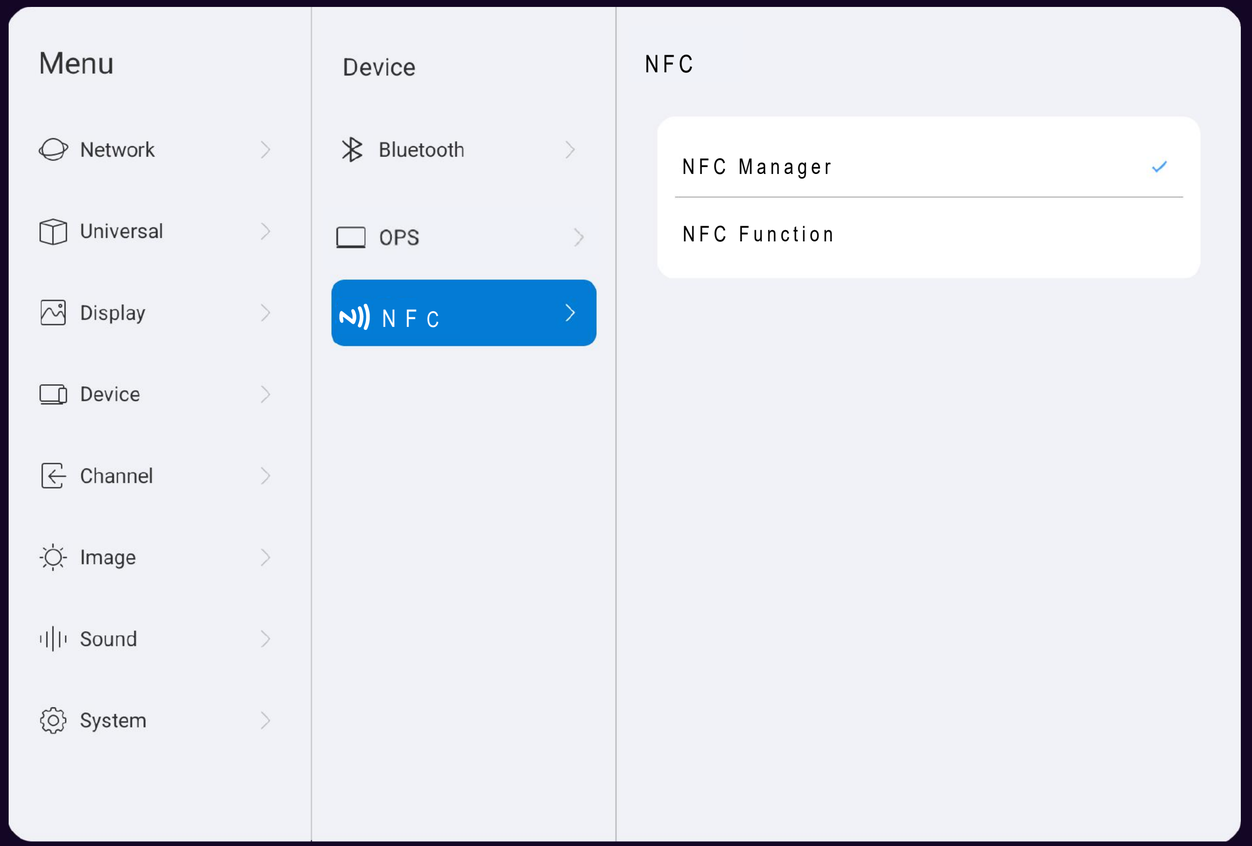


Add a new NFC card by bringing it close to the NFC reader

Select the function you want for the added NFC cards:

- "None": the added NFC cards have no function asociated
- "Power On/Off": turn On/Off the interactive by reading an added NFC card
- "User Login Unlock": change user by reading an added NFC card

07-5-1 MENU

Boot Channel Settings

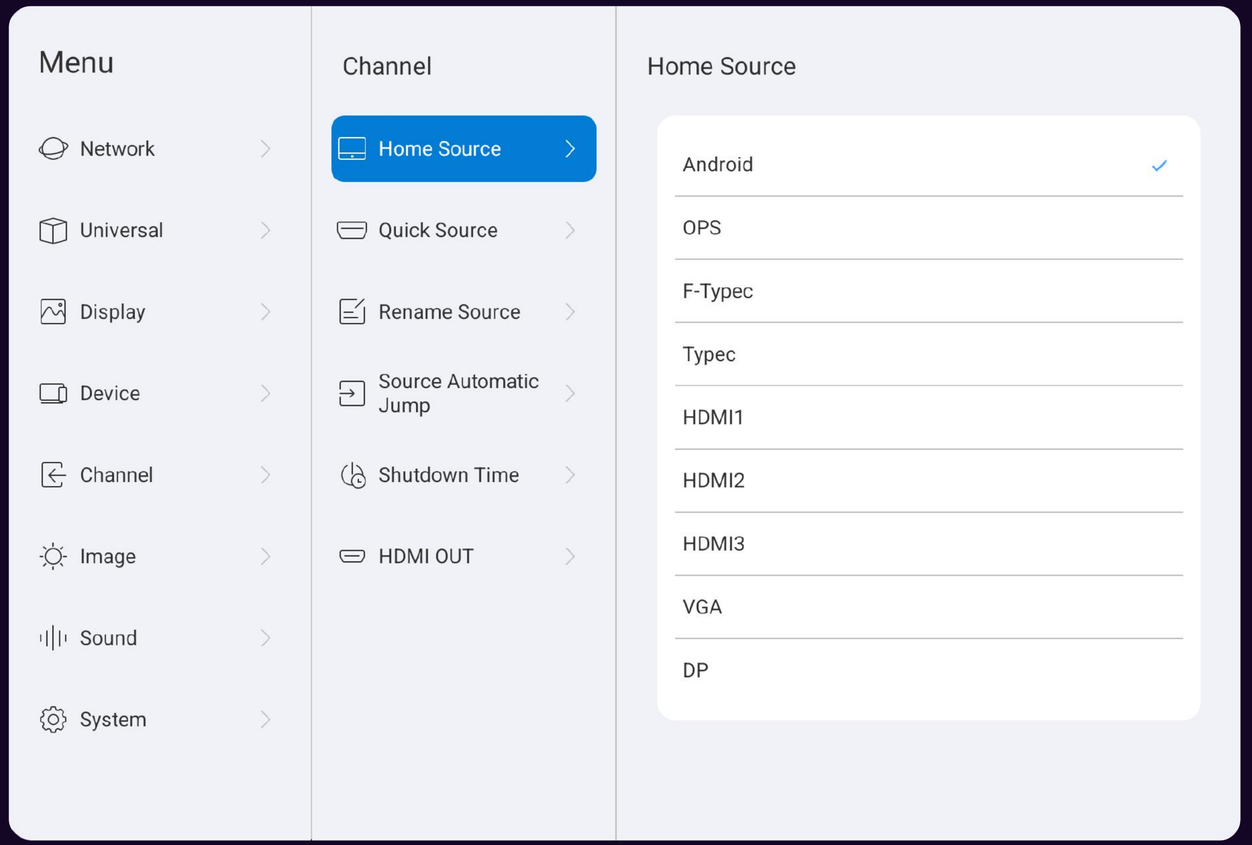


Related channel configurations

Set the channel that the device enters when powered on

07-5-2 MENU


Quick Channel Settings

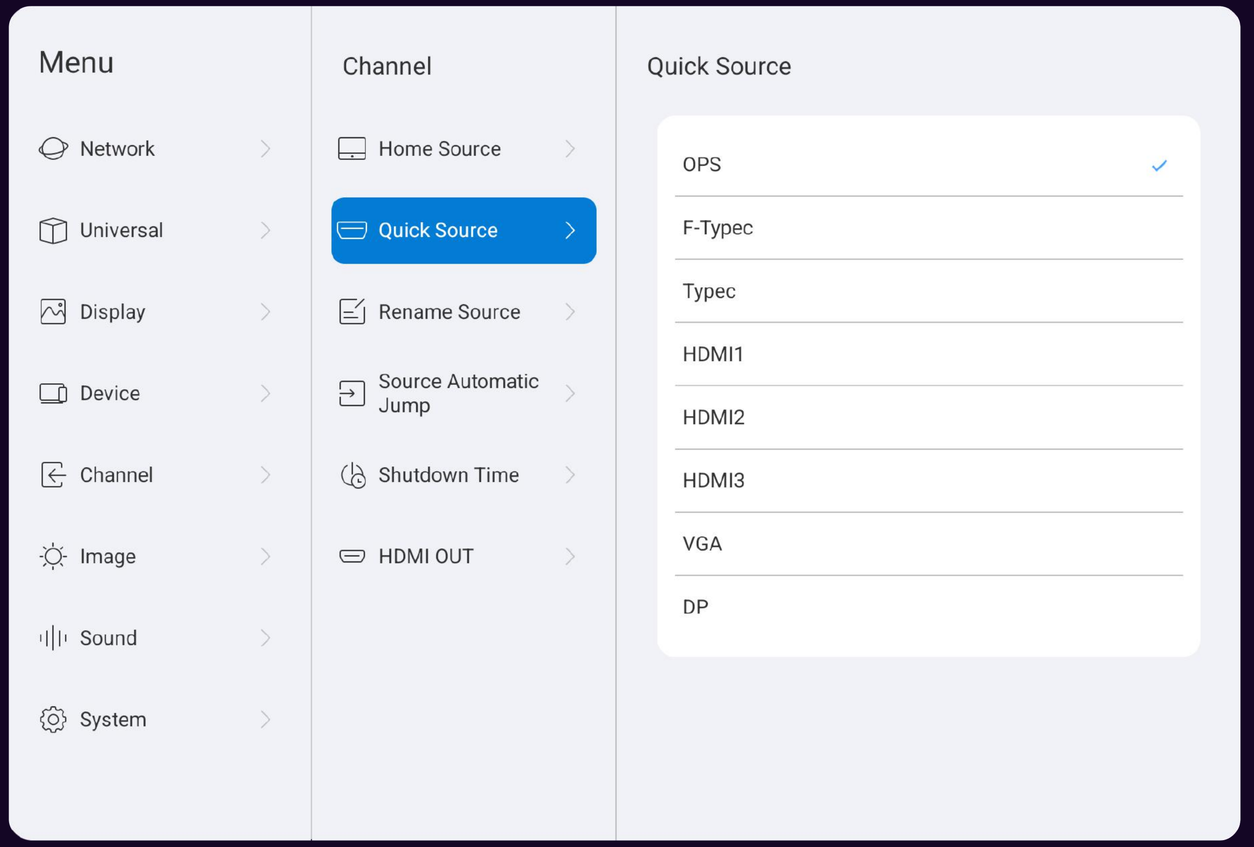

Set the channel that the sidebar channel button enters

07-5-3 MENU


Custom Channel Name Settings

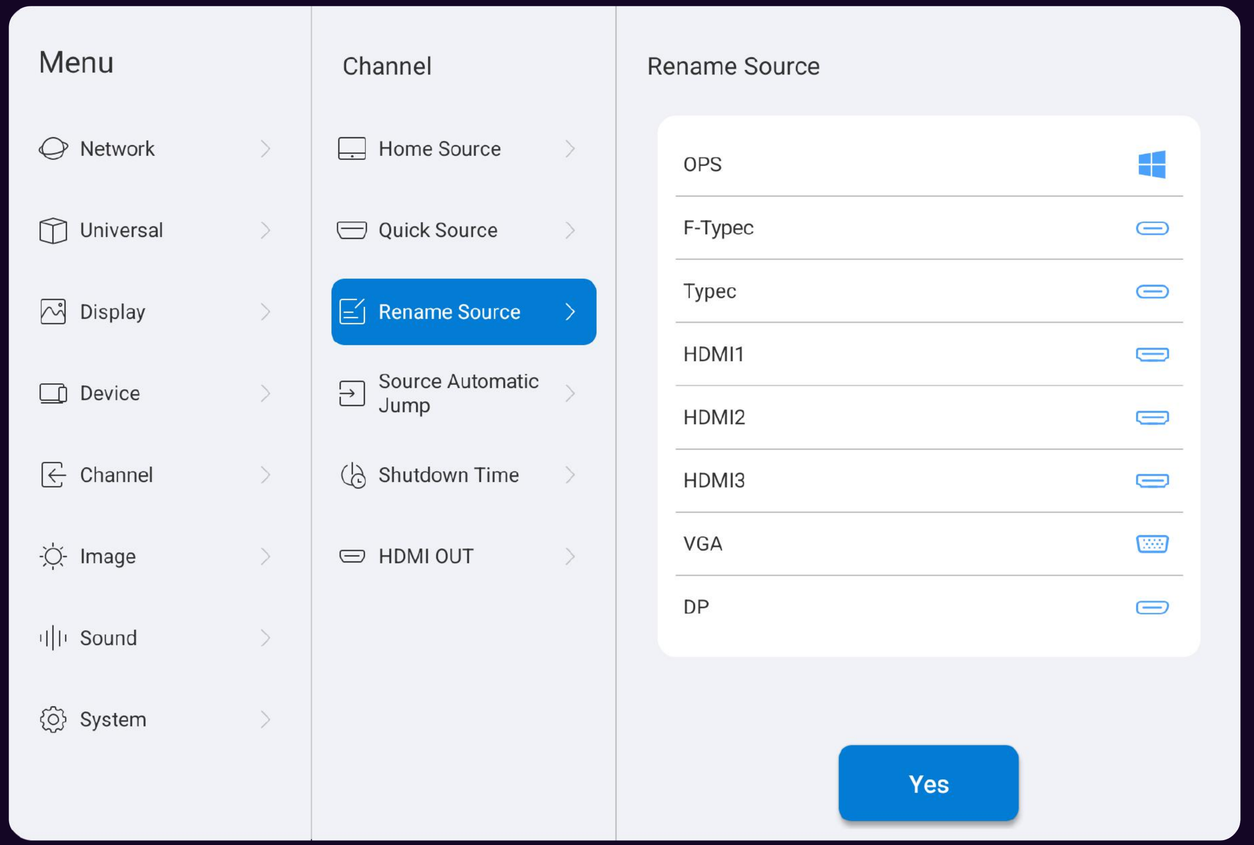

Customize the channel names

07-5-4 MENU


Signal Source Auto Switch Setting

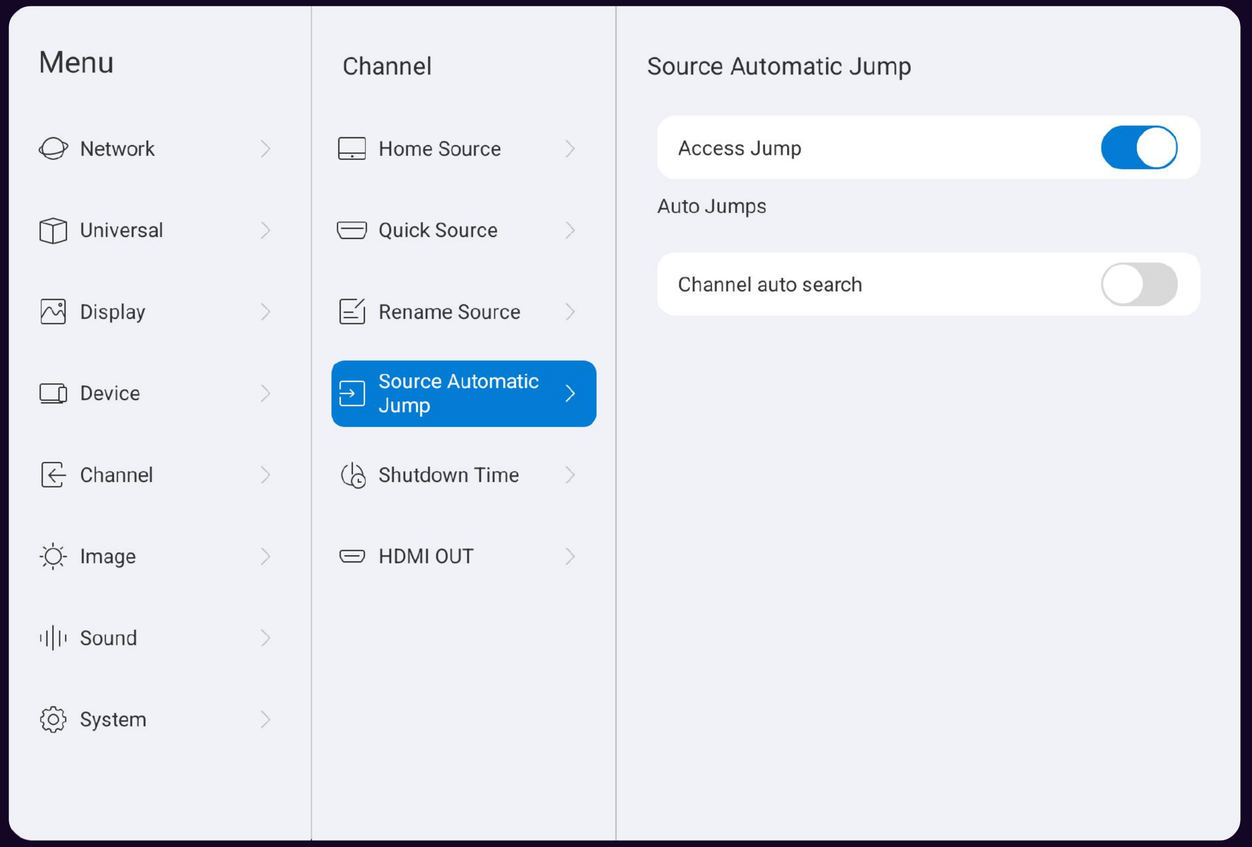

Set the switch for signal source automatic switching

07-5-5 MENU


No Signal Shutdown Time Settings

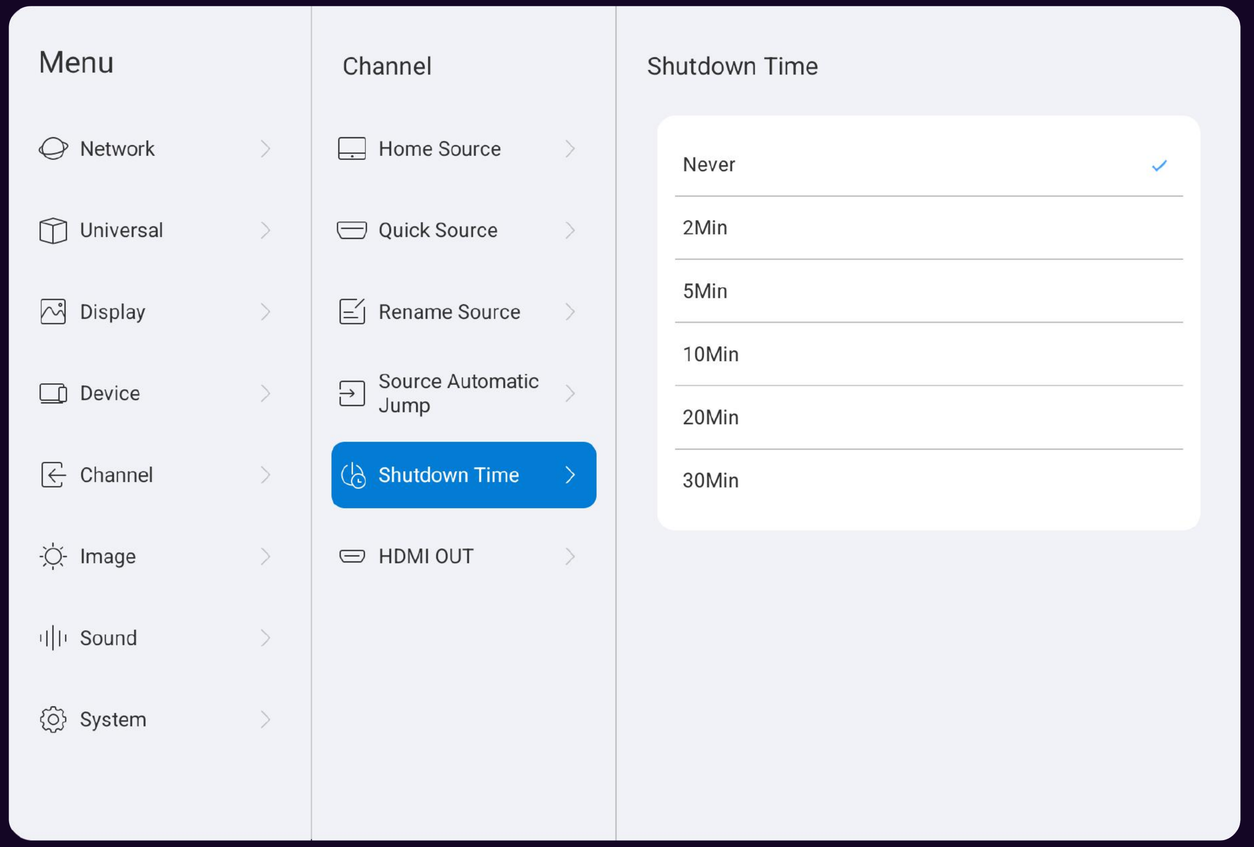

Set the automatic shutdown time of the channel when there is no signal

07-5-6 MENU

HDMI Output Settings

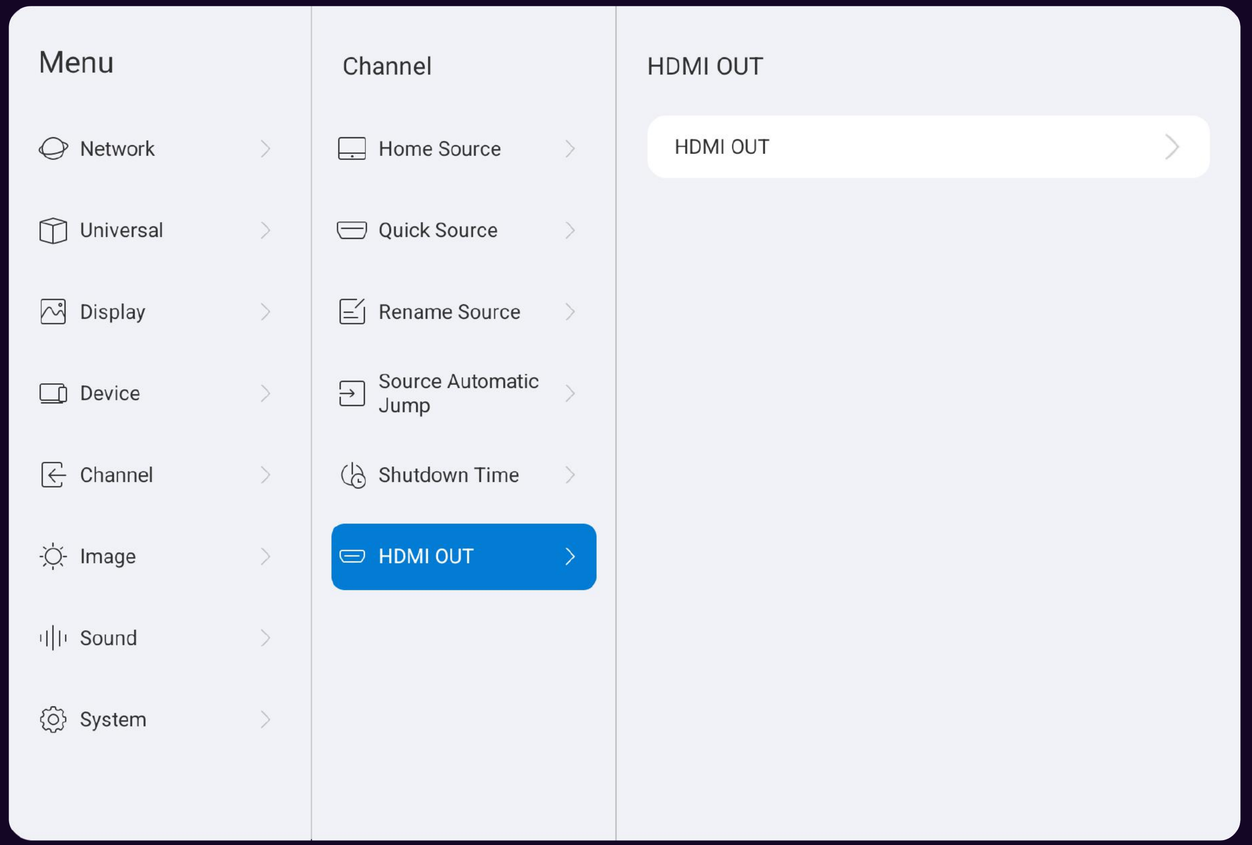

Set the HDMI OUT output resolution

07-6-1 MENU

Image Quality


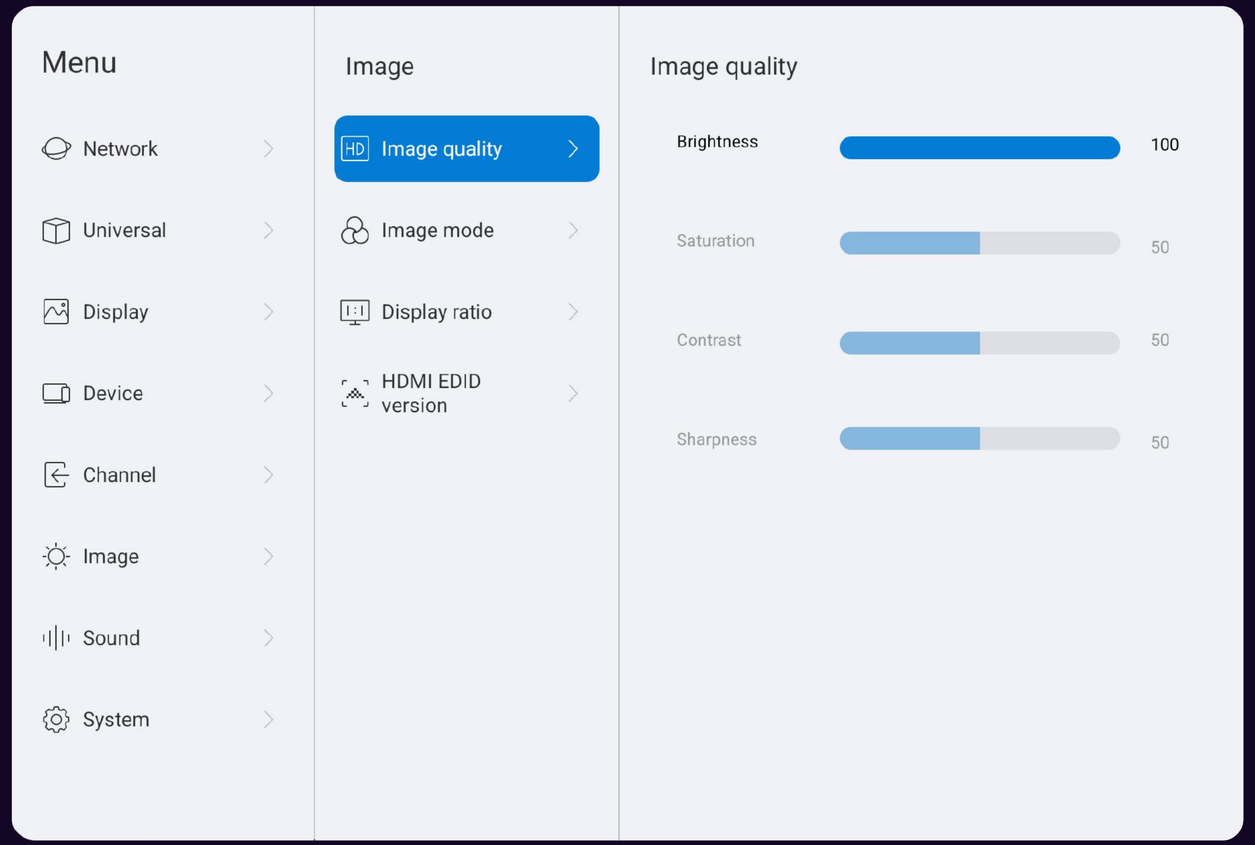


Image setting

Swipe to increase/decrease image quality

07-6-2 MENU


Image Mode

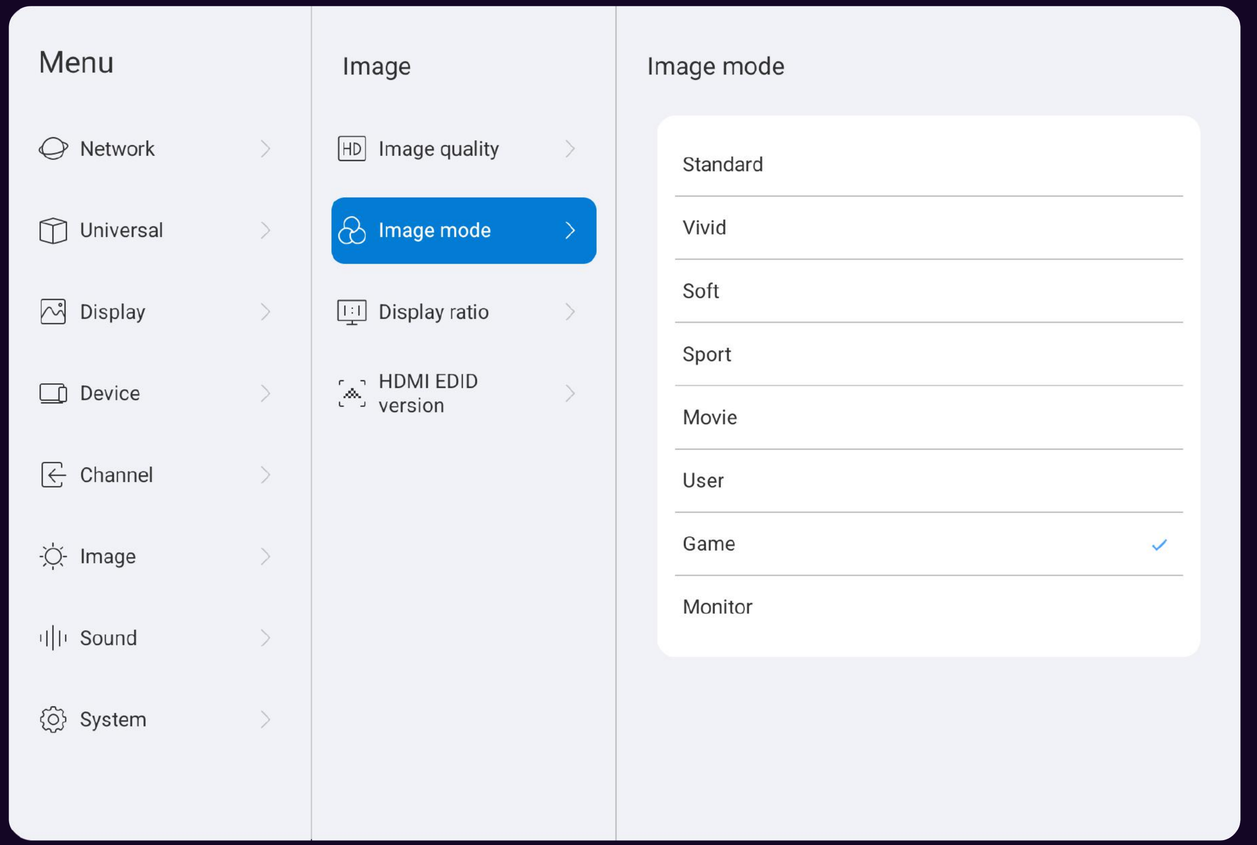

Switch the image mode

07-6-3 MENU


Display Ratio

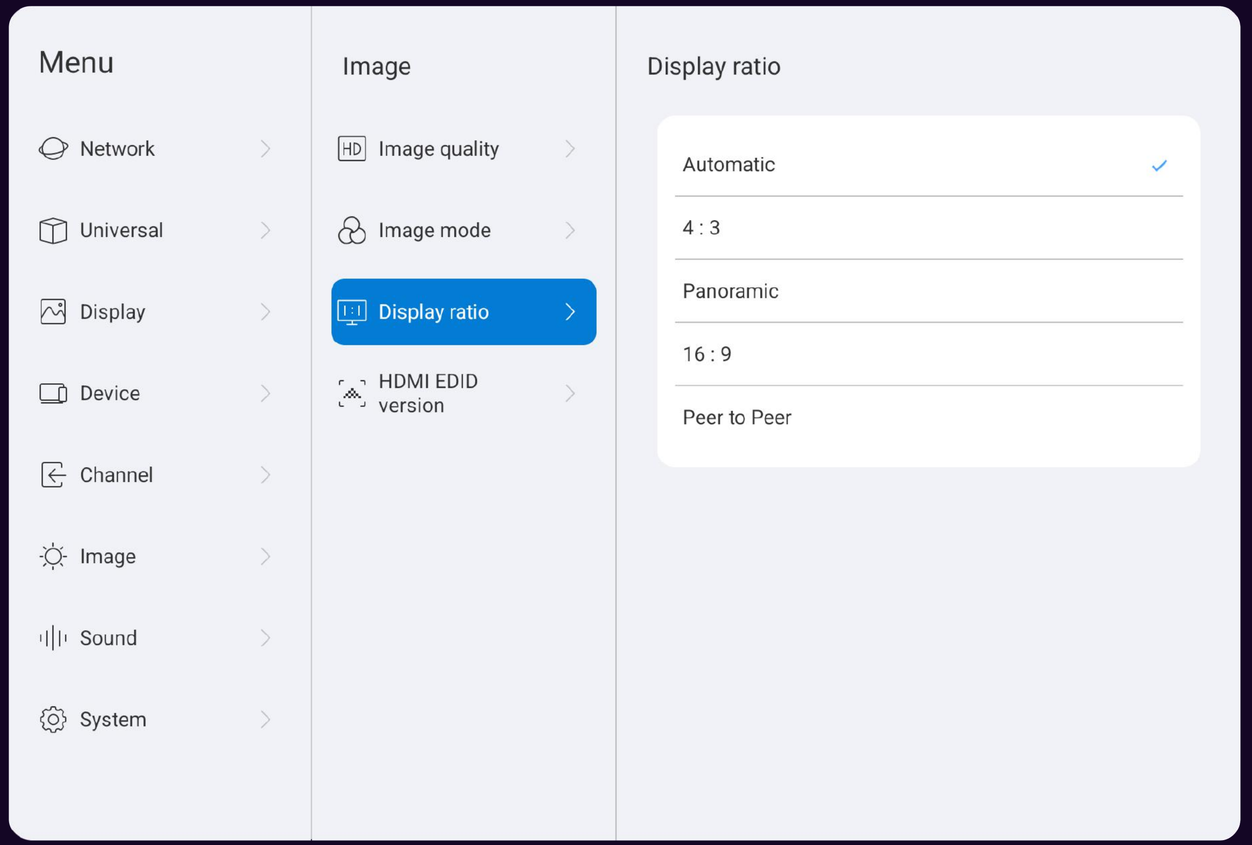

Switch screen ratio

07-6-4 MENU


HDMI EDID Version

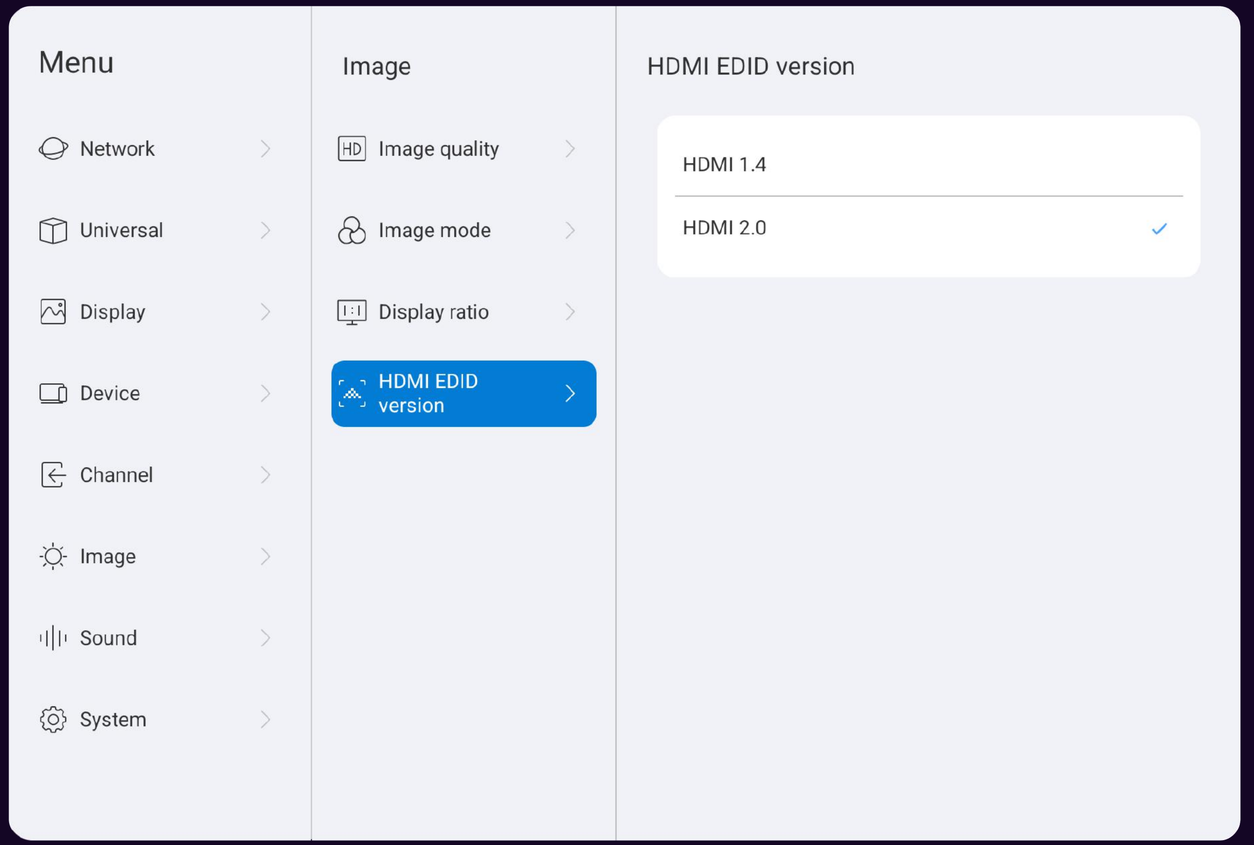

Switch the HDMI EDID version

07-7-1 MENU

Sound Settings

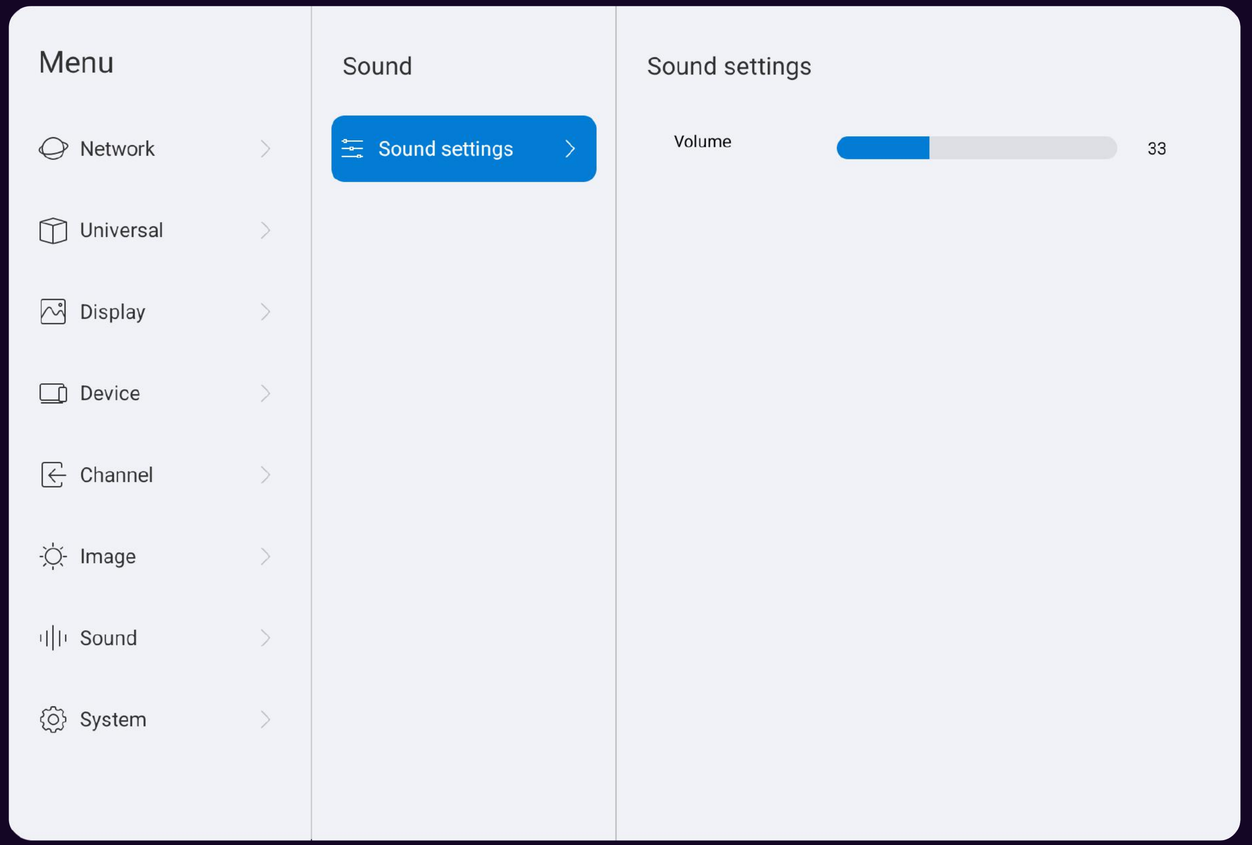


System Sound Settings

Swipe to increase/decrease volume

07-8-1 MENU

System Reset Settings

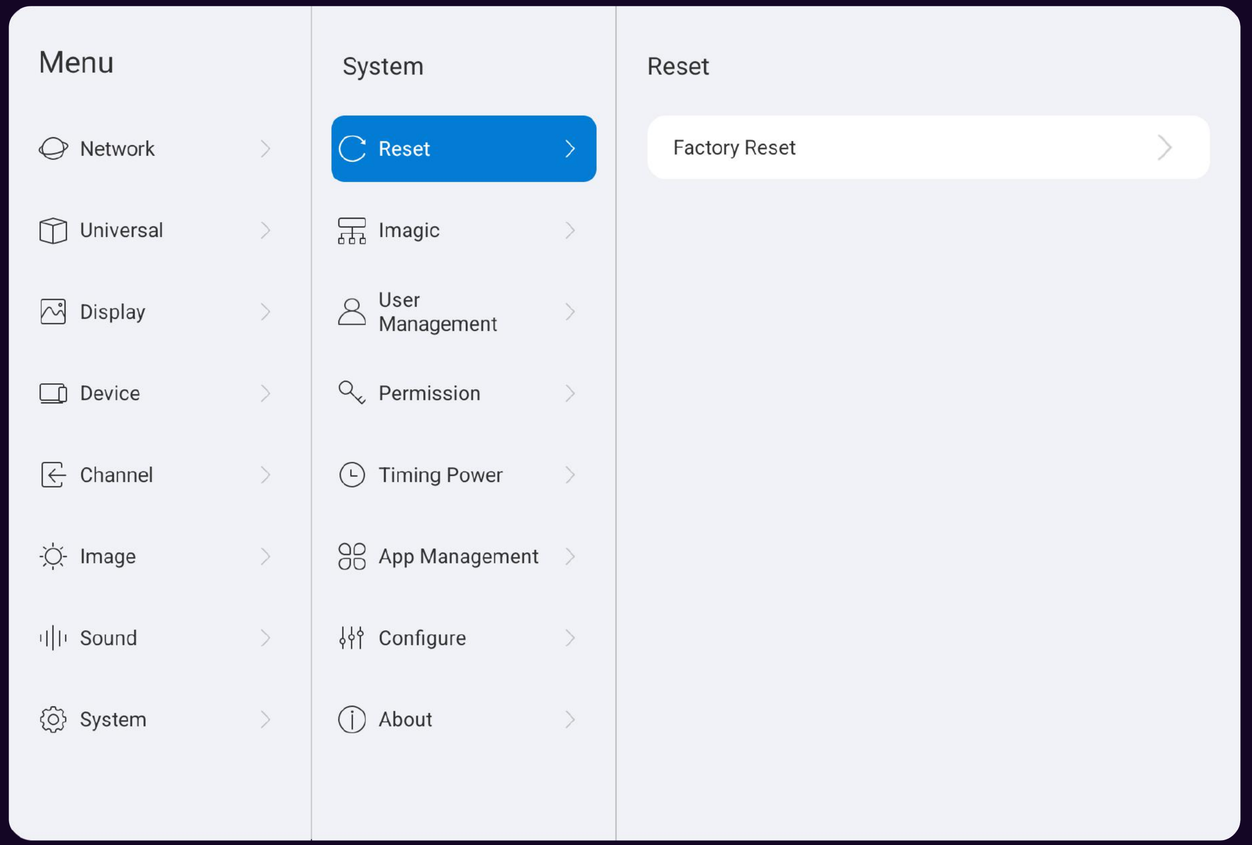


Restore the device to factory settings

View machine information, etc.

07-8-2 MENU


Central Control System Settings

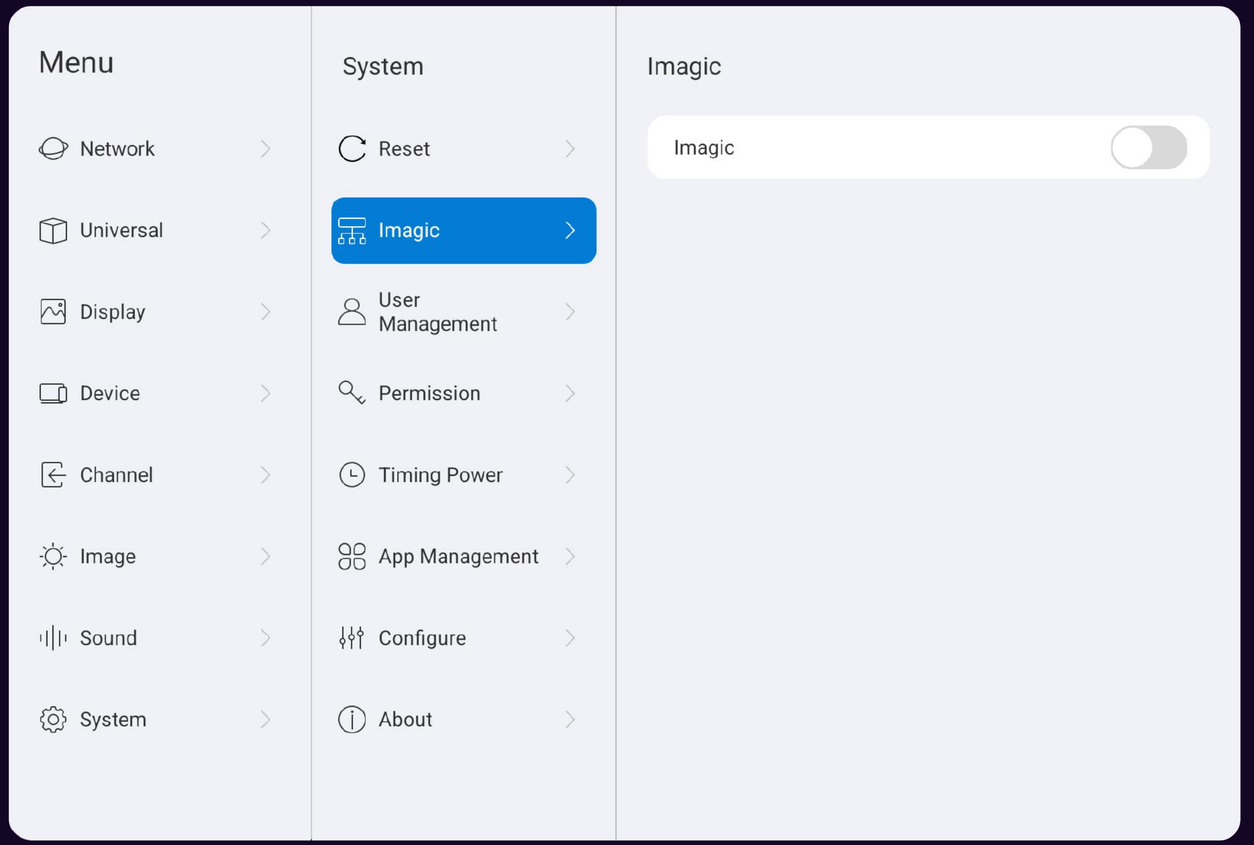

Enable central control service

07-8-3 MENU


User Management Settings

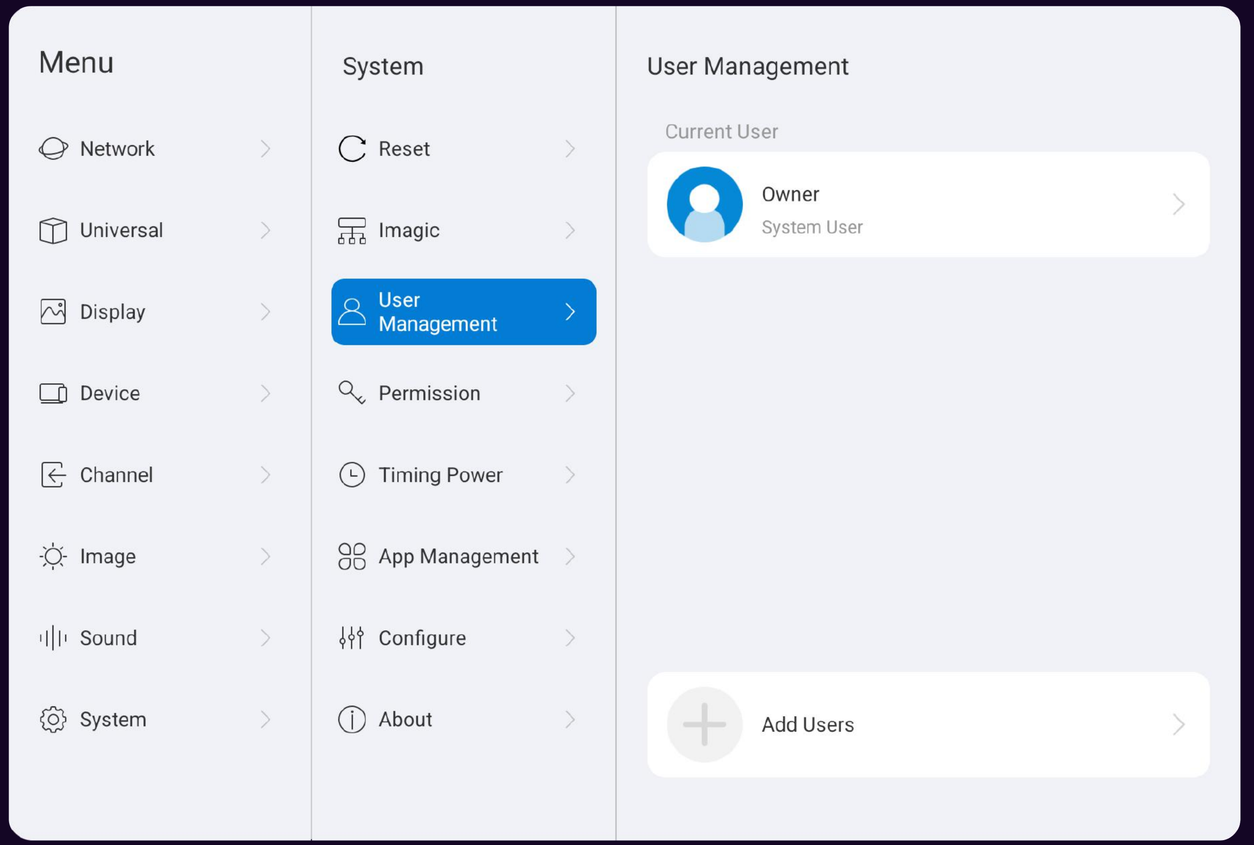

Add or delete subusers and user customization settings

07-8-4 MENU


Permission and Privacy Management Settings

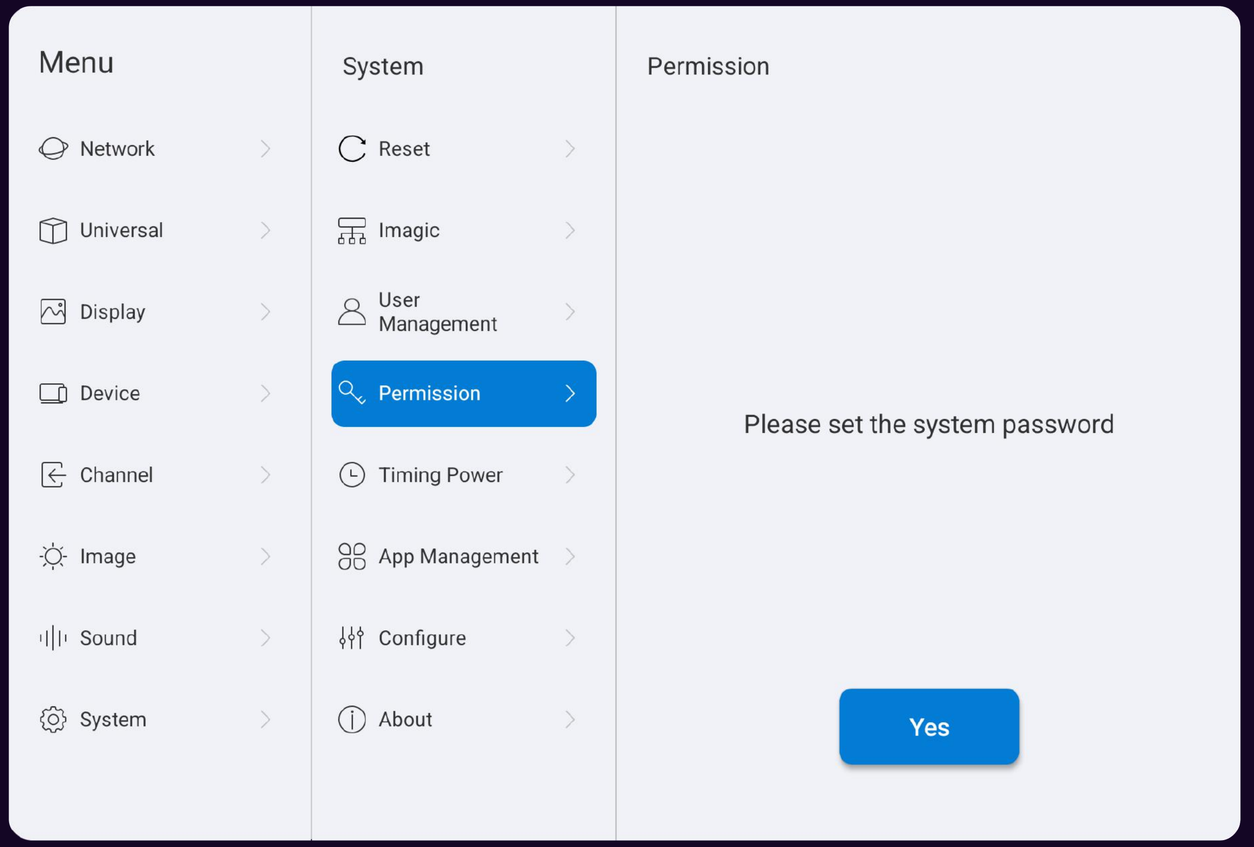

Manage system permissions and protect user privacy

07-8-5 MENU


Timed Power On/Off Settings

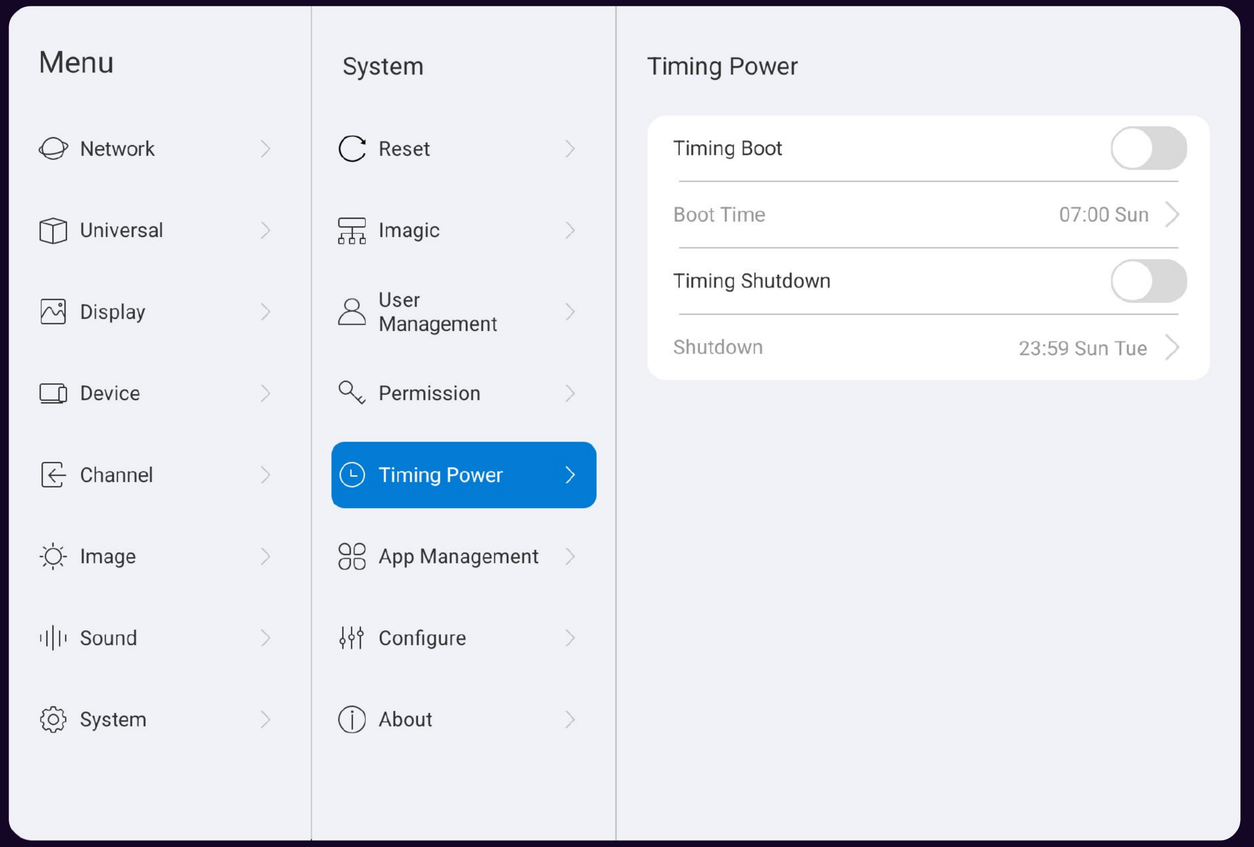

Set the device to power on or off automatically at a specified time

07-8-6 MENU


Application Management Settings

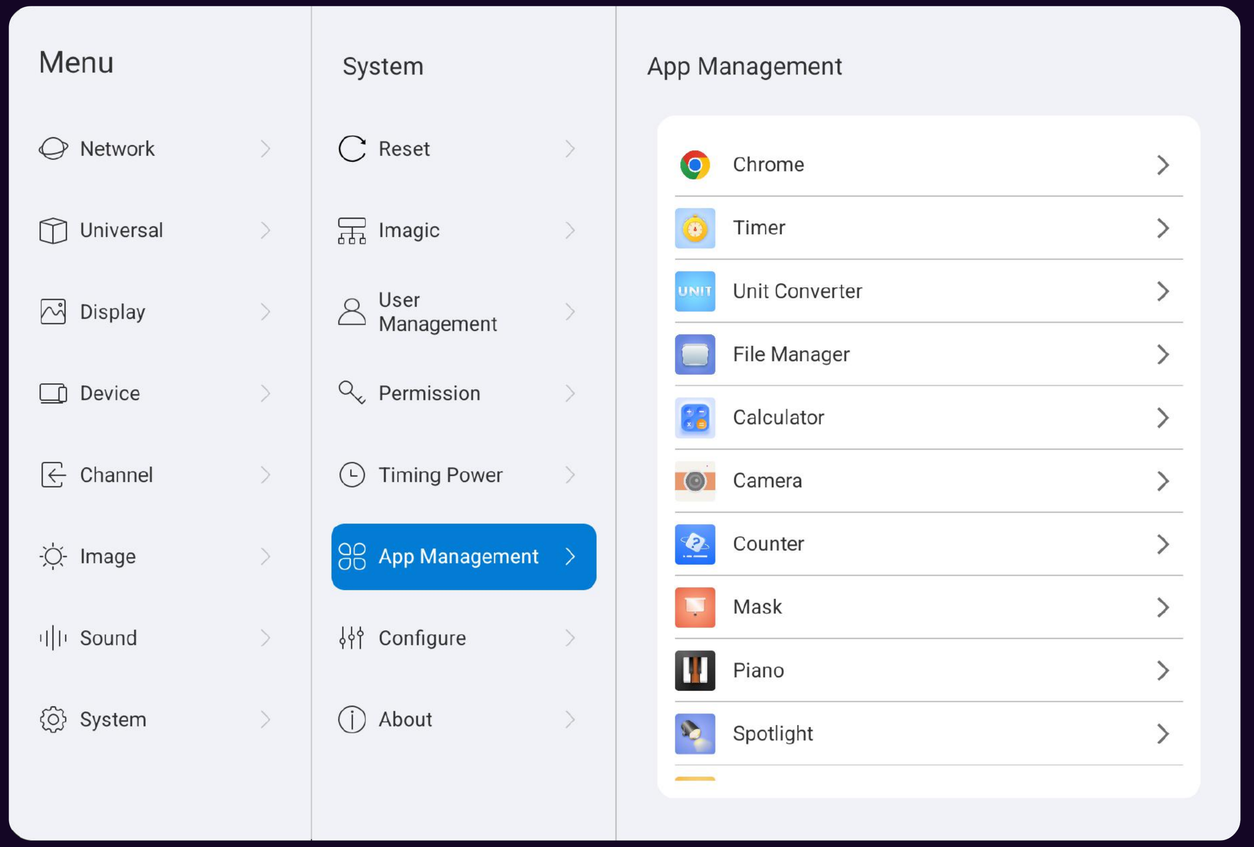

Manage and control applications

07-8-7 MENU


Configuration Settings

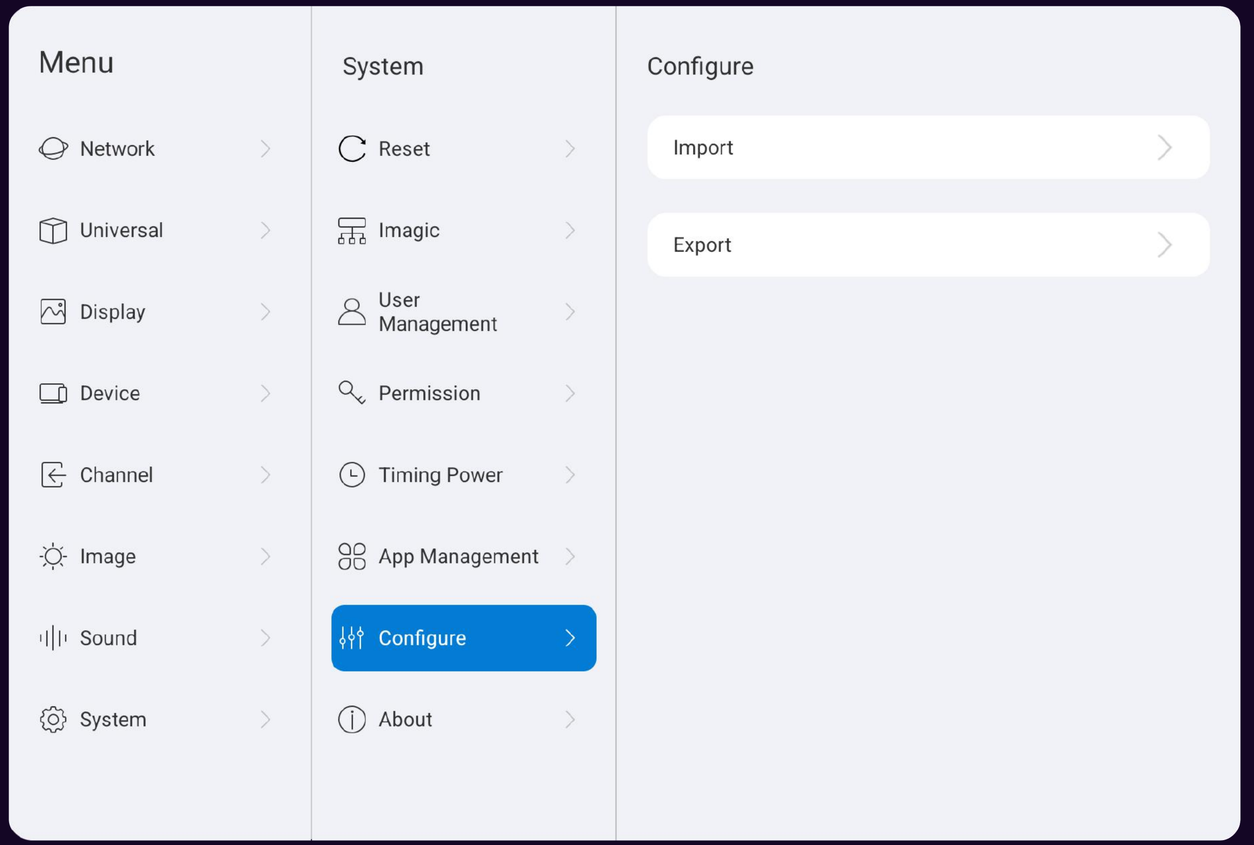

Import or export device configurations

07-8-8 MENU


About This Machine

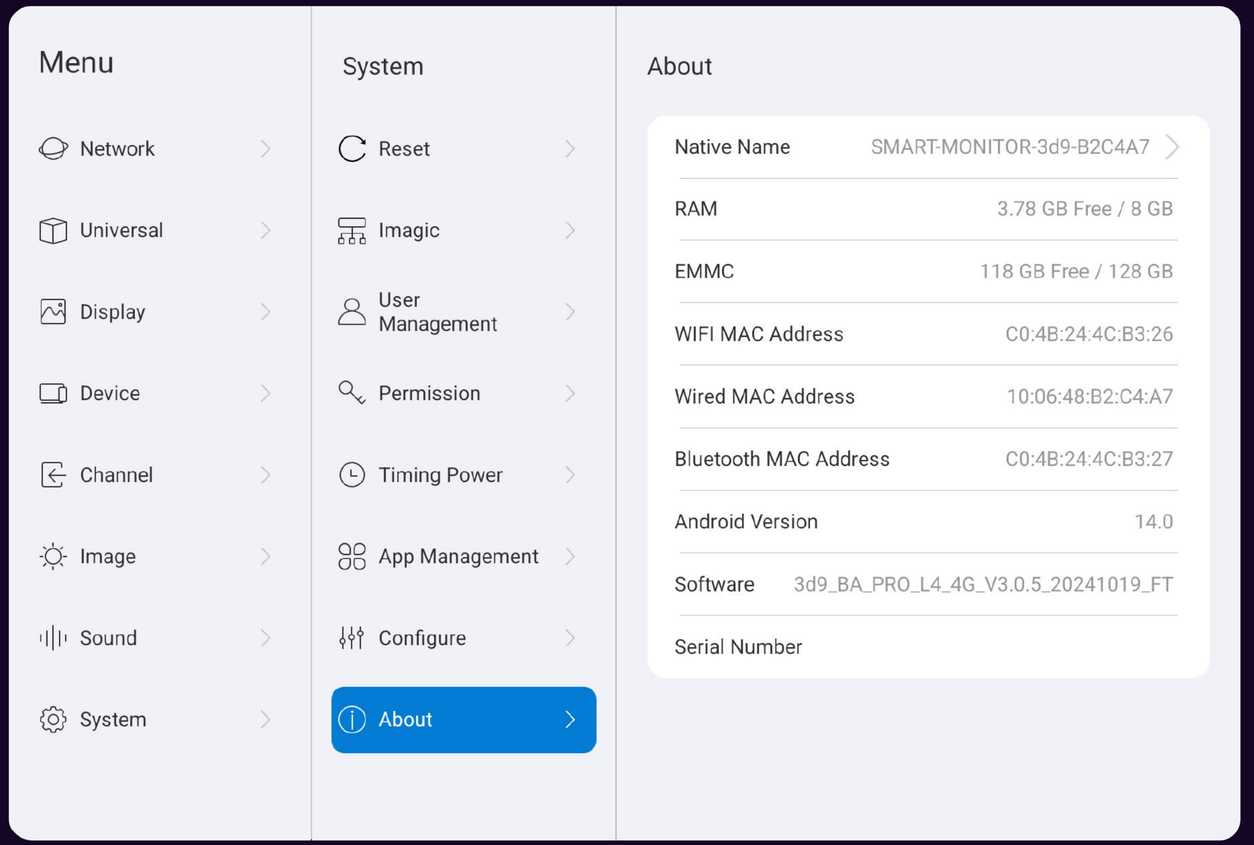

View basic device information

08-1 PORTS


Front Panel

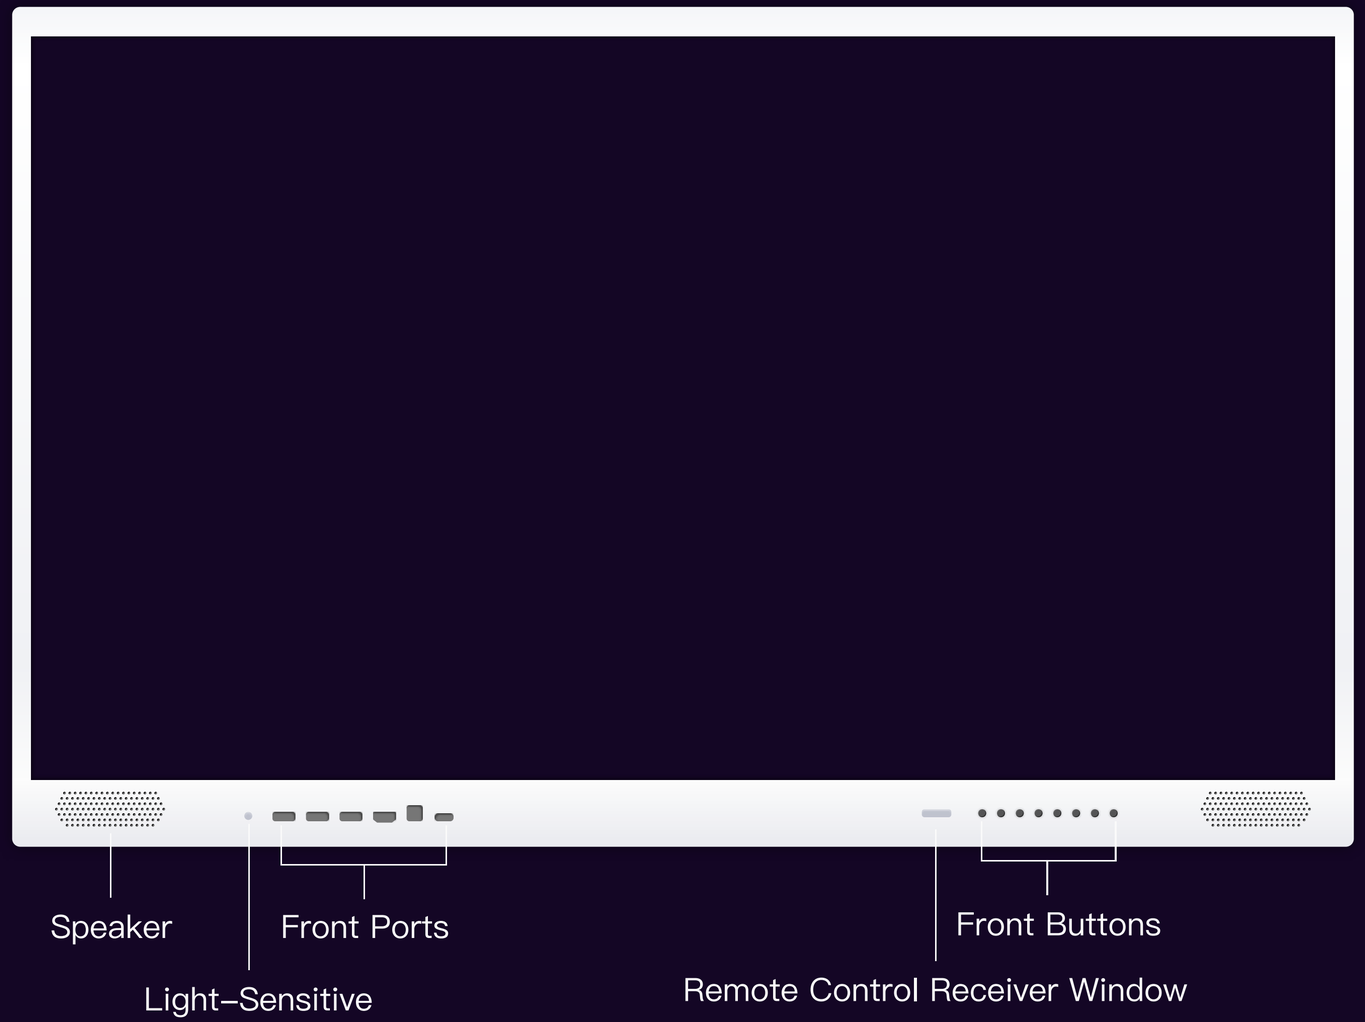

Front port numbers or button position might be different between different model of touch screens, this picture is for reference only.

08-2 PORTS

Front Ports

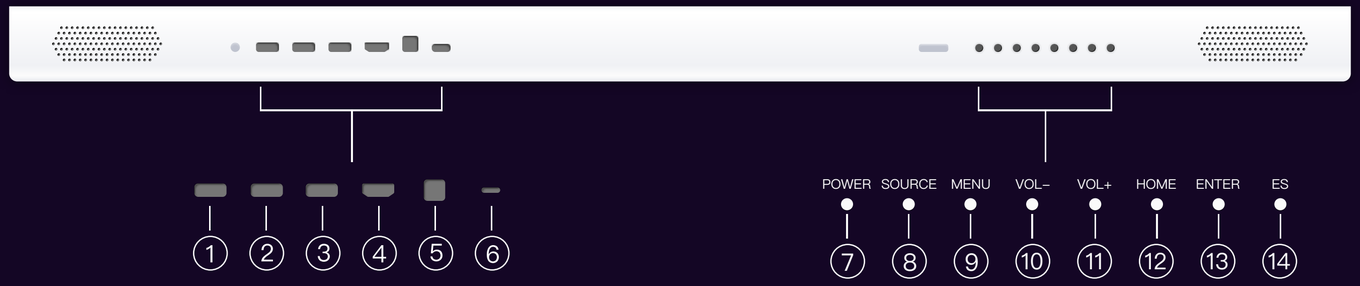


NO.	NAME	DESCRIPTION
1	USB	Android/PC 3.0USB
2	USB	Android/PC 3.0USB
3	USB	Android/PC 3.0USB
4	HDMI 3	Front HDMI3 high definition signal input
5	TOUCH USB	Front HDMI3 touch output
6	TYPE-C	Front Type-C channel (supports fast charging)

NO.	NAME	DESCRIPTION
7	POWER	Standby, power switch key
8	SOURCE	Switch between different signal channels
9	MENU	Display/exit OSD menu
10	VOL−	Reduce volume
11	VOL+	Increase volume
12	HOME	Return to the Android home page
13	ENTER	Enter
14	ES	Enter/exit energy-saving mode

Front port numbers or button position might be different between different model of touch screens, this picture is for reference only.

08-3 PORTS

Bottom Ports

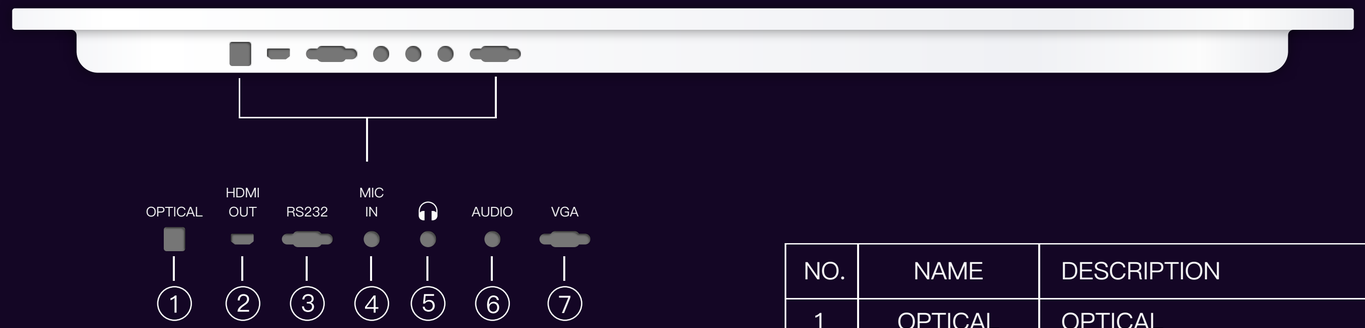


NO.	NAME	DESCRIPTION
1	OPTICAL	OPTICAL
2	HDMI OUT	4K/2K high definition signal output
3	RS232	RS232
4	MIC IN	Microphone
5	🎧	Headphone/audio output
6	AUDIO	VGA audio input
7	VGA	VGA signal input

Front port numbers or button position might be different between different model of touch screens, this picture is for reference only.

08-4 PORTS

Side Ports

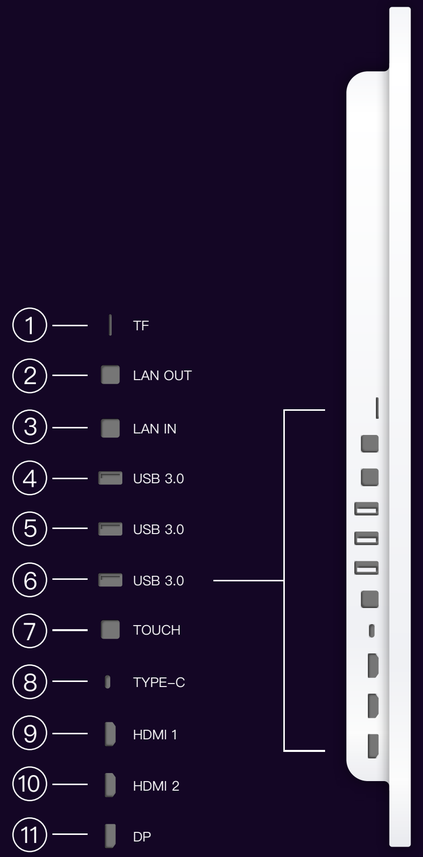


NO.	NAME	DESCRIPTION
1	TF	TF card slot, up to 64GB supported
2	LAN OUT	Wired network output
3	LAN IN	Wired network input
4	USB	USB 3.0 interface
5	USB	USB 3.0 interface
6	USB	USB 3.0 interface
7	TOUCH	Touch output contact piece
8	TYPE-C	Type-C in
9	HDMI 1	High definition 1 signal input
10	HDMI 2	High definition 2 signal input
11	DP	DP signal input

Front port numbers or button position might be different between different model of touch screens, this picture is for reference only.

09 REMOTE CONTROLLER

Remote Controller Buttons

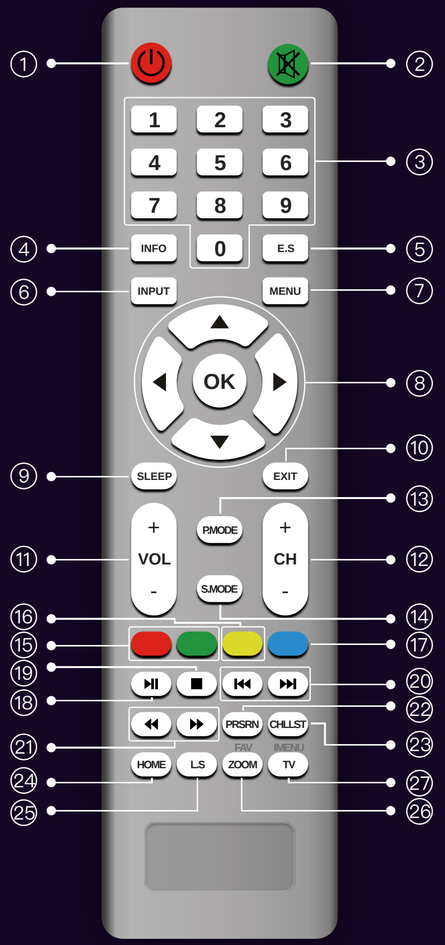

NO.	NAME	DESCRIPTION
1	POWER	Turn on/off the machine
2	MUTE	Open/close the sound
3	NUMERIC KEY	A/DTV channel selection or digital input
4	INFO	Display the current screen information
5	E.S	Turn on/off energy saving Normal sound output when energy saving
6	INPUT	Signal source channel switching
7	MENU	Enter/exit OSD menu
8	CONTROL KEY	Select up, down, left and right and confirm selection object
9	SLEEP	Set the shutdown time when the channel has no signal
10	EXIT	Exit function key
11	VOL+/−	Increase/decrease volume
12	CH+/−	Select the previous or next channel
13	P.Mode	Switch image mode

NO.	NAME	DESCRIPTION
14	S.Mode	Switch sound mode
15	N/A	
16	FREEZE	Turn on/off freezing the current screen
17	TOUCH BUTTON	Open/close touch and key functions at the same time
18	PLAY/PAUSE	Used for multimedia audio and video playback/pause
19	STOP	Used for multimedia audio and video stop playing
20	PREVIOUS/NEXT	Used for multimedia audio and video previous/next chapter
21	FORWARD/REWIND	Used for multimedia audio and video fast forward/rewind
22	PRSRN	Take a screenshot of the current screen
23	CHLLST	Used for A/DTV signal channel list display
24	HOME	One−click return to the Android homepage
25	L.S (LIGHT SENSOR)	Turn on/off light sensing
26	ZOOM	Adjust the screen display ratio (non−Android)
27	TV	One−key quick jump to ATV signal (device supports ATV channel)