
Safety Precautions

The following images are for reference only. Real-life situations may differ from what is shown in the images.

Cleaning

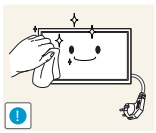


1 Wipe the product with a clean, soft and dry cloth.



- Do not use detergents that contain alcohol, solvent or surface-active agents.




- Do not spray water or detergent directly on the product.

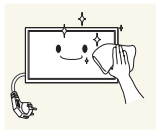

2 Wet a soft and dry cloth in water and wring thoroughly to clean the exterior of the product.

Electricity and Safety

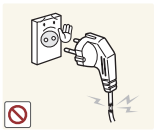

Do not use a damaged power cord or plug, or a loose power socket.

- An electric shock or fire may result.




Do not use multiple products with a single power socket.

- Overheated power sockets may cause a fire.




Do not touch the power plug with wet hands. Otherwise, an electric shock may result.

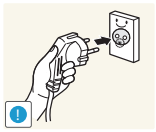

Connect the power plug to a grounded power socket (type 1 insulated devices only).

- An electric shock or injury may result.

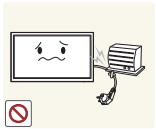

Do not bend or pull the power cord with force. Be careful not to leave the power cord under a heavy object.

- Damage to the cord may result in a fire or electric shock.



Do not place the power cord or product near heat sources.


- A fire or electric shock may result.

Installation



DO NOT PLACE CANDLES, INSECT REPELLANTS OR CIGARETTES ON TOP OF THE PRODUCT. DO NOT INSTALL THE PRODUCT NEAR HEAT SOURCES.

- A fire may result.

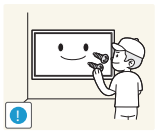

Have a technician install the wall-mount hanger.

- Installation by an unqualified person can result in an injury.
- Only use approved cabinets.



Do not install the product in poorly ventilated spaces such as a bookcase or closet.

- An increased internal temperature may cause a fire.




Do not install the product on an unstable or vibrating surface (insecure shelf, sloped surface, etc.)

- The product may fall and become damaged and/or cause an injury.
- Using the product in an area with excess vibration may damage the product or cause a fire.




Edible oil, such as soybean oil, can damage or deform the product. Do not install the product in a kitchen or near a kitchen counter.

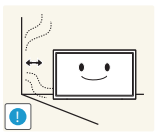


Install the product at least 10cm away from the wall to allow ventilation.

- An increased internal temperature may cause a fire.

Operation

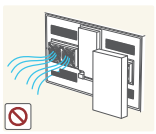


- Do not block the vent on the product. The product may not function properly due to potential overheating.

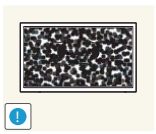

Leaving the screen fixed on a stationary image for an extended period of time may cause afterimage burn-in or defective pixels.

- Activate power-saving mode or a moving-picture screen saver if you will not be using the product for an extended period of time.

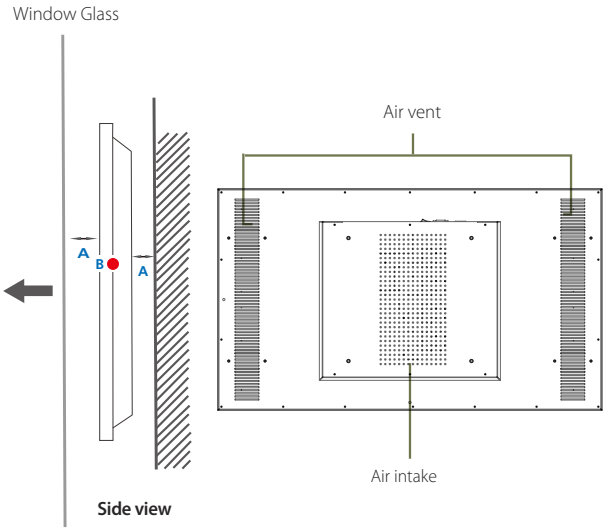

Ventilation

Installation on a Perpendicular Wall

A Minimum 100mm

B Ambient temperature: Between 0~40 ˚C

- When installing the product on a perpendicular wall, allow at least 100 mm of space between the product and wall surface for ventilation and ensure that the ambient A temperature is kept between 40 ˚C.